



- THERMISTOR ASSEMBLY INSTALLATION DRAWING

MODEL: CLC6101i 50 HE / CLC6101i 65 HE

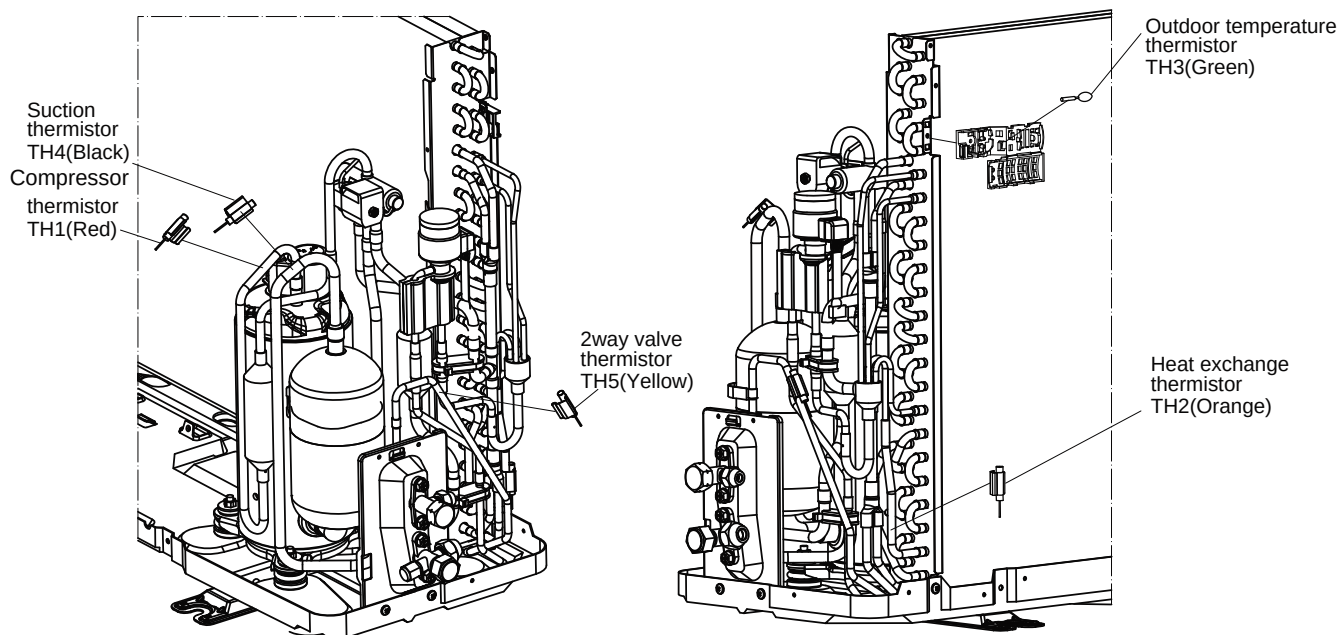

MODEL: CLC6001i 25 E / CLC6001i 35 E


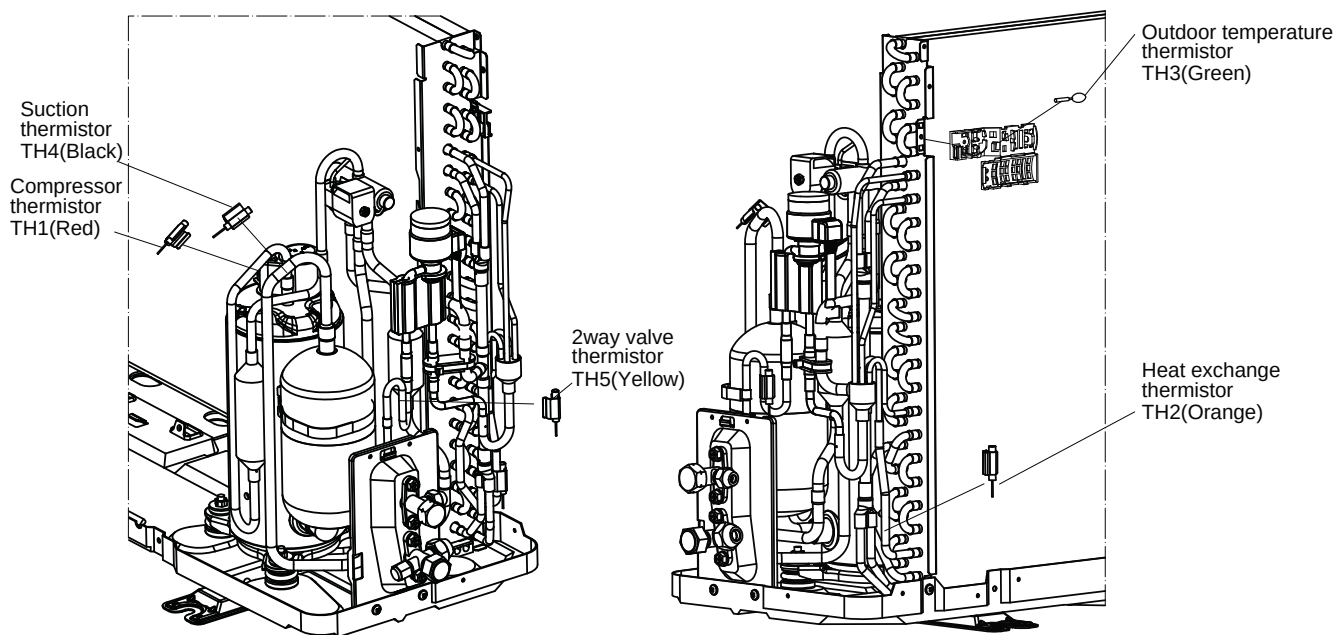


[3] OUTDOOR UNIT(CLC8101i 65 HE, CLC8001i 25/35 E)**1.Body's decomposition steps**


- 1) Disassemble the screw fixing side cover, then disassemble the side cover.




- 5) Disassemble the front cabinet ass'y.(5 screws in front side, 4 screws in right side.)

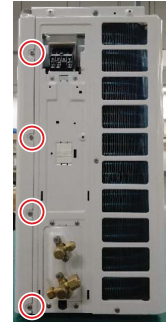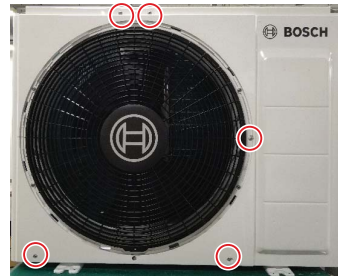



- 2) Disassemble fixing terminal cover and a screw of cord clamp, then remove them. At last remove cable holder.(4 screws)

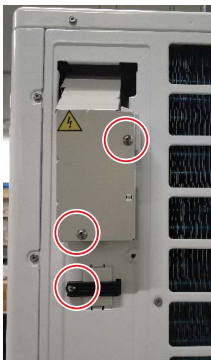


- 5) Open the front cabinet axis on the left
① Lift it up a little on the right ② Open it outward and lift up a little on the left, then open it.

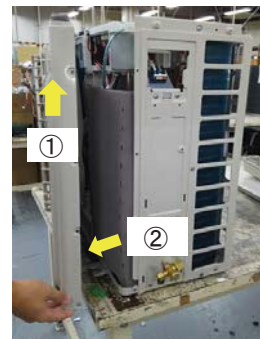

- 3) Disassemble the top cover after removing 4 screws of it.
(Left side of top cover) (Right side of top cover)

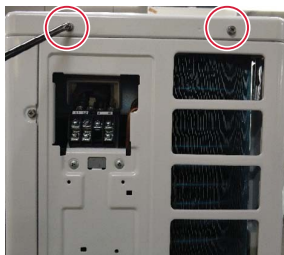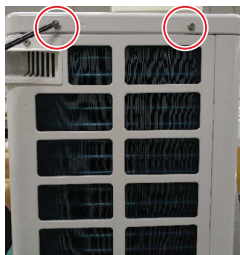


- 6) Disassemble side cover R.(8 screws)

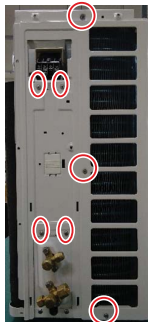


- 4) Disassemble the screw fixing ring, then take the ring out as below picture direction.





- 7) Disassemble side cover L.(6 screws)

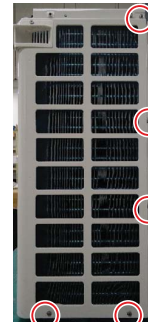


- 9) Disassemble the screw fixing control box ass'y.(1 screw)

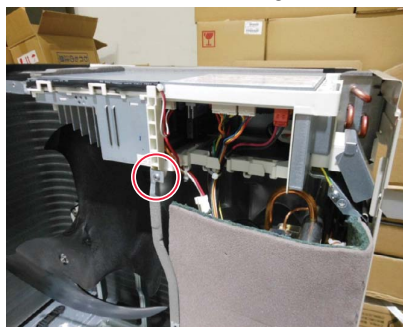

- 10) Pull down the terminals connecting the electric box substrate. Take out the thermistor lead wire from guide groove.

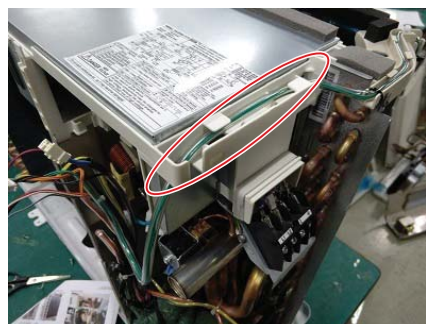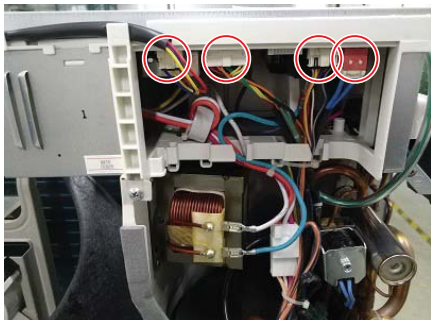

- 11) Cut the wire fixing band fixing the transfer connector of the compressor and control box ass'y, then disassemble the terminal of reactor and compressor, after all, disassemble control box ass'y.

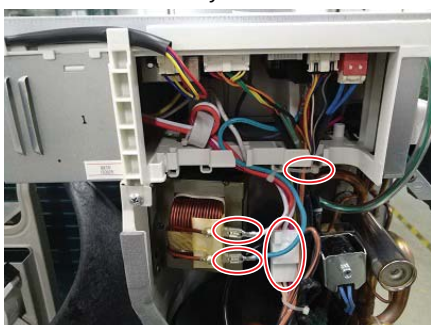

(Disassemble the control box ass'y)



- 12) Remove compressor cover.(1 pcs)




- 13) Disassemble Bulkhead ass'y.(2 screws)




- 14) Remove remain cover and compressor cover.(4 pcs)




(Method of remove compressor cover)

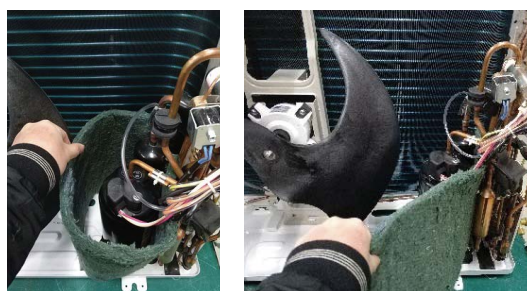


(Method of assemble cover)

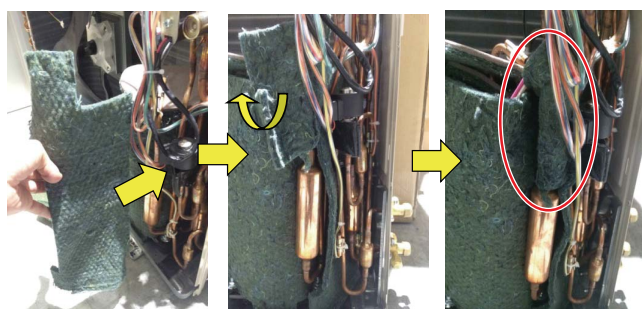

- 15) Disassemble compressor terminal cover.(1 nut)
Then disassemble the compressor connecting terminal.

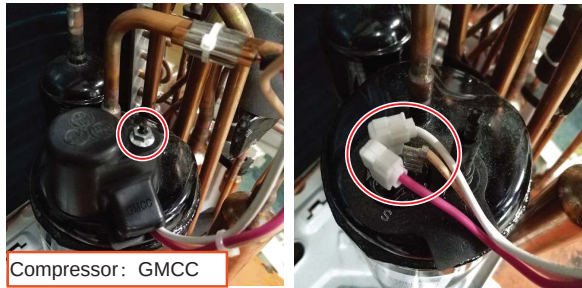

- 16) Disassemble thermistors(4 pieces) and thermistor clamps(1 piece) .

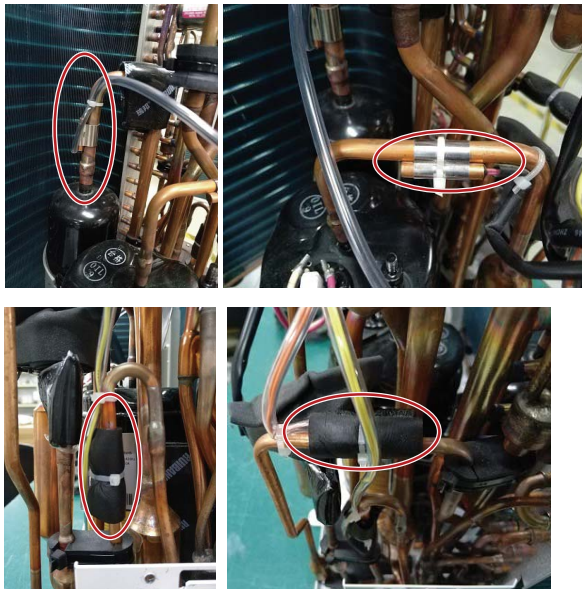

(thermistor clamps)




- 17) Disassemble propeller fan and fan motor.(1 nut,4 screws)



- 18) Disassemble fan motor angle ass'y.(2 screws)




- 19) Disassemble fan motor angle.(2 screws)

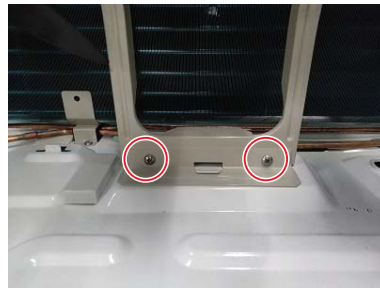

2.Electrical parts exchange methods of outdoor control box unit.

- 1) Cut the fixing band.(1 pcs)

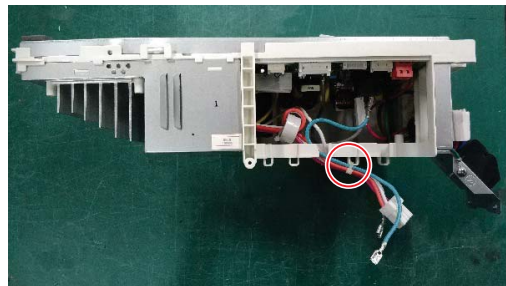


- 2) Disassemble lead wire connected with terminal board.(5 pcs)




- 3) Disassemble terminal board, if terminal board broken.(1 screw)




- 4) Disassemble terminal holder, if terminal holder broken.(1 screw)

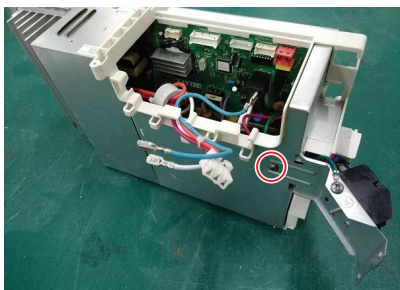


- 5) Disassemble cover.

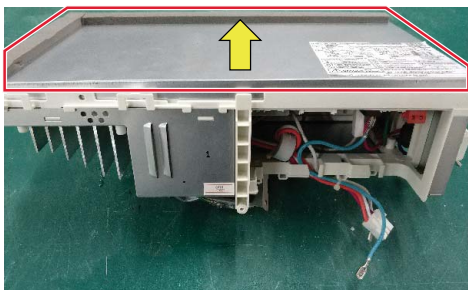


- 6) Disassemble 4 screw, then disassemble control board unit.

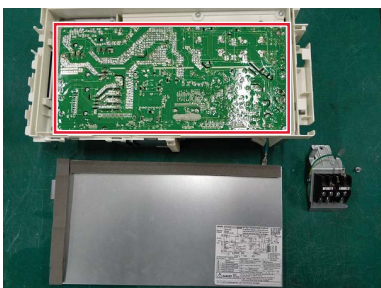

(Disassemble 7 screws on control board unit.)

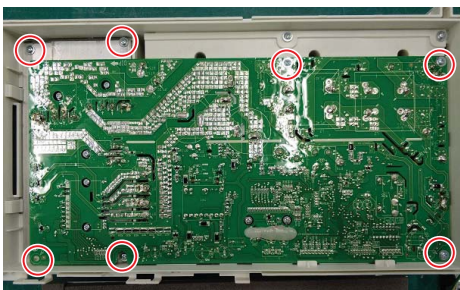


(Disassemble control board unit.)

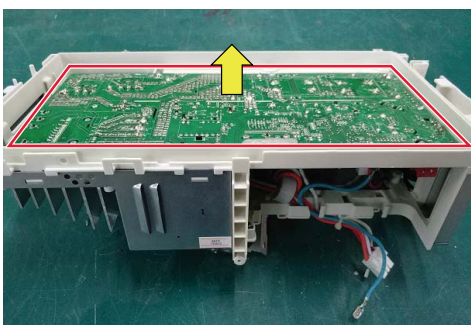


Notice:

1. Exchange outdoor circuit board.
 - 1) Remove the fixing terminals(T5, 7~9).
(Pull it out after pressing the delocking pin.)
 - 2) Reconnect terminals in order after exchanging the control basal lamina.
2. The notes of the fixing terminals connection.
 - 1) Please pull and remove the terminal straight along the tab.

Don't pull the wire to remove the terminal.

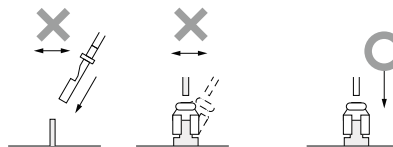

- 2) Don't plug between fixing terminal and sleep.

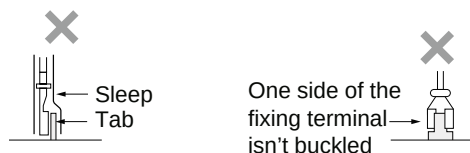


- 3) Pay attention to the lock pin when plugging the city block fasten terminal. Try not plug the terminal by hand, or clip the lock part with radio pench.

Don't clip it with radio pench



- 4) It's inappropriate that the tension in the fasten terminal is too big when wiring.
- 5) The terminal once removed can't be used again, because the interlocking decreases. It's necessary that use it after compressing it a little.

Compress it a little




Note:

Before change control board unit, the workmen should wear anti-eletrostatic gloves.

- THERMISTOR ASSEMBLY INSTALLATION DRAWING

MODEL: CLC8101i 65 HE, CLC8001i 25/35 E

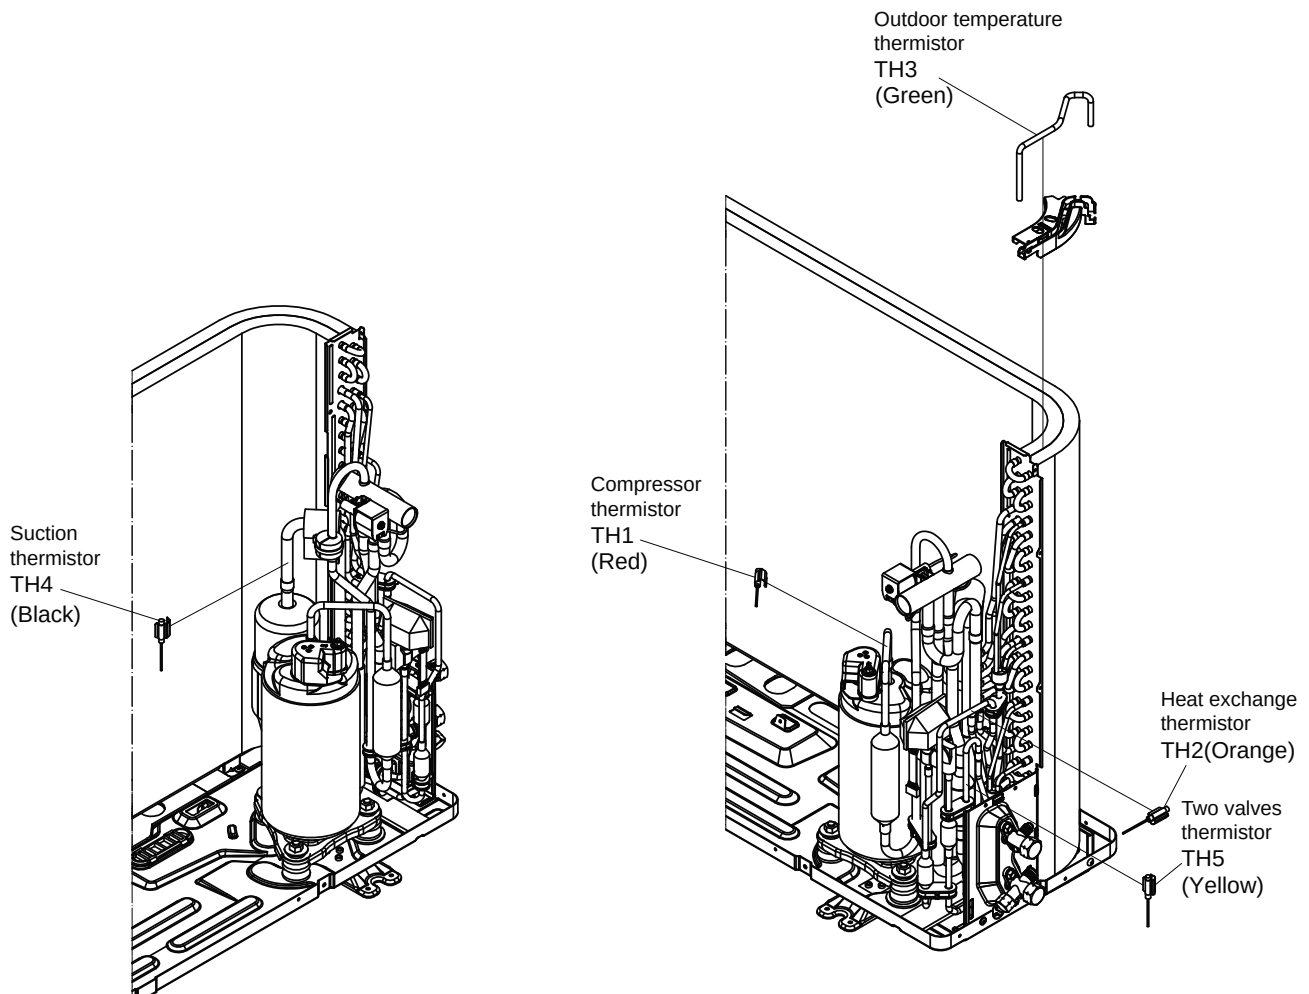

**BOSCH**

PARTS LIST

AIR/AIR HEAT PUMP

MODELS

INDOOR UNIT

CLC6101i-W 50 HE
 CLC6101i-W 65 HE
 CLC8101i-W 65 HE(T/S/R)

OUTDOOR UNIT

CLC6101i 50 HE
 CLC6101i 65 HE
 CLC8101i 65 HE

CLC6001i-W 25 E
 CLC6001i-W 35 E
 CLC8001i-W 25 E(T/S/R)
 CLC8001i-W 35 E(T/S/R)

CLC6001i 25 E
 CLC6001i 35 E
 CLC8001i 25 E
 CLC8001i 35 E

CONTENTS

[1] INDOOR UNIT(CLC8101i_CLC8001i)1	[3] OUTDOOR UNIT(CLC6101i_CLC6001i) 13
- MODEL: CLC8101i-W 65 HE	- MODEL: CLC6101i 50/65 HE
CLC8001i-W 25/35 E3	CLC8001i 25/35 E..... 14
- MODEL: CLC8101i-W 65 HE/T	[4] OUTDOOR UNIT (CLC8101i_CLC8001i) 18
CLC8001i-W 35 ER/T	- MODEL: CLC8101i 65 HE 22
CLC8001i-W 25 ER/T5	- MODEL: CLC8001i 25 E
- MODEL: CLC8101i-W 65 HES	CLC8001i 35 E 26
CLC8001i-W 25/35 ES7	
[2] INDOOR UNIT(CLC6101i_CLC6001i)9	
- MODEL: CLC6101i-W 50/65 HE	
CLC6001i-W 25/35 E 11	


HOW TO ORDER REPLACEMENT PARTS


To have your order filled promptly and correctly, please furnish the following information.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION.

Parts marked with "⚠" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[1] INDOOR UNIT (CLC8101i_CLC8001i)

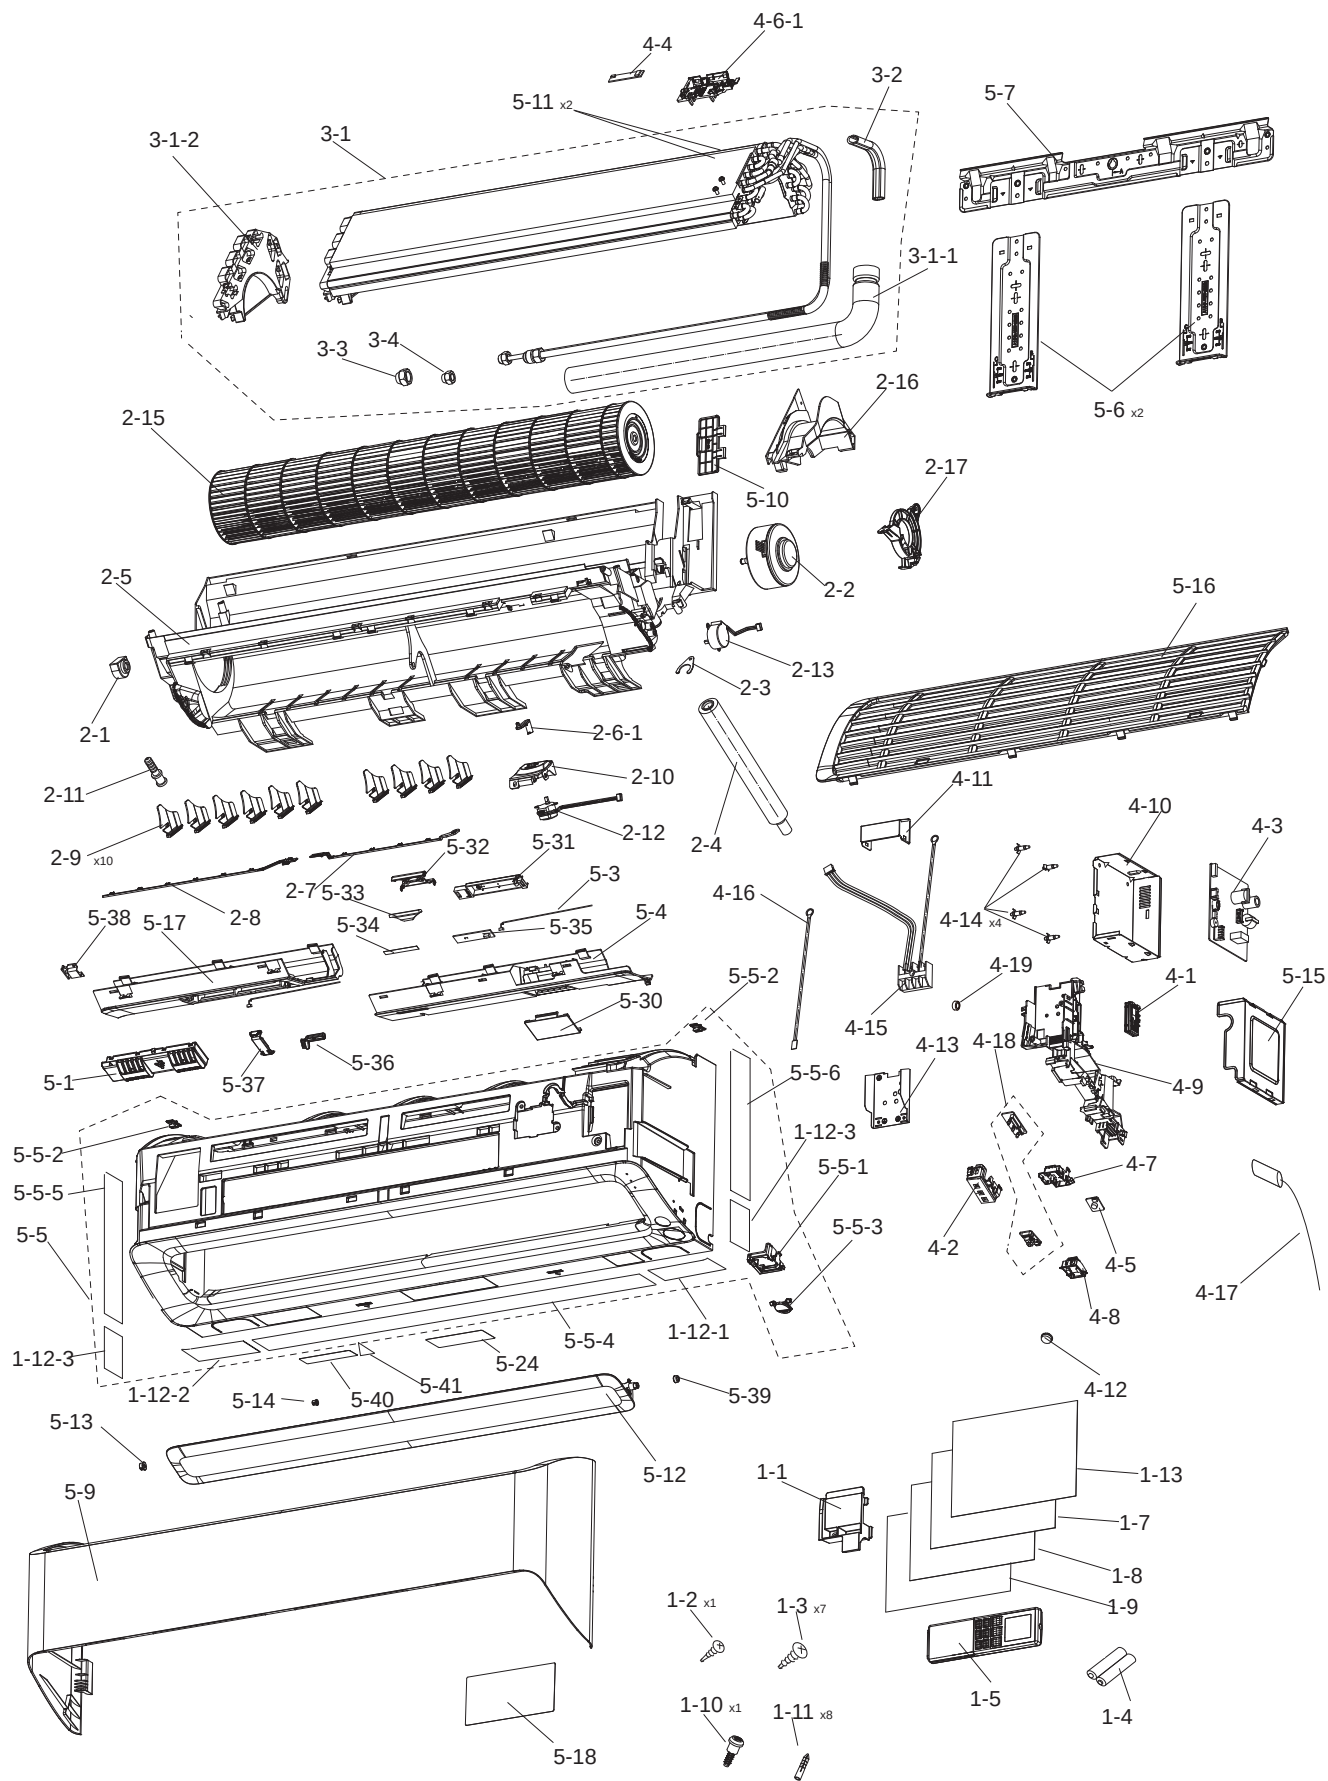

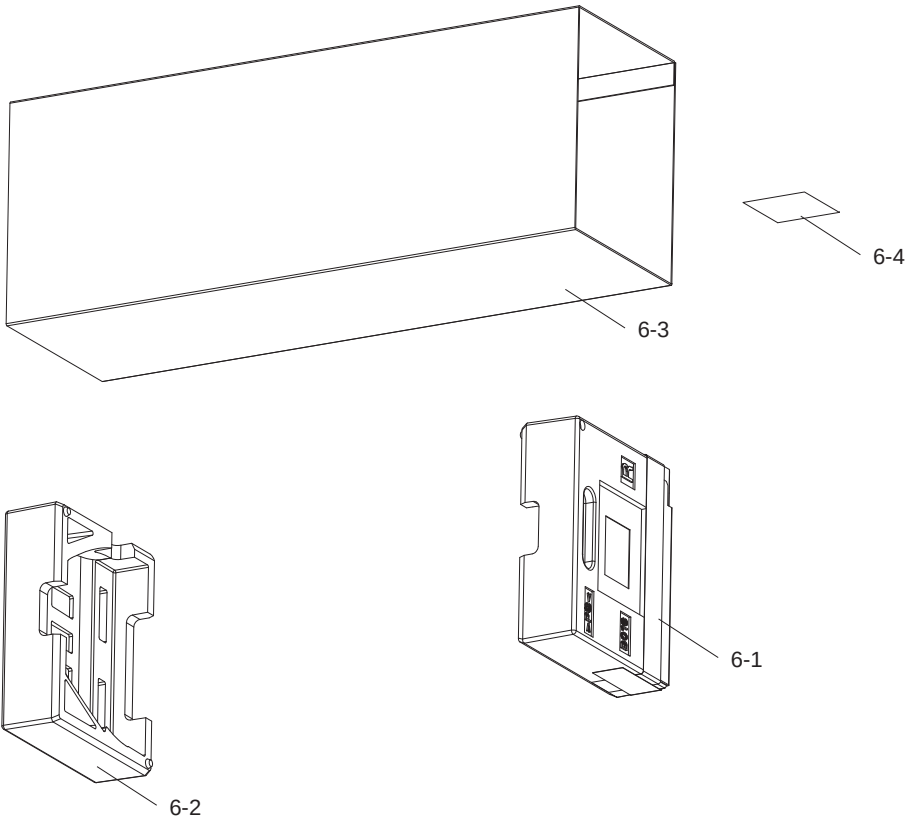


MODEL: CLC8101i-W 65 HE
CLC8001i-W 35 E
CLC8001i-W 25 E



REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
1-1	DHLD-A127JBKZ	AK	N	CORD HOLDER ASSY
1-2	XTTS740P20000	AF		TAPPING SCREW
1-3	XTTS745P30000	AC		TAPPING SCREW
1-4	UBATUA027JBE0	AE		BATTERY PACK
1-5	CRMC-B078JBEZ	AX	N	RCU NORDIC BOSCH YHB [CLC8101i]
1-5	CRMC-B080JBEZ	AX	N	RCU AVERAGE BOSCH YHR [CLC8001i]
1-7	TiNS-B855JBRZ	AQ	N	INSTALLATION MANUAL [CLC8101i]
1-7	TiNS-B858JBRZ	AQ	N	INSTALLATION MANUAL [CLC8001i]
1-9	TiNSEB092JBRZ	AQ	N	OPERATION MANUAL [CLC8101i]
1-9	TiNSEB094JBRZ	AQ	N	OPERATION MANUAL [CLC8001i]
1-10	LX-BZA357JBEZ	AE		SPECIAL SCREW
1-11	LX-NZA207JBEZ	AE		SPECIAL NUT
2-1	CHLD-A221JBKZ	AE		BEARING ASS'Y
2-2	CMOT-A672JBKZ	BC		FAN MOTOR SUB ASS'Y
2-3	LPLT-A069JBPZ	AC		HOSE HOLDER
2-4	PHOS-A073JBEZ	AG		DRAIN HOSE
2-5	DSRA-A489JBKZ	BF	N	CABINET SUB ASS'Y(White)
2-6-1	MARMPA104JBFA	AF		ARM AUTO(White)
2-7	MJNTPA236JBFA	AE		LOUVER LINK R(White)
2-8	MJNTPA237JBFA	AE		LOUVER LINK L(White)
2-9	MLOV-A661JBFA	AE		VERTICAL LOUVER (V-louver) (White)
2-10	PDAI-A394JBFA	AE		MOTOR BRACKET(White)
2-11	PGUMMA495JBEZ	AC		DRAIN PLUG
2-12	RMOT-A247JBZZ	AM		LOUVER MOTOR V
2-13	RMOT-A292JBZZ	AQ	N	LOUVER MOTOR
2-15	NFANCA146JBEZ	AW		CROSS FLOW FAN
2-16	PCOV-C936JBFZ	AK		SIDE COVER R
2-17	PCOV-C954JBFZ	AF		MOTOR COVER
3-1	CCYC-E943JBKZ	BX	N	CYCLE ASS'Y
3-1-1	PFPFPF402JBEZ	AG		PIPE DAN-S
3-1-2	PCOV-C937JBFZ	AH		SIDE COVER L
3-3	PSEN-A099JBKZ	AK		FLARE NUT ASS'Y
3-4	PSEN-A100JBKZ	AK		FLARE NUT ASS'Y
4-1	-			WIRELESS ADAPTER
4-2	DHLD-A126JBKZ	AG		LED HOLDER R ASS'Y
4-3	DSGY-H761JBKZ	BG	N	CONTROL BOARD(Service) [CLC8101i-W 65 HE]
4-3	DSGY-H773JBKZ	BG	N	CONTROL BOARD(Service) [CLC8001i-W 35 E]
4-3	DSGY-H768JBKZ	BG	N	CONTROL BOARD(Service) [CLC8001i-W 25 E]
4-4	FSGY-E705JBKZ	AK		SENSOR PWB-K
4-5	FSGY-E782JBKZ	AS		MOTION SENSOR BOARD
4-6-1	LHLD-B461JBFZ	AH		SENSOR HOLDER
4-7	LHLD-B507JBFZ	AE		RECEIVER HOLDER
4-8	LHLD-B508JBFZ	AE		MOTION SENSOR HOLDER
4-9	LHLD-B511JBFA	AN		TERMINAL HOLDER
4-10	PBOX-A674JBWZ	AH		CONTROL ANGLE
4-11	PCOV-C938JBWZ	AF		TERMINAL COVER
4-12	PCOV-C946JBEZ	AH		SENSOR LENS

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
4-13	PDAI-A395JBWZ	AE		EARTH PLATE
4-14	PSPA-A238JBEZ	AC		SPACER
4-15	QTANZA157JBZZ	AP	N	TERMINAL BORAD
4-16	QW-VZH003JBZZ	AE		LEAD WIRE-E
4-17	RH-HXA268JBZZ	AH		THERMISTOR
4-18	FSGY-E835JBKZ	AS		DISPLAY BOARD(Service)
4-19	RFIL-A151JBEZ	AU		FERRITE CORE
5-1	CKITTA288JBKZ	BH		PCI UNIT ASS'Y(White)
5-3	QW-VZH538JBZZ	AF	N	LEAD WIRE-PCI LED
5-4	PSTB-A022JBFA	AM	N	STABILIZER R(White)
5-5	CWAK-E828JBKZ	BG	N	FRONT PANEL ASS'Y(White)
5-5-1	LHLD-B509JBFZ	AE		BUTTON HOLDER
5-5-2	MLEV-A043JBFA	AD		PANEL LOCK(Light Gray)
5-5-3	PCOV-C944JBFA	AE		RECEIVER COVER(Milk white)
5-6	PPLTNA169JBWZ	AL		MOUNTING ANGLE B
5-7	PPLTNA187JBWZ	AN		MOUNTING ANGLE A
5-9	HPNL-B629JBRF	AZ	N	OPEN PANEL(White)
5-10	LHLD-B510JBFZ	AE		PIPE HOLDER
5-11	LX-BZA075JBE0	AA		SPECIAL SCREW
5-12	MLoV-A662JBFA	AV	N	HORIZONTAL LOUVER (H-louver) (White)
5-13	NBRG-A026JBFA	AB		LOUVER BUSHING(White)
5-14	NBRG-A038JBFA	AC		BEARING C(White)
5-15	PCOV-C939JBWZ	AH		CONTROL BOX COVER
5-16	PFILMA329JBEA	AT		TOP GRILLE(White)
5-17	PSTB-A021JBFA	AZ	N	STABILIZER L 25000(White)
5-18	TLABCE379JBRZ	AD	N	WIRING DIAGRAM
5-24	TSPC-M752JBRA	AK	N	NAME LABEL [CLC8101i-W 65 HE]
5-24	TSPC-M776JBRA	AK	N	NAME LABEL [CLC8001i-W 35 E]
5-24	TSPC-M777JBRA	AK	N	NAME LABEL [CLC8001i-W 25 E]
5-30	PCoV-C941JBFA	AS	N	STABILIZER COVER(White)
5-31	PCAS-A127JBFA	AG	N	LED CASE
5-32	PCoV-C719JBFA	AE		LIGHT GUIDE COVER
5-33	PPLT-B169JBFA	AE		LIGHT GUIDE
5-34	PSHE-A435JBEA	AD		PCI-LED SHEET
5-35	FSGY-F030JBKZ	AQ	N	PCI LED UNIT
5-36	PBRs-A030JBFA	AG		PCI BRUSH
5-37	MLEV-A030JBFB	AC	N	PCI LOCK(White)
5-38	FSGY-E884JBKZ	AP	N	PCI JOINT PWB UNIT B
5-39	PCAP-A184JBEZ	AE		LOUVER CAP
5-40	TLAB-J793JBRZ	AC	N	CAUTION LABEL
5-41	TLAB-H257JBRA	AD		FIRE LABEL
6-1	CPADBA348JBKZ	AL	N	PACKING PAD R ASS'Y
6-2	SPADBB017JBEZ	AG		PAD L
6-3	SPAKCE885JBEZ	AQ	N	PACKING CASE
6-4	TLABMH285JBRZ	AH	N	PRODUCT LABEL [CLC8101i-W 65 HE]
6-4	TLABMH323JBRZ	AH	N	PRODUCT LABEL [CLC8001i-W 35 E]
6-4	TLABMH324JBRZ	AH	N	PRODUCT LABEL [CLC8001i-W 25 E]

MODEL: CLC8101i-W 65 HER CLC8001i-W 35 ER CLC8001i-W 25 ER					MODEL: CLC8101i-W 65 HET CLC8001i-W 35 ET CLC8001i-W 25 ET	
REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION		
1-1	DHLD-A129JBKZ	AK	N	CORD HOLDER ASSY(Drak Gray)		
1-2	XTTS740P20000	AF		TAPPING SCREW		
1-3	XTTS745P30000	AC		TAPPING SCREW		
1-4	UBATUA027JBE0	AE		BATTERY PACK		
1-5	CRMC-B078JBEZ	AX		RCU NORDIC BOSCH YHB [CLC8101i]		
1-5	CRMC-B080JBEZ	AX		RCU AVERAGE BOSCH YHR [CLC8001i]		
1-7	TiNS-B855JBRZ	AQ		INSTALLATION MANUAL [CLC8101i]		
1-7	TiNS-B858JBRZ	AQ		INSTALLATION MANUAL [CLC8001i]		
1-9	TiNSEB092JBRZ	AQ		OPERATION MANUAL [CLC8101i]		
1-9	TiNSEB094JBRZ	AQ		OPERATION MANUAL [CLC8001i]		
1-10	LX-BZA357JBEZ	AE		SPECIAL SCREW		
1-11	LX-NZA207JBEZ	AE		SPECIAL NUT		
1-12-1	PSHE-A460JBEA	AN	N	MIRROR SHEET C		
1-12-2	PSHE-A461JBEA	AN	N	MIRROR SHEET B		
1-12-3	PSHE-A462JBEA	AM	N	MIRROR SHEET A		
2-1	CHLD-A221JBKZ	AE		BEARING ASS'Y		
2-2	CMOT-A672JBKZ	BC		FAN MOTOR SUB ASS'Y		
2-3	LPLT-A069JBPZ	AC		HOSE HOLDER		
2-4	PHOS-A073JBEZ	AG		DRAIN HOSE		
2-5	DSRA-A482JBKZ	BF	N	CABINET SUB ASS'Y(Dark Gray)		
2-6-1	MARMPA104JBFC	AF	N	ARM AUTO(Drak Gray)		
2-7	MJNTPA236JBFC	AE	N	LOUVER LINK R(Dark Gray)		
2-8	MJNTPA237JBFC	AE	N	LOUVER LINK L(Dark Gray)		
2-9	MLOV-A661JBFC	AE	N	VERTICAL LOUVER (V-louver) (Dark Gray)		
2-10	PDAI-A394JBFC	AE	N	MOTOR BRACKET(Dark Gray)		
2-11	PGUMMA495JBEZ	AC		DRAIN PLUG		
2-12	RMOT-A247JBZZ	AM		LOUVER MOTOR V		
2-13	RMOT-A292JBZZ	AQ		LOUVER MOTOR		
2-15	NFANCA146JBEZ	AW		CROSS FLOW FAN		
2-16	PCOV-C936JBFZ	AK		SIDE COVER R		
2-17	PCOV-C954JBFZ	AF		MOTOR COVER		
3-1	CCYC-E943JBKZ	BX		CYCLE ASS'Y		
3-1-1	PFPFPF402JBEZ	AG		PIPE DAN-S		
3-1-2	PCOV-C937JBFZ	AH		SIDE COVER L		
3-3	PSEN-A099JBKZ	AK		FLARE NUT ASS'Y		
3-4	PSEN-A100JBKZ	AK		FLARE NUT ASS'Y		
4-1	-			WIRELESS ADAPTER		
4-2	DHLD-A126JBKZ	AG		LED HOLDER R ASS'Y		
4-3	DSGY-H767JBKZ	BK	N	CONTROL BOARD(Service) [CLC8101i-W 65 HER]		
4-3	DSGY-H763JBKZ	BG	N	CONTROL BOARD(Service) [CLC8101i-W 65 HET]		
4-3	DSGY-H777JBKZ	BG	N	CONTROL BOARD(Service) [CLC8001i-W 35 ER]		
4-3	DSGY-H775JBKZ	BG	N	CONTROL BOARD(Service) [CLC8001i-W 35 ET]		
4-3	DSGY-H772JBKZ	BG	N	CONTROL BOARD(Service) [CLC8001i-W 25 ER]		
4-3	DSGY-H770JBKZ	BG	N	CONTROL BOARD(Service) [CLC8001i-W 25 ET]		
4-4	FSGY-E705JBKZ	AK		SENSOR PWB-K		
4-5	FSGY-E782JBKZ	AS		MOTION SENSOR BOARD		
4-6-1	LHLD-B461JBFZ	AH		SENSOR HOLDER		
4-7	LHLD-B507JBFZ	AE		RECEIVER HOLDER		
4-8	LHLD-B508JBFZ	AE		MOTION SENSOR HOLDER		
4-9	LHLD-B511JBFA	AN		TERMINAL HOLDER		
4-10	PBOX-A674JBWZ	AH		CONTROL ANGLE		
4-11	PCOV-C938JBWZ	AF		TERMINAL COVER		
4-12	PCOV-C946JBEZ	AH		SENSOR LENS		

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
4-13	PDAI-A395JBWZ	AE		EARTH PLATE
4-14	PSPA-A238JBEZ	AC		SPACER
4-15	QTANZA157JBZZ	AP		TERMINAL BORAD
4-16	QW-VZH003JBZZ	AE		LEAD WIRE-E
4-17	RH-HXA268JBZZ	AH		THERMISTOR
4-18	FSGY-E835JBKZ	AS		DISPLAY BOARD(Service)
4-19	RFIL-A151JBEZ	AU		FERRITE CORE
5-1	CKITTA313JBKZ	BL	N	PCI UNIT ASS'Y(Dark Gray)
5-3	QW-VZH538JBZZ	AF		LEAD WIRE-PCI LED
5-4	PSTB-A022JBFC	AM	N	STABILIZER R(Dark Gray)
5-5	CWAK-E835JBKZ	BN	N	FRONT PANEL ASS'Y(Dark Gray)
5-5-1	LHLD-B509JBFZ	AE		BUTTON HOLDER
5-5-2	MLEV-A043JBFA	AD		PANEL LOCK(Light Gray)
5-5-3	PCOV-C964JBFB	AE	N	RECEIVER COVER(Clear White)
5-5-4	PSHE-A463JBEA	AW	N	MIRROR SHEET 1
5-5-5	PSHE-A464JBEA	AQ	N	MIRROR SHEET 2
5-5-6	PSHE-A465JBEA	AQ	N	MIRROR SHEET 3
5-6	PPLTNA169JBWZ	AL		MOUNTING ANGLE B
5-7	PPLTNA187JBWZ	AN		MOUNTING ANGLE A
5-9	HPNL-B635JBRF	BP	N	OPEN PANEL(RED)
5-9	HPNL-B634JBRF	BZ	N	OPEN PANEL(Titanimu)
5-10	LHLD-B510JBFZ	AE		PIPE HOLDER
5-11	LX-BZA075JBE0	AA		SPECIAL SCREW
5-12	MLoV-A662JBFC	AV	N	HORIZONTAL LOUVER (H-louver) (Dark Gray)
5-13	NBRG-A026JBFC	AQ	N	LOUVER BUSHING(Dark Gray)
5-14	NBRG-A038JBFR	AQ	N	BEARING C(Dark Gray)
5-15	PCOV-C939JBWZ	AH		CONTROL BOX COVER
5-16	PFILMA329JBEC	AW	N	TOP GRILLE(Dark Gray)
5-17	PSTB-A021JBFC	AZ	N	STABILIZER L 25000(Dark Gray)
5-18	TLABCE379JBRZ	AD		WIRING DIAGRAM
5-24	TSPC-M925JBRA	AK	N	NAME LABEL [CLC8101i-W 65 HER]
5-24	TSPC-M917JBRA	AK	N	NAME LABEL [CLC8101i-W 65 HET]
5-24	TSPC-M927JBRA	AK	N	NAME LABEL [CLC8001i-W 35 ER]
5-24	TSPC-M929JBRA	AK	N	NAME LABEL [CLC8001i-W 35 ET]
5-24	TSPC-M928JBRA	AK	N	NAME LABEL [CLC8001i-W 25 ER]
5-24	TSPC-M930JBRA	AK	N	NAME LABEL [CLC8001i-W 25 ET]
5-30	PCoV-C941JBFC	AS	N	STABILIZER COVER(Dark Gray)
5-31	PCAS-A127JBFA	AG		LED CASE
5-32	PCoV-C719JBFA	AE		LIGHT GUIDE COVER
5-33	PPLT-B169JBFA	AE		LIGHT GUIDE
5-34	PSHE-A435JBEA	AD		PCI-LED SHEET
5-35	FSGY-F030JBKZ	AQ		PCI LED UNIT
5-36	PBRs-A030JBFA	AG		PCI BRUSH
5-37	MLEV-A030JBFC	AC	N	PCI LOCK(Dark Gray)
5-38	FSGY-E884JBKZ	AP		PCI JOINT PWB UNIT B
5-39	PCAP-A184JBEZ	AE		LOUVER CAP
5-40	TLAB-J793JBRZ	AC		CAUTION LABEL
5-41	TLAB-H257JBRA	AD		FIRE LABEL
6-1	CPADBA348JBKZ	AL		PACKING PAD R ASS'Y
6-2	SPADBB017JBEZ	AG		PAD L
6-3	SPAKCE885JBEZ	AQ		PACKING CASE
6-4	TLABMH558JBRZ	AH	N	PRODUCT LABEL [CLC8101i-W 65 HER]
6-4	TLABMH545JBRZ	AH	N	PRODUCT LABEL [CLC8101i-W 65 HET]
6-4	TLABMH560JBRZ	AH	N	PRODUCT LABEL [CLC8001i-W 35 ER]
6-4	TLABMH562JBRZ	AH	N	PRODUCT LABEL [CLC8001i-W 35 ET]
6-4	TLABMH561JBRZ	AH	N	PRODUCT LABEL [CLC8001i-W 25 ER]
6-4	TLABMH563JBRZ	AH	N	PRODUCT LABEL [CLC8001i-W 25 ET]


MODEL: CLC8101i-W 65 HES
CLC8001i-W 35 ES
CLC8001i-W 25 ES




REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
1-1	DHLD-A128JBKZ	AK	N	CORD HOLDER ASSY(Light Gray)
1-2	XTTS740P20000	AF		TAPPING SCREW
1-3	XTTS745P30000	AC		TAPPING SCREW
1-4	UBATUA027JBE0	AE		BATTERY PACK
1-5	CRMC-B078JBEZ	AX		RCU NORDIC BOSCH YHB [CLC8101i]
1-5	CRMC-B080JBEZ	AX		RCU AVERAGE BOSCH YHR [CLC8001i]
1-7	TINS-B855JBRZ	AQ		INSTALLATION MANUAL [CLC8101i]
1-7	TINS-B858JBRZ	AQ		INSTALLATION MANUAL [CLC8001i]
1-9	TINSEB092JBRZ	AQ		OPERATION MANUAL [CLC8101i]
1-9	TINSEB094JBRZ	AQ		OPERATION MANUAL [CLC8001i]
1-10	LX-BZA357JBEZ	AE		SPECIAL SCREW
1-11	LX-NZA207JBEZ	AE		SPECIAL NUT
1-12-1	PSHE-A460JBEA	AN		MIRROR SHEET C
1-12-2	PSHE-A461JBEA	AN		MIRROR SHEET B
1-12-3	PSHE-A462JBEA	AM		MIRROR SHEET A
2-1	CHLD-A221JBKZ	AE		BEARING ASS'Y
2-2	CMOT-A672JBKZ	BC		FAN MOTOR SUB ASS'Y
2-3	LPLT-A069JBPZ	AC		HOSE HOLDER
2-4	PHOS-A073JBEZ	AG		DRAIN HOSE
2-5	DSRA-A481JBKZ	BE	N	CABINET SUB ASS'Y(Light Gray)
2-6-1	MARMPA104JBFB	AF	N	ARM AUTO(Light Gray)
2-7	MJNTPA236JBFB	AE	N	LOUVER LINK R(Light Gray)
2-8	MJNTPA237JBFB	AE	N	LOUVER LINK L(Light Gray)
2-9	MLOV-A661JBFB	AE	N	VERTICAL LOUVER (V-louver) (Light Gray)
2-10	PDAI-A394JBFB	AE	N	MOTOR BRACKET(Light Gray)
2-11	PGUMMA495JBEZ	AC		DRAIN PLUG
2-12	RMOT-A247JBZZ	AM		LOUVER MOTOR V
2-13	RMOT-A292JBZZ	AQ		LOUVER MOTOR
2-15	NFANCA146JBEZ	AW		CROSS FLOW FAN
2-16	PCOV-C936JBFZ	AK		SIDE COVER R
2-17	PCOV-C954JBFZ	AF		MOTOR COVER
3-1	CCYC-E943JBKZ	BX		CYCLE ASS'Y
3-1-1	PFPFPF402JBEZ	AG		PIPE DAN-S
3-1-2	PCOV-C937JBFZ	AH		SIDE COVER L
3-3	PSEN-A099JBKZ	AK		FLARE NUT ASS'Y
3-4	PSEN-A100JBKZ	AK		FLARE NUT ASS'Y
4-1	-			WIRELESS ADAPTER
4-2	DHLD-A126JBKZ	AG		LED HOLDER R ASS'Y
4-3	DSGY-H765JBKZ	BG	N	CONTROL BOARD(Service) [CLC8101i-W 65 HES]
4-3	DSGY-H776JBKZ	BG	N	CONTROL BOARD(Service) [CLC8001i-W 35 ES]
4-3	DSGY-H771JBKZ	BG	N	CONTROL BOARD(Service) [CLC8001i-W 25 ES]
4-4	FSGY-E705JBKZ	AK		SENSOR PWB-K
4-5	FSGY-E782JBKZ	AS		MOTION SENSOR BOARD
4-6-1	LHLD-B461JBFZ	AH		SENSOR HOLDER
4-7	LHLD-B507JBFZ	AE		RECEIVER HOLDER
4-8	LHLD-B508JBFZ	AE		MOTION SENSOR HOLDER
4-9	LHLD-B511JBFA	AN		TERMINAL HOLDER
4-10	PBOX-A674JBWZ	AH		CONTROL ANGLE

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
4-11	PCOV-C938JBWZ	AF		TERMINAL COVER
4-12	PCOV-C946JBEZ	AH		SENSOR LENS
4-13	PDAl-A395JBWZ	AE		EARTH PLATE
4-14	PSPA-A238JBEZ	AC		SPACER
4-15	QTANZA157JBZZ	AP		TERMINAL BORAD
4-16	QW-VZH003JBZZ	AE		LEAD WIRE-E
4-17	RH-HXA268JBZZ	AH		THERMISTOR
4-18	FSGY-E835JBKZ	AS		DISPLAY BOARD(Service)
4-19	RFIL-A151JBEZ	AU		FERRITE CORE
5-1	CKITTA312JBKZ	BL	N	PCI UNIT ASS'Y(Light Gray)
5-3	QW-VZH538JBZZ	AF		LEAD WIRE-PCI LED
5-4	PSTB-A022JBFB	AM	N	STABILIZER R(Light Gray)
5-5	CWAK-E832JBKZ	BN	N	FRONT PANEL ASS'Y(Light Gray)
5-5-1	LHLD-B509JBFB	AE		BUTTON HOLDER
5-5-2	MLEV-A043JBFB	AD	N	PANEL LOCK(White)
5-5-3	PCOV-C964JBFB	AE		RECEIVER COVER(Clear White)
5-5-4	PSHE-A463JBEA	AW		MIRROR SHEET 1
5-5-5	PSHE-A464JBEA	AQ		MIRROR SHEET 2
5-5-6	PSHE-A465JBEA	AQ		MIRROR SHEET 3
5-6	PPLTNA169JBWZ	AL		MOUNTING ANGLE B
5-7	PPLTNA187JBWZ	AN		MOUNTING ANGLE A
5-9	HPNL-B633JBRE	BZ	N	OPEN PANEL(Silver)
5-10	LHLD-B510JBFB	AE		PIPE HOLDER
5-11	LX-BZA075JBE0	AA		SPECIAL SCREW
5-12	MLoV-A662JBFB	AV	N	HORIZONTAL LOUVER (H-louver) (Light Gray)
5-13	NBRG-A026JBFR	AQ	N	LOUVER BUSHING(Light Gray)
5-14	NBRG-A038JBFS	AQ	N	BEARING C(Light Gray)
5-15	PCOV-C939JBWZ	AH		CONTROL BOX COVER
5-16	PFILMA329JBEB	AW	N	TOP GRILLE(Light Gray)
5-17	PSTB-A021JBFB	AZ	N	STABILIZER L 25000(Light Gray)
5-18	TLABCE379JBRZ	AD		WIRING DIAGRAM
5-24	TSPC-M926JBRA	AK	N	NAME LABEL [CLC8101i-W 65 HES]
5-24	TSPC-M931JBRA	AK	N	NAME LABEL [CLC8001i-W 35 ES]
5-24	TSPC-M932JBRA	AK	N	NAME LABEL [CLC8001i-W 25 ES]
5-30	PCoV-C941JBFB	AS	N	STABILIZER COVER(Light Gray)
5-31	PCAS-A127JBFA	AG		LED CASE
5-32	PCoV-C719JBFA	AE		LIGHT GUIDE COVER
5-33	PPLT-B169JBFA	AE		LIGHT GUIDE
5-34	PSHE-A435JBEA	AD		PCI-LED SHEET
5-35	FSGY-F030JBKZ	AQ		PCI LED UNIT
5-36	PBRs-A030JBFA	AG		PCI BRUSH
5-37	MLEV-A030JBFA	AF		PCI LOCK(Lithg Gray)
5-38	FSGY-E884JBKZ	AP		PCI JOINT PWB UNIT B
5-39	PCAP-A184JBEZ	AE		LOUVER CAP
5-40	TLAB-J793JBRZ	AC		CAUTION LABEL
5-41	TLAB-H257JBRA	AD		FIRE LABEL
6-1	CPADBA348JBKZ	AL		PACKING PAD R ASS'Y
6-2	SPADBB017JBEZ	AG		PAD L
6-3	SPAKCE885JBEZ	AQ	N	PACKING CASE
6-4	TLABMH559JBRZ	AH	N	PRODUCT LABEL [CLC8101i-W 65 HES]
6-4	TLABMH564JBRZ	AH	N	PRODUCT LABEL [CLC8001i-W 35 ES]
6-4	TLABMH565JBRZ	AH	N	PRODUCT LABEL [CLC8001i-W 25 ES]

[2] INDOOR UNIT PARTS (CLC6101i_CLC6001i)

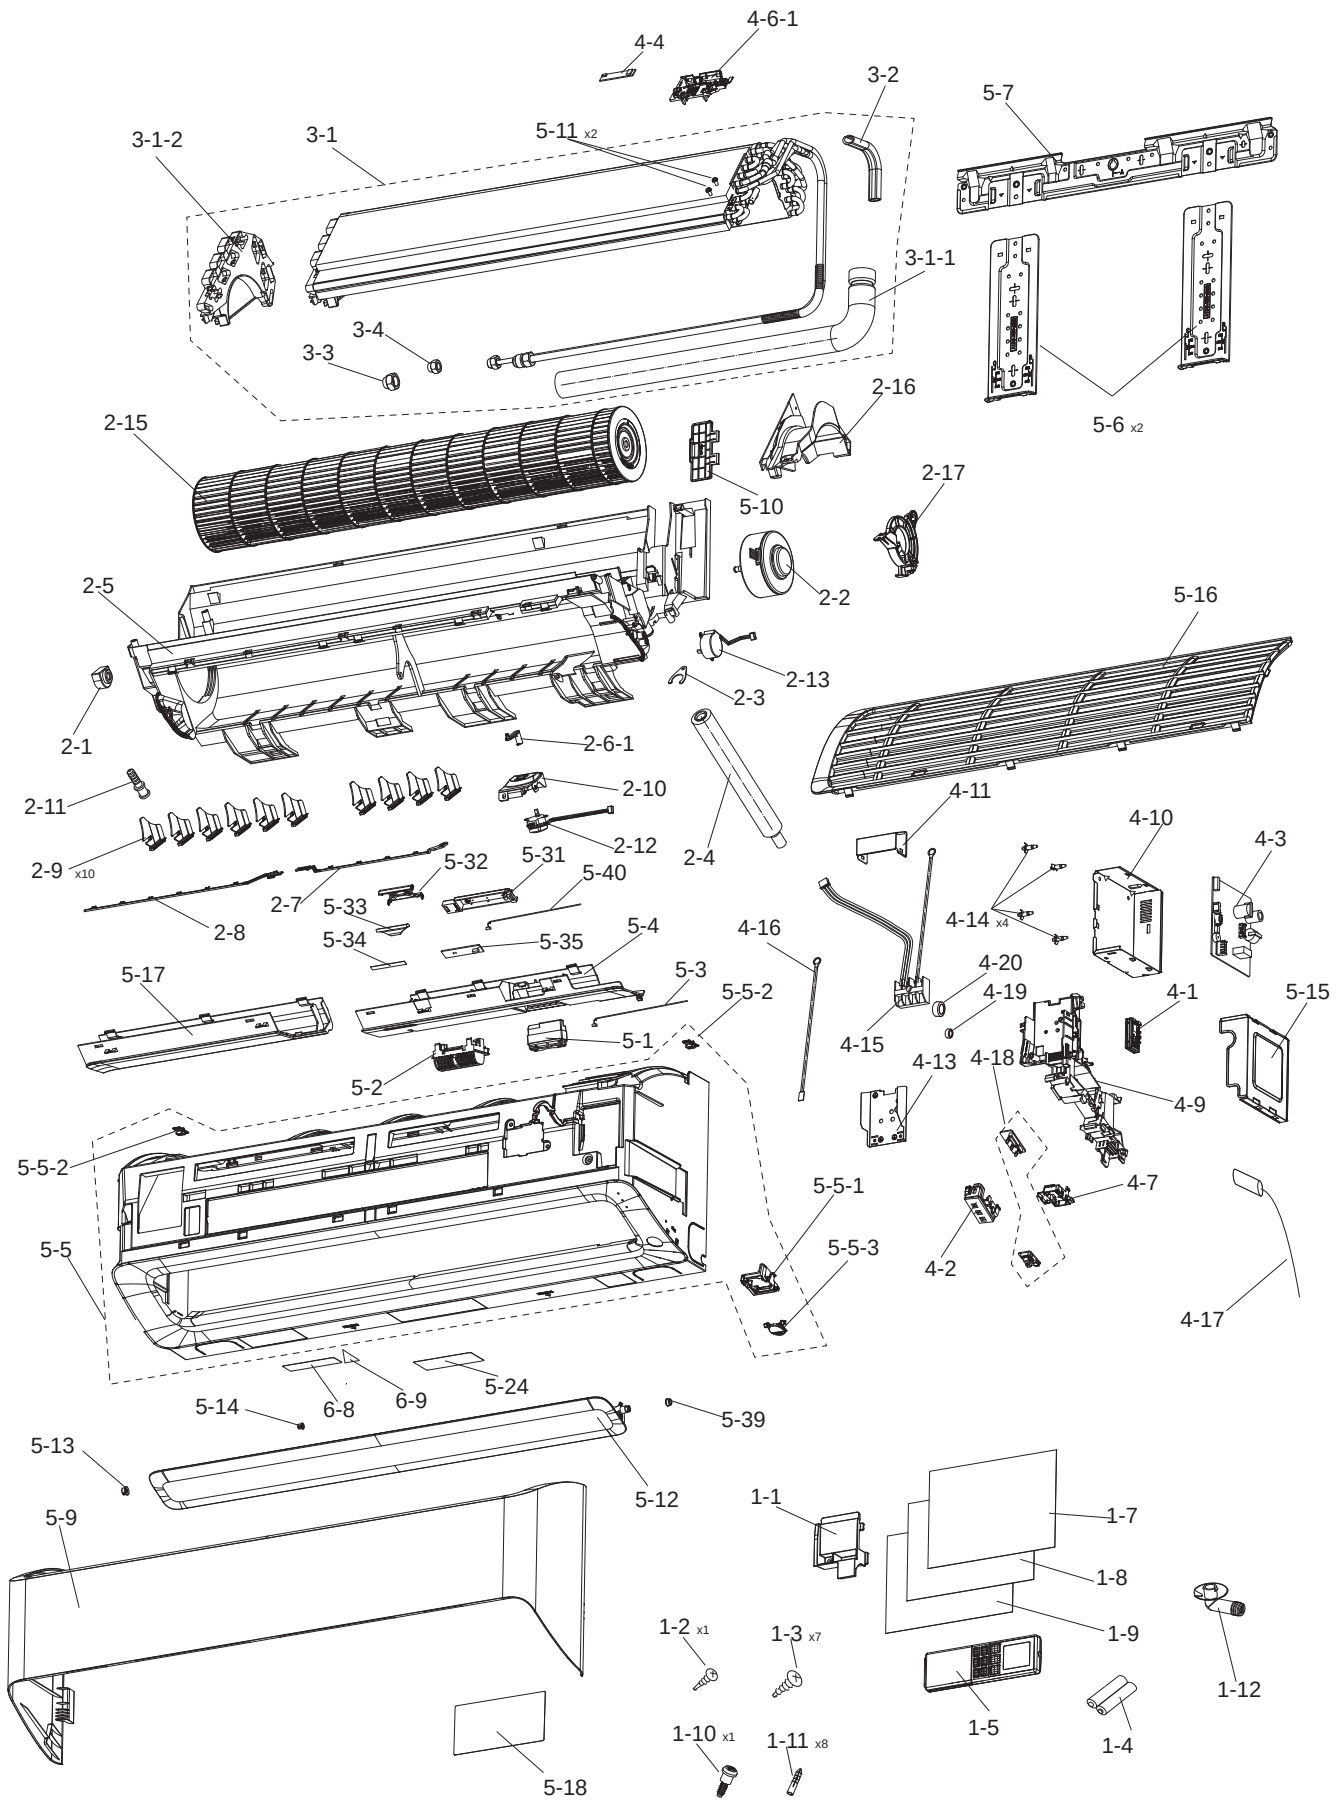

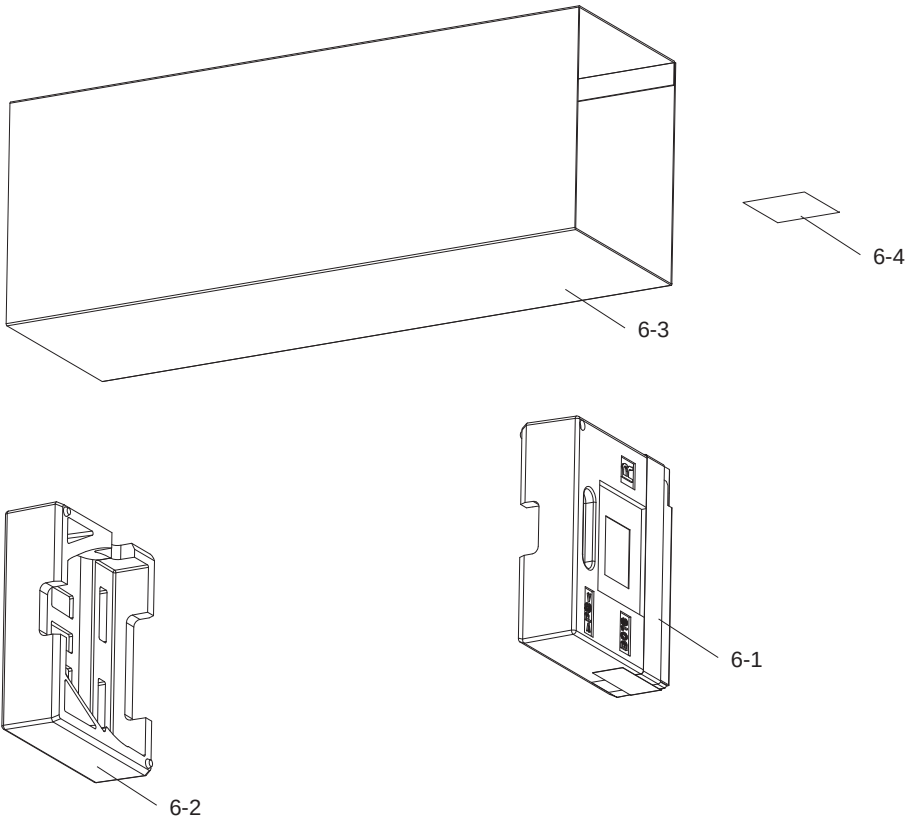


MODEL: CLC6101i-W 65 HE
CLC6101i-W 50 HE
CLC6001i-W 35 E
CLC6001i-W 25 E



REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
1-1	DHLD-A127JBKZ	AK		CORD HOLDER ASSY
1-2	XTTS740P20000	AF		TAPPING SCREW
1-3	XTTS745P30000	AC		TAPPING SCREW
1-4	UBATUA027JBE0	AE		BATTERY PACK
1-5	CRMC-B078JBEZ	AX		RCU NORDIC BOSCH YHB [CLC6101i]
1-5	CRMC-B080JBEZ	AX		RCU AVERAGE BOSCH YHR [CLC6001i]
1-7	TiNS-B855JBRZ	AQ		INSTALLATION MANUAL [CLC6101i]
1-7	TiNS-B858JBRZ	AQ		INSTALLATION MANUAL [CLC6001i]
1-9	TiNSEB092JBRZ	AQ		OPERATION MANUAL [CLC6101i]
1-9	TiNSEB094JBRZ	AQ		OPERATION MANUAL [CLC6001i]
1-10	LX-BZA357JBEZ	AE		SPECIAL SCREW
1-11	LX-NZA207JBEZ	AE		SPECIAL NUT
2-1	CHLD-A221JBKZ	AE		BEARING ASS'Y
2-2	CMOT-A672JBKZ	BC		FAN MOTOR SUB ASS'Y
2-3	LPLT-A069JBPZ	AC		HOSE HOLDER
2-4	PHOS-A073JBEZ	AG		DRAIN HOSE
2-5	DSRA-A489JBKZ	BF		CABINET SUB ASS'Y
2-6-1	MARMPA104JBFA	AF		ARM AUTO
2-7	MJNTPA236JBFA	AE		LOUVER LINK R
2-8	MJNTPA237JBFA	AE		LOUVER LINK L
2-9	MLOV-A661JBFA	AE		VERTICAL LOUVER (V-louver)
2-10	PDAI-A394JBFA	AE		MOTOR BRACKET
2-11	PGUMMA495JBEZ	AC		DRAIN PLUG
2-12	RMOT-A247JBZZ	AM		LOUVER MOTOR V
2-13	RMOT-A292JBZZ	AQ		LOUVER MOTOR
2-15	NFANCA146JBEZ	AW		CROSS FLOW FAN
2-16	PCOV-C936JBFZ	AK		SIDE COVER R
2-17	PCOV-C954JBFZ	AF		MOTOR COVER
3-1	CCYC-E954JBKZ	BW	N	CYCLE ASS'Y
3-1	CCYC-E945JBKZ	BU	N	CYCLE ASS'Y
3-1-1	PFPFPF402JBEZ	AG		PIPE DAN-S
3-1-2	PCOV-C937JBFZ	AH		PCOV-C937JBFZ
3-3	PSEN-A099JBKZ	AK		FLARE NUT ASS'Y
3-4	PSEN-A100JBKZ	AK		FLARE NUT ASS'Y
4-1	-			WIRELESS ADAPTER
4-2	DHLD-A126JBKZ	AG		LED HOLDER R ASS'Y
4-3	DSGY-H756JBKZ	BG	N	CONTROL BOARD(Service) [CLC6101i-W 65 HE]
4-3	DSGY-H755JBKZ	BG	N	CONTROL BOARD(Service) [CLC6101i-W 50 HE]
4-3	DSGY-H759JBKZ	BG	N	CONTROL BOARD(Service) [CLC6001i-W 35 E]
4-3	DSGY-H757JBKZ	BG	N	CONTROL BOARD(Service) [CLC6001i-W 25 E]
4-4	FSGY-E705JBKZ	AK		SENSOR PWB-K
4-6-1	LHLD-B461JBFZ	AH		SENSOR HOLDER
4-7	LHLD-B507JBFZ	AE		RECEIVER HOLDER
4-9	LHLD-B511JBFA	AN		TERMINAL HOLDER
4-10	PBOX-A674JBWZ	AH		CONTROL ANGLE
4-11	PCOV-C938JBWZ	AF		TERMINAL COVER
4-13	PDAI-A395JBWZ	AE		EARTH PLATE
4-14	PSPA-A238JBEZ	AC		SPACER

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
4-15	QTANZA157JBZZ	AP		TERMINAL BORAD
4-16	QW-VZH003JBZZ	AE		LEAD WIRE-E
4-17	RH-HXA268JBZZ	AH		THERMISTOR
4-18	FSGY-E835JBKZ	AS		DISPLAY BOARD(Service)
4-19	RFIL-A151JBEZ	AU		FERRITE CORE
4-20	RFIL-A150JBEZ	AH		FERRITE CORE
5-1	CKITTA321AKKZ	BE		PLASMA CLUSTER UNIT
5-2	PCOV-C940JBFA	AG		PCI COVER
5-3	QW-VZG803JBZZ	AF		LEAD WIRE
5-4	PSTB-A022JBFA	AM		STABILIZER R
5-5	CWAK-E831JBKZ	BG	N	FRONT PANEL ASS'Y
5-5-1	LHLD-B509JBFZ	AE		BUTTON HOLDER
5-5-2	MLEV-A043JBFA	AD		PANEL LOCK
5-5-3	PCOV-C944JBFA	AE		RECEIVER COVER
5-6	PPLTNA169JBWZ	AL		MOUNTING ANGLE B
5-7	PPLTNA187JBWZ	AN		MOUNTING ANGLE A
5-9	HPNL-B629JBRF	AZ		OPEN PANEL
5-10	LHLD-B510JBFZ	AE		PIPE HOLDER
5-11	LX-BZA075JBE0	AA		SPECIAL SCREW
5-12	MLoV-A662JBFA	AV		HORIZONTAL LOUVER (H-louver)
5-13	NBRG-A026JBFA	AB		LOUVER BUSHING
5-14	NBRG-A038JBFA	AC		BEARING C
5-15	PCOV-C939JBWZ	AH		CONTROL BOX COVER
5-16	PFILMA329JBEA	AT		TOP GRILLE
5-17	PSTB-A020JBFA	AL		STABILIZER L
5-18	TLABCE379JBRZ	AD		WIRING DIAGRAM
5-24	TSPC-M808JBRA	AK	N	NAME LABEL [CLC6101i-W 65 HE]
5-24	TSPC-M761JBRA	AK	N	NAME LABEL [CLC6101i-W 50 HE]
5-24	TSPC-M762JBRA	AK	N	NAME LABEL [CLC6001i-W 35 E]
5-24	TSPC-M763JBRA	AK	N	NAME LABEL [CLC6001i-W 25 E]
5-31	PCAS-A127JBFA	AG		LED CASE
5-32	PCoV-C719JBFA	AE		LIGHT GUIDE COVER
5-33	PPLT-B169JBFA	AE		LIGHT GUIDE
5-34	PSHE-A435JBEA	AD		PCI-LED SHEET
5-35	FSGY-F030JBKZ	AQ		PCI LED UNIT
5-39	PCAP-A184JBEZ	AE		LOUVER CAP
5-40	QW-VZH538JBZZ	AF		LEAD WIRE-PCI LED
6-1	CPADBA348JBKZ	AL	N	PACKING PAD R ASS'Y
6-2	SPADBB017JBEZ	AG		PAD L
6-3	SPAKCE885JBEZ	AQ		PACKING CASE
6-4	TLABMH362JBRZ	AH	N	PRODUCT LABEL [CLC6101i-W 65 HE]
6-4	TLABMH302JBRZ	AH	N	PRODUCT LABEL [CLC6101i-W 50 HE]
6-4	TLABMH303JBRZ	AH	N	PRODUCT LABEL [CLC6001i-W 35 E]
6-4	TLABMH304JBRZ	AH	N	PRODUCT LABEL [CLC6001i-W 25 E]
6-8	TLAB-J793JBRZ	AC		CAUTION LABEL
6-9	TLAB-H257JBRA	AD		FIRE LABEL


[3] OUTDOOR UNIT (CLC6101i_CLC6001i)

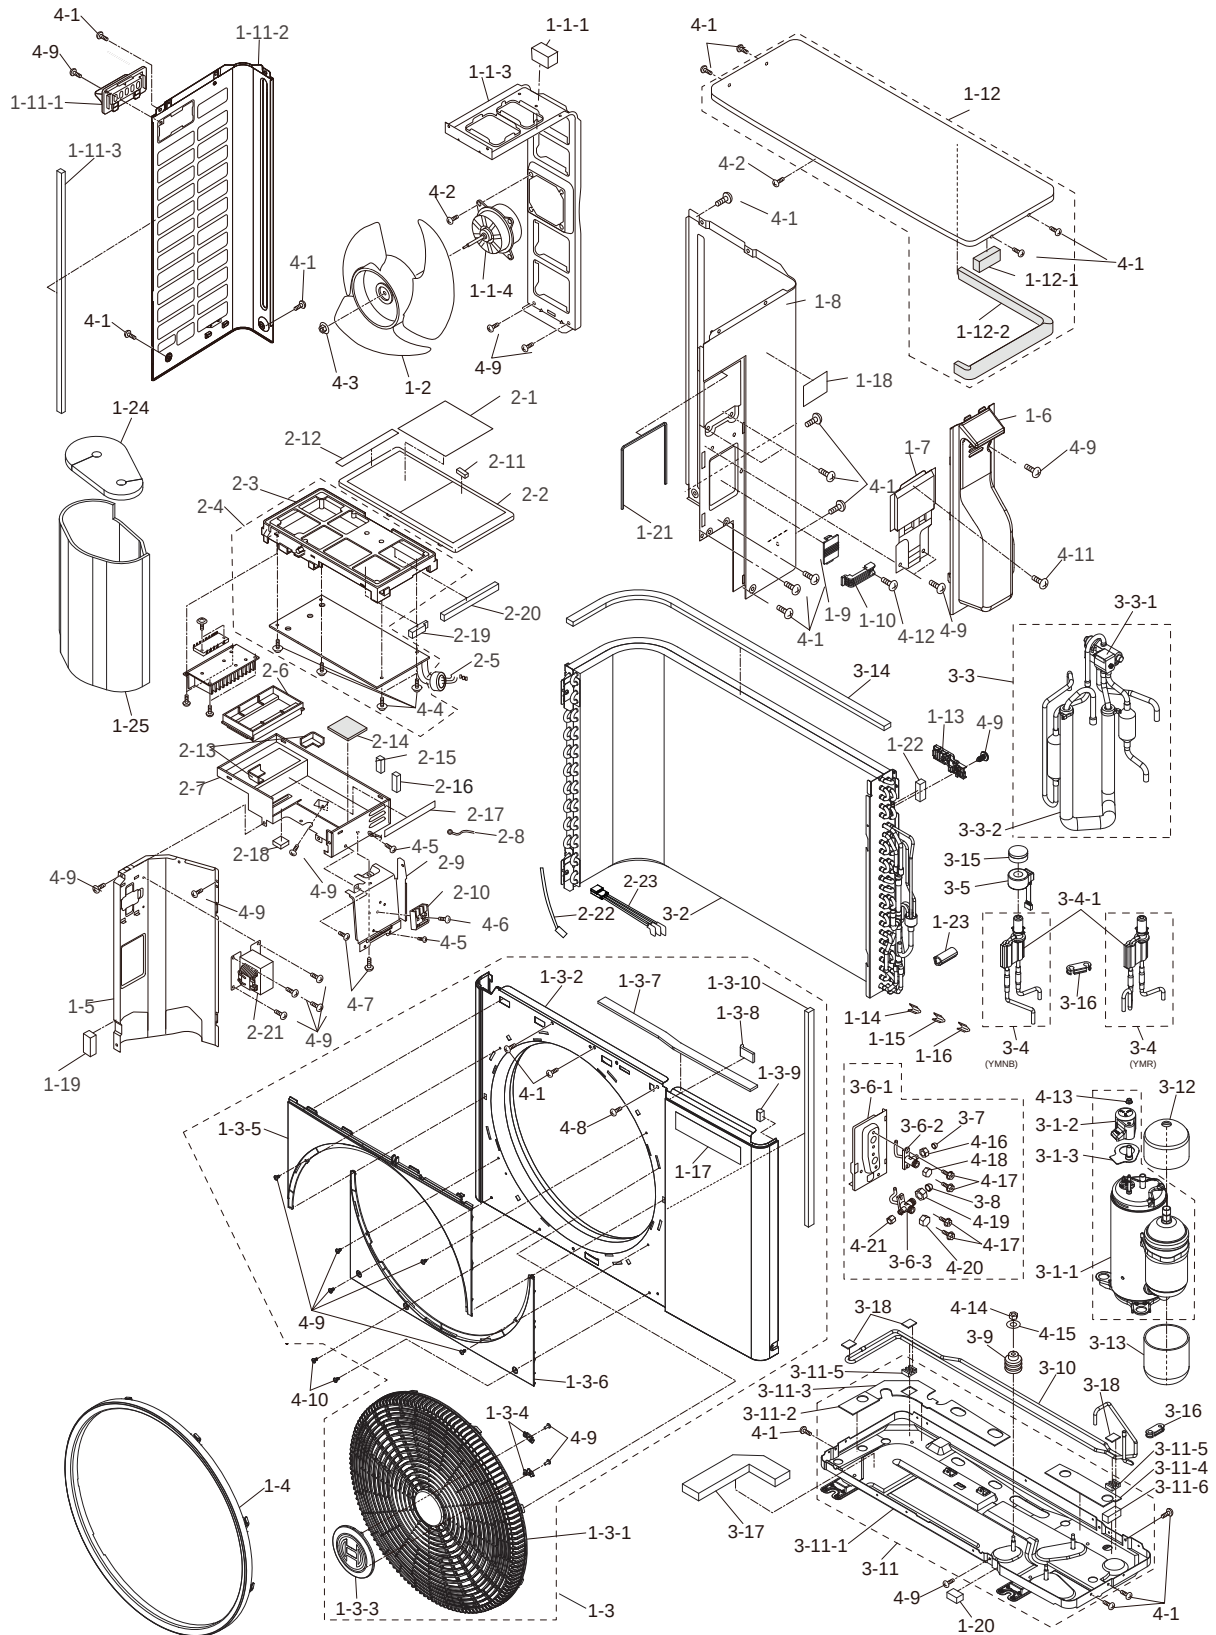


MODEL: CLC6101i 50 HE, CLC6101i 65 HE CLC6001i 25 E, CLC6001i 35 E				
REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
CABINET AND UNIT PARTS				
1-1-1	PFPFPE338JBEZ	AD		CUSHION
1-1-3	LANGKA124JBZPZ	AR		FAN MOTOR ANGLE
1-1-4	CMOTLB656JBEZ	BC		FAN MOTOR
1-2	NFANPA159JBEZ	AT		PROPELLER FAN
1-3	CCAB-A731JBKZ	BF		FRONT PANEL ASS'Y
1-3-1	GGADPA046JBFB	AQ		FAN GUARD
1-3-2	GCAB-A615JBTB	AY		FRONT PANEL
1-3-3	PCOV-C870JBRB	AG		CENTER DISC
1-3-4	LHLD-B469JBFB	AC		DISC HOLDER
1-3-5	GCAB-A613JBFD	AS		FRONT COVER UP
1-3-6	GCAB-A614JBFD	AS		FRONT COVER DOWN
1-3-7	PSEL-C048JBEZ	AC		F.PANEL INSULATOR
1-3-8	PSEL-C049JBEZ	AC		F.PANEL INSULATOR
1-3-9	PSEL-D146JBEZ	AF		SEAL
1-3-10	PSEL-E714JBEZ	AD		BULKHEAD INSULATOR
1-4	PCOV-C871JBFA	AU		RING
1-5	CSKR-A628JBKZ	AR		BULKHEAD ASS'Y
1-6	CFTA-A400JBKZ	AK		SIDE COVER ASS'Y
1-7	CCOV-A414JBKZ	AF		COVER ASS'Y
1-8	PPLT-B202JBTB	AS		SIDE COVER R
1-9	LHLD-A699JBFA	AF		HOLDER BASE
1-10	LHLD-A573JBFA	AC		CORD CLAMP
1-11-1	JHNDPA037JBFD	AE		HANDLE
1-11-2	PPLT-B026JBTB	AP		SIDE COVER L
1-11-3	PSEL-E998JBEZ	AC		SIDE COVER L SEAL
1-12	DCAB-A238JBKZ	AV		TOP COVER ASS'Y
1-12-1	PSEL-E814JBEZ	AC		INSULATOR
1-12-2	PSEL-E813JBEZ	AC		INSULATOR
1-13	LHLD-B385JBFA	AE		THERMISTOR HOLDER
1-14	MSPR-A026JBE0	AB		SPRING
1-15	MSPR-A027JBE0	AB		THERMISTOR SPRING
1-16	MSPR-A207JBEZ	AF		SPRING
1-17	TLABBA320JBRA	AF		BOSCH LABEL
1-18	TSPC-M740JBRZ	AK	N	NAME LABEL[CLC6101i 65 HE]
1-18	TSPC-M766JBRZ	AK	N	NAME LABEL[CLC6101i 50 HE]
1-18	TSPC-M786JBRZ	AK	N	NAME LABEL[CLC6001i 35 E]
1-18	TSPC-M785JBRZ	AK	N	NAME LABEL[CLC6001i 25 E]
1-19	PSEL-E278JBEZ	AC		SEAL
1-20	PSEL-E255JBEZ	AC		BASE PAN SEAL B
1-21	PSEL-E806JBEZ	AC		SIDE COVER INSULATOR
1-22	PSEL-E881JBEZ	AC		END PLATE SEAL
1-23	PSEL-E943JBEZ	AD		THERMISTOR SEAL
1-24	PSPF-B569JBEZ	AD		COMPRESSOR COVER TOP
1-25	PSPF-B333JBEZ	AN		COMPRESSOR COVER
CONTROL UNIT PARTS				
2-1	TLABCE354JBRZ	AC		WIRING DIAGRAM
2-2	PCOV-B716JBWZ	AR		COVER
2-3	LHLD-B195JBFA	AQ		HOLDER


REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
2-4	DSGY-H778JBKZ	CA	N	CONTROL BOARD UNIT[CLC6101i 65 HE]
2-4	DSGY-H779JBKZ	CA	N	CONTROL BOARD UNIT[CLC6001i 35 E]
2-4	DSGY-H780JBKZ	CA	N	CONTROL BOARD UNIT[CLC6101i 50 HE]
2-4	DSGY-H781JBKZ	CA	N	CONTROL BOARD UNIT[CLC6001i 25 E]
2-5	RFIL-A149JBEZ	AF		FERRITE CORE
2-6	LHLD-B196JBFA	AG		HOLDER
2-7	DBOX-A086JBYZ	AT		CONTROL BOX ASS'Y
2-8	QW-VZH384JBZZ	AD		EARTH WIRE
2-9	PDAI-A270JBWZ	AU		TERMINAL HOLDER
2-10	QTANZA135JBZZ	AQ		TERMINAL BOARD
2-11	PFPFPE565JBEZ	AC		CUSHION
2-12	PSEL-C684JBEZ	AB		SEAL
2-13	PSEL-C345JBEZ	AL		SEAL
2-14	PSEL-C686JBEZ	AC		SEAL
2-15	PSEL-E461JBEZ	AC		SEAL
2-16	PSEL-E462JBEZ	AC		SEAL
2-17	PSEL-C767JBEZ	AB		SEAL
2-18	PSEL-C769JBEZ	AB		SEAL
2-19	PSEL-E912JBEZ	AC		SEAL
2-20	PSEL-E913JBEZ	AC		SEAL
2-21	RCILZA091JBZZ	AZ	N	REACTOR
2-22	RH-HXA238JBZZ	AX		THERMISTOR
2-23	QW-IZA207JBZZ	AN		LEAD WIRE
CYCLE PARTS				
3-1-1	PCMPRA814JBEZ	BW		COMPRESSOR
3-1-2	PCOV-C854JBEZ	AP		TERMINAL COVER
3-1-3	PGUM-A292JBEZ	AP		TERMINAL GASKET
3-2	DCON-B017JBpz	CF		CONDENSER
3-3	DVLV-B786JBKZ	BK	N	REVERSE VALVE ASS'Y
3-3-1	CCIL-A211JBKZ	AS		COIL ASS'Y
3-3-2	PFPFPF483JBEZ	AE		SUCTION INSULATOR
3-4	DVLV-B729JBKZ	BB		EXPAN.VALVE ASS'Y
3-4	DVLV-B752JBKZ	BB		EXPAN.VALVE ASS'Y
3-4-1	PGUMSA476JBEZ	AD		DAMPER RUBBER
3-5	RMOTSA073JBZZ	AV		VALVE MOTOR
3-6-1	PDAI-A246JBpz	AM		FLARE COUPLING BASE
3-6-2	DVLV-B547JBKZ	AP		2WAY VALVE UNIT
3-6-3	DVLV-B620JBKZ	AS		3WAY VALVE UNIT
3-7	PCAP-A006JBF0	AC		NUT BONNET
3-8	PCAP-A007JBF0	AB		NUT BONNET
3-9	GLEG-A162JBEZ	AF		COMPRESSOR CUSHION
3-10	CPIPCC350JBKZ	AV		HEAT TUBE ASS'Y
3-11	CCHS-B716JBKZ	BB		BASE PAN ASS'Y
3-11	CCHS-B736JBKZ	BA		BASE PAN ASS'Y
3-11-1	CCHS-B715JBTD	BA		BASE PAN ASS'Y
3-11-1	CCHS-B733JBTD	BA		BASE PAN ASS'Y
3-11-2	PFPFPF480JBEZ	AC		BASE PAN INSU. A
3-11-3	PFPFPF481JBEZ	AC		BASE PAN INSU. C
3-11-4	PFPFPF482JBEZ	AC		BASE PAN INSU. B
3-11-5	PGUM-A219JBEZ	AG		TUBE HOLDER RUBBER
3-11-6	PSEL-E979JBEZ	AC		BASE PAN SEAL B
3-12	PFPFPF501JBEZ	AD		COMPRESSOR INSU. A

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
3-13	PFPF502JBEZ	AD		COMPRESSOR INSU. B
3-14	PSEL-E942JBEZ	AE		CONDENSER SEAL
3-16	PGUM-A298JBEZ	AG		DAMPER RUBBER
3-17	PSEL-E938JBEZ	AF		BASE PAN SEAL
SCREW AND NUT				
4-1	LX-BZA493JBEZ	AE		SPECIAL SCREW
4-2	LX-BZA570JBEZ	AC		SPECIAL SCREW
4-3	LX-NZA428JBEZ	AC		SPECIAL NUT
4-4	XCPS730P10XS0	AD		TAPPING SCREW
4-5	XQTS740P08000	AA		TAPPING SCREW
4-6	XCPS740P30000	AC		TAPPING SCREW
4-7	XCPS740P06000	AC		TAPPING SCREW
4-9	LX-BZA495JBEZ	AE		SPECIAL SCREW
4-10	LX-BZA498JBEZ	AC		SPECIAL SCREW
4-11	LX-BZA555JBEZ	AC		SPECIAL SCREW
4-12	XETS740P14000	AB		SCREW
4-13	LX-NZA476JBEZ	AC		FRANGE NUT
4-14	XNFS760-50000	AB		NUT
4-15	LX-WZA057JBEZ	AC		WASHER 22
4-16	LX-NZA505JBEZ	AF		FLARE NUT
4-17	LX-BZA494JBEZ	AE		SPECIAL SCREW
4-18	LX-NZA468JBEZ	AH		BONNET
4-19	LX-NZA502JBEZ	AG		FLARE NUT
4-20	LX-NZA500JBEZ	AH		BONNET
4-21	LX-NZA501JBEZ	AH		SERVICE NUT



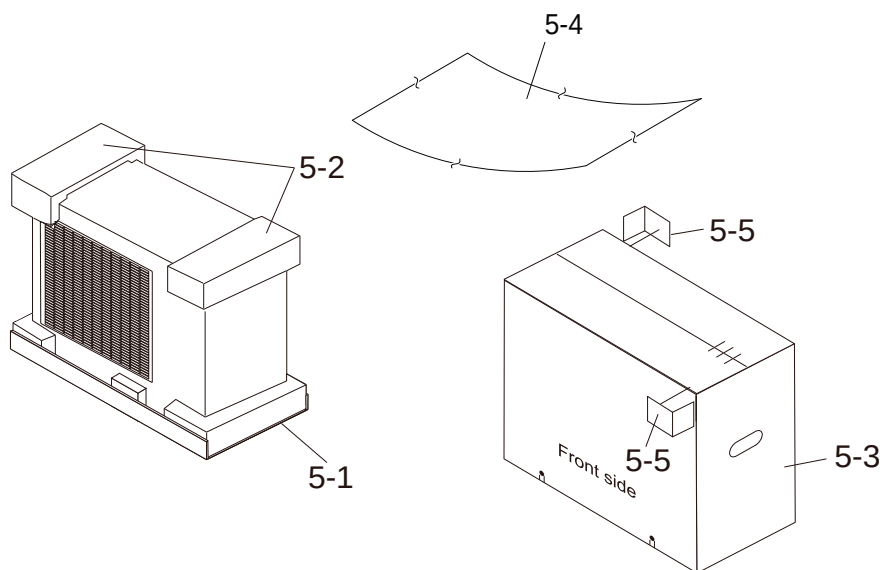


REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
PACKING PARTS				
5-1	CPADBA340JBKZ	AT		BOTTOM PAD ASS'Y
5-2	CPADBA032JBKZ	AL		PACKING PAD ASS'Y
5-3	SPAKCE852JBEZ	AW		PACKING CASE
5-4	SPADP0300YDE0	AB		BAG
5-5	TLABMH261JBRZ	AH	N	PRODUCT LABEL[CLC6101i 65 HE]
5-5	TLABMH307JBRZ	AH	N	PRODUCT LABEL[CLC6101i 50 HE]
5-5	TLABMH335JBRZ	AH	N	PRODUCT LABEL[CLC6001i 35 E]
5-5	TLABMH334JBRZ	AH	N	PRODUCT LABEL[CLC6001i 25 E]
ACCESSORY PARTS				
6-1	TINS-B856JBRZ	AD	N	PRODUCT FICHE
6-2	TLAB-J733JBEZ	AM	N	ENERGY LABEL[CLC6101i 65 HE]
6-2	TLAB-J741JBEZ	AM	N	ENERGY LABEL[CLC6101i 50 HE]
6-2	TLAB-J757JBEZ	AM	N	ENERGY LABEL[CLC6001i 35 E]
6-2	TLAB-J755JBEZ	AM	N	ENERGY LABEL[CLC6001i 25 E]

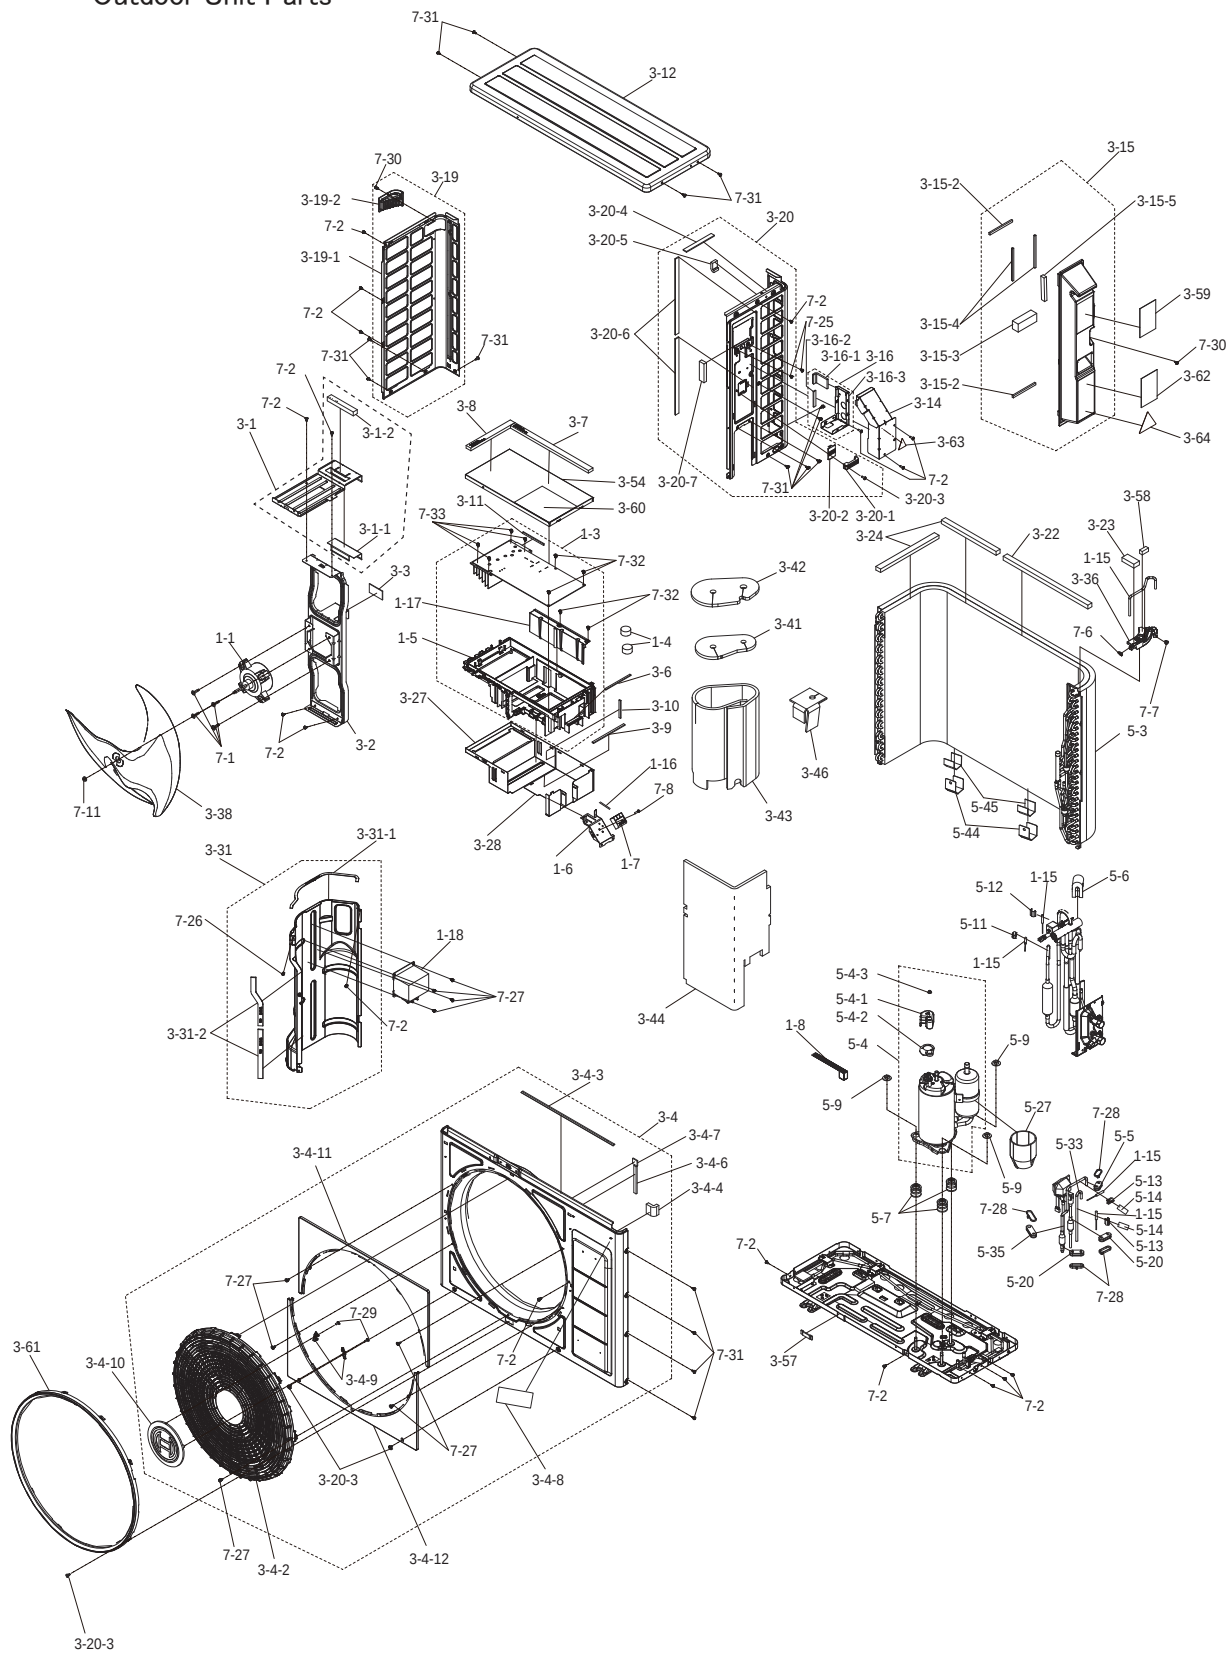
[4] OUTDOOR UNIT (CLC8101i_CLC8001i)**Outdoor Unit Parts**

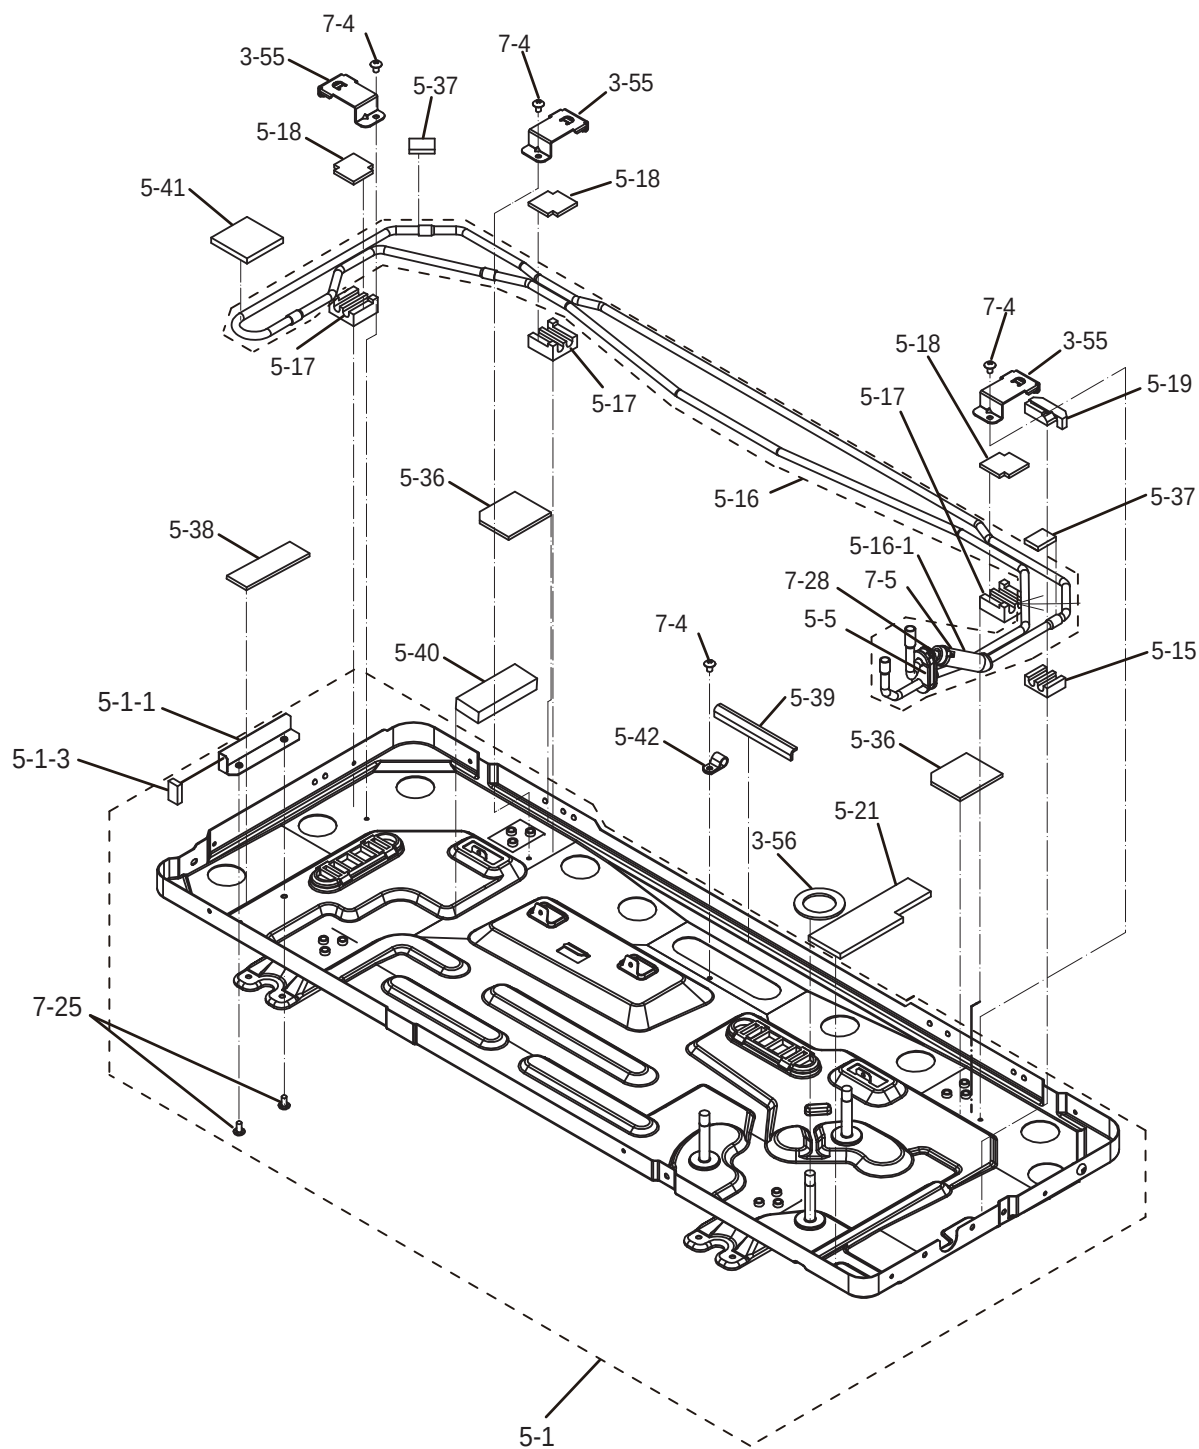

Reverse Value Ass'y

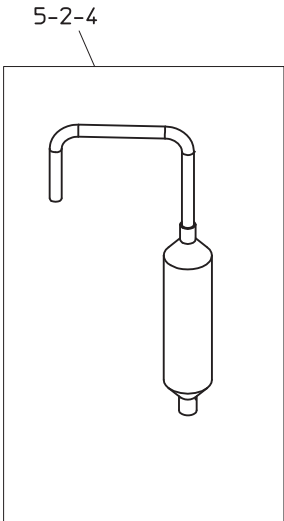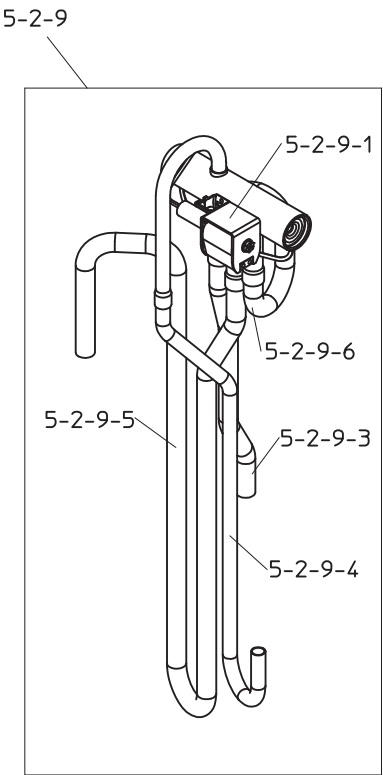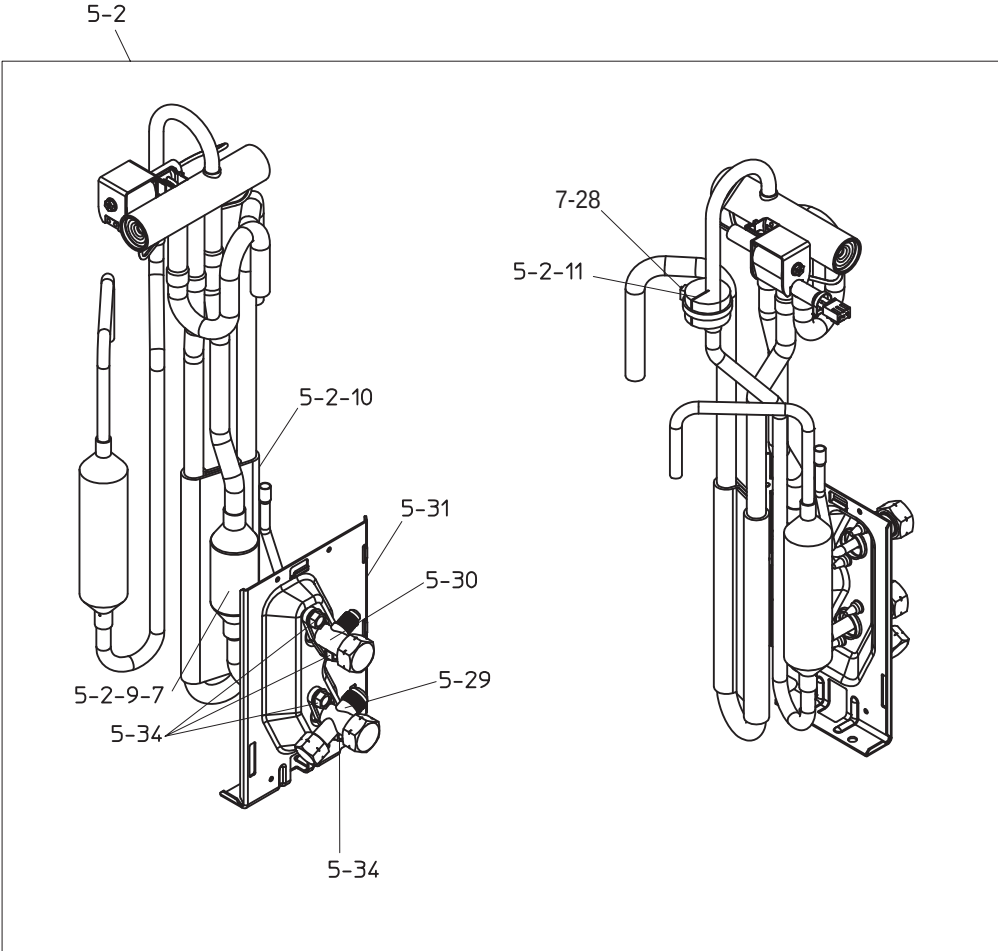

Expansion Value Ass’y

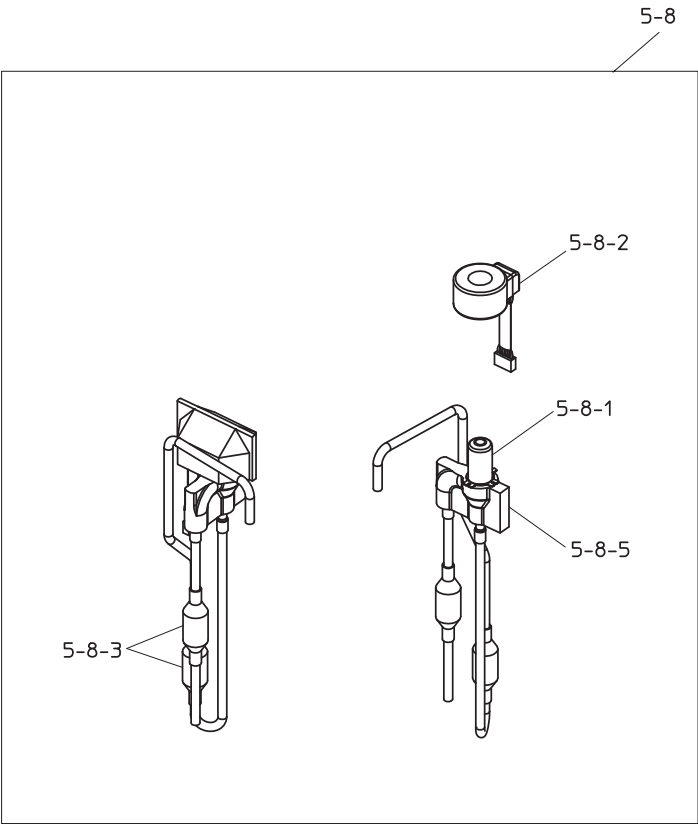


MODEL: CLC8101i 65 HE				
REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
[1] OUTDOOR CONTROL UNIT PARTS				
1-1	CMOTLB633JBEZ	BM		FAN MOTOR
1-3	DSGY-H751JBKZ	CB	N	SERVICE CONTROL BOARD UNIT
1-4	RFIL-A150JBEZ	AH		FERRITE CORE
1-5	LHLD-B522JBFZ	AK		HOLDER
1-6	PDAL-A354JBWZ	AF		TERMINAL HOLDER
1-7	QTANZA135JBZZ	AQ		TERMINAL BOARD
1-8	QW-IZA193JBZZ	AN		COMPRESSOR CORD
1-15	RH-HXA234JBZZ	BA		THERMISTOR
1-16	QW-VZH491JBZZ	AD		EARTH WIRE
1-17	PSPA-A251JBFZ	AH		PWB SPACER
1-18	RCILZA077JBZZ	BD		REACTOR
[2] OUTDOOR MECHANICAL PARTS				
3-1	DANG-A063JBKZ	AR		FAN MOTOR ANGLE ASS'Y
3-1-1	PSEL-E609JBEZ	AC		SEAL
3-1-2	PSEL-E610JBEZ	AB		SEAL
3-2	LANGKA365JBTA	AW		FAN MOTOR ANGLE
3-3	PSEL-E620JBEZ	AB		SEAL
3-4	CCAB-A733JBKZ	BR		FRONT CABINET ASS'Y
3-4-2	CCOV-A416JBKZ	BA		FAN GUARD ASS'Y
3-4-3	PSEL-E612JBEZ	AB		SEAL
3-4-4	PSEL-E613JBEZ	AB		SEAL
3-4-6	PSEL-E614JBEZ	AB		SEAL
3-4-7	PSEL-E615JBEZ	AB		SEAL
3-4-8	TLABBA325JBRA	AK		BOSCH LABEL
3-4-9	LHLD-B498JBFB	AE		DISC HOLDER
3-4-10	PCOV-C910JBRB	AT		CENTER DISC
3-4-11	CCOV-A418JBKZ	AS		COVER UP ASS'Y
3-4-12	PCOV-C913JBFA	AR		FRONT COVER DOWN
3-6	PSEL-E756JBEZ	AB		SEAL
3-7	PSEL-E618JBEZ	AC		SEAL
3-8	PSEL-E619JBEZ	AB		SEAL
3-9	PSEL-E639JBEZ	AB		SEAL
3-10	PSEL-E640JBEZ	AB		SEAL
3-11	PSEL-E636JBEZ	AB		SEAL
3-12	GCAB-A602JBTD	BA		TOP PLATE
3-14	PCOV-C489JBTA	AN		TERMINAL COVER
3-15	CFTA-A402JBKZ	AQ		SIDE COVER ASS'Y
3-15-2	PSEL-E611JBEZ	AB		SEAL
3-15-3	PSEL-E624JBEZ	AC		SEAL
3-15-4	PSEL-E637JBEZ	AB		SEAL
3-15-5	PSEL-E711JBEZ	AC		SEAL
3-16	CHLD-A234JBKZ	AM		CABLE HOLDER K
3-16-1	PSEL-E710JBEZ	AC		HOLDER SEAL A
3-16-2	PSEL-E712JBEZ	AB		HOLDER SEAL B
3-16-3	LHLD-B397JBTD	AK		CABLE HOLDER
3-19	CPLT-A341JBKZ	BA		SIDE COVER L ASS'Y
3-19-1	PPLT-B145JBTD	AY		SIDE COVER L
3-19-2	JHNDPA042JBFD	AE		GRIP
3-20	CPLT-A342JBKZ	BA		SIDE COVER R ASS'Y

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
3-20-1	LHLD-0079SRFZ	AC		CORD CLAMP
3-20-2	LHLD-A492JBFZ	AD		CORD CLAMP BASE
3-20-3	XCTS740P14000	AB		TAPPING SCREW
3-20-4	PSEL-E662JBEZ	AB		SEAL
3-20-5	PSEL-E616JBEZ	AB		SEAL
3-20-6	PSEL-E617JBEZ	AB		SEAL
3-20-7	PSEL-E997JBEZ	AB		SEAL
3-22	PFPFPF098JBEZ	AD		SEAL
3-23	PSEL-E663JBEZ	AB		SEAL
3-24	PFPFPF282JBEZ	AC		SEAL
3-27	PBOX-A618JBWZ	AM		CONTROL BOX L
3-28	PBOX-A619JBWZ	AK		CONTROL BOX R
3-31	CSKR-A612JBKZ	BB		BULKHEAD ASS'Y
3-31-1	PSEL-E669JBEZ	AB		SEAL
3-31-2	PSEL-E623JBEZ	AB		SEAL
3-36	LHLD-B371JBFZ	AE		THERMISTOR HOLDER
3-38	NFANPA160JBEZ	AV		PROPELLER FAN
3-41	PSPF-B526JBEZ	AM		COMPRESSOR COVER
3-42	PSPF-B527JBEZ	AP		COMPRESSOR COVER
3-43	PSPF-B525JBEZ	AM		COMPRESSOR COVER
3-44	PSPF-B528JBEZ	AZ		COMPRESSOR COVER
3-46	PSPF-B499JBEZ	AD		COVER
3-54	PCOV-C317JBWZ	AL		COVER
3-55	LANGKA369JBTA	AG		BASE PAN ANGLE
3-56	PGUMSA457JBEZ	AC		RUBBER WASHER
3-57	PSEL-E650JBEZ	AB		SEAL
3-58	PSEL-E664JBEZ	AB		SEAL
3-59	TSPC-M730JBRZ	AF	N	NAME LABEL
3-60	TLABCE368JBRZ	AC		WIRING DIAGRAM
3-61	PCOV-C917JBFA	AS		RING
3-62	TLAB-J731JBRZ	AD	N	F-GAS LABEL
3-63	TLAB-J577JBRZ	AC		DANGEROUS LABEL
3-64	TLAB-J444JBRA	AC		FIRE LABEL
[3] OUTDOOR CYCLE PARTS				
5-1	CCHS-B720JBKZ	BH		BASE PAN ASS'Y
5-1-1	LSUB-A046JBTA	AY		SHELTER
5-1-3	PSEL-E661JBEZ	AB		SEAL
5-2	CVLV-B529JBKZ	BS		REVERSE VALVE ASSY
5-2-4	CPIPCC411JBKZ	AY		DISCHARGE TUBE ASSY
5-2-9	DVLV-B755JBKZ	BM		REVERSE VALVE ASS'Y
5-2-9-1	CCIL-A204JBKZ	AY		COIL ASS'Y
5-2-9-3	PPIPCM441JBWZ	AQ		LEAD TUBE
5-2-9-4	PPIPCM626JBWZ	AQ		DISCHARGE TUBE B
5-2-9-5	PPIPCN768JBWZ	AW		SUCTION TUBE B
5-2-9-6	PPIPCM442JBWZ	AP		LEAD TUBE CON-IN
5-2-9-7	PMUF-A087JBEZ	AN		MUFFLER
5-2-10	PGUMSA470JBEZ	AH		DAMPER RUBBER
5-2-11	PGUM-A276JBEZ	AF		DAMPER RUBBER
5-3	DCON-A890JBPZ	CN		CONDENSER ASSY
5-4	FCMPRA479JBKZ	CB		COMPRESSOR ASS'Y
5-4-1	PCOV-C854JBEZ	AP		TERMINAL COVER
5-4-2	PGUM-A292JBEZ	AP		TERMINAL GASKET

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
5-4-3	LX-NZA476JBEZ	AC		SPECIAL NUT
5-5	PGUM-A264JBEZ	AE		DAMPER RUBBER
5-6	PGUMSA428JBEZ	AF		DAMPER RUBBER
5-7	GLEG-A191JBEZ	AB		COMPRESSOR CUSHION
5-8	DVLV-B740JBKZ	BF		EXPAN.VALVE ASS'Y
5-8-1	PVLVRA060JBEZ	AX		VALVE BASE
5-8-2	RMOTSA073JBZZ	AV		VALVE MOTOR
5-8-3	PSRN-A102JBEZ	AF		STRAINER
5-8-5	PGUMSA421JBEZ	AE		DAMPER RUBBER
5-9	LX-NZA313JBEZ	AE		SPECIAL NUT
5-11	MSPR-A208JBEZ	AD		SPRING
5-12	MSPR-A212JBEZ	AE		THERMISTOR SPRING
5-13	MSPR-A195JBEZ	AF		THERMISTOR SPRING
5-14	PSEL-E607JBEZ	AD		THERMISTOR SEAL
5-15	PGUM-A203JBEZ	AD		TUBE HOLDER RUBBER
5-16	CPIPCC175JBKZ	BA		HEAT TUBE ASS'Y
5-16-1	PFPF210JBEZ	AE		INSULATOR
5-17	PGUM-A268JBEZ	AE		TUBE HOLDER RUBBER
5-18	PGUM-A269JBEZ	AE		HOLDER RUBBER
5-19	PGUM-A270JBEZ	AG		HOLDER RUBBER
5-20	PGUM-A271JBEZ	AE		DAMPER RUBBER
5-21	PGUM-A272JBEZ	AK		DAMPER RUBBER
5-27	PFPF216JBEZ	AE		INSULATOR
5-29	DVLV-B532JBKZ	AW		3WAY VALVE UNIT
5-30	DVLV-B556JBKZ	AW		2WAY VALVE UNIT
5-31	PDAI-A334JBTD	AN		FLARE COUPLING BASE
5-33	PPIPCN156JBWZ	AE		LEAD TUBE
5-34	LX-BZA488JBEZ	AC		SPECIAL SCREW
5-35	PGUM-A144JBEZ	AD		DAMPER RUBBER
5-36	PFPF306JBEZ	AB		BASE PAN INSU. A
5-37	PFPF307JBEZ	AB		SEAL
5-38	PFPF308JBEZ	AB		BASE PAN INSU. B
5-39	PFPF309JBEZ	AB		BASE PAN INSU. C
5-40	PSEL-E427JBEZ	AB		MOTOR ANG SEAL
5-41	PGUMSA392JBEZ	AD		DAMPER RUBBER
5-42	LHLDWA057JBEZ	AF		WIRE HOLDER
5-44	LANGKA385JBTA	AK		ANGLE
5-45	PSEL-E801JBEZ	AB		SEAL
[4] OUTDOOR SCREWS AND NUTS				
7-1	LX-BZA485JBEZ	AD		SPECIAL SCREW
7-2	LX-BZA182JBE0	AB		SPECIAL SCREW
7-4	XCTWW40P06000	AA		TAPPING SCREW
7-5	LBND-0037QBE0	AB		UNITY BAND
7-6	LBND-A047JBE0	AB		WIRE FIXING BAND
7-7	LBND-A077JBE0	AC		WIRE FIXING BAND
7-8	XCPS740P25000	AD		TAPPING SCREW
7-11	LX-NZA412JBEZ	AC		SPECIAL NUT
7-25	LX-CZA013JBE0	AH		SPECIAL SCREW
7-26	LX-BZA284JBEZ	AB		SPECIAL SCREW
7-27	LX-BZA351JBEZ	AD		SPECIAL SCREW
7-28	LBND-A072JBE0	AC		WIRE FIXING BAND
7-29	XTTS740P12000	AC		TAPPING SCREW

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
7-30	LX-BZA447JBEZ	AC		HEX SCREW 4-10
7-31	LX-BZA571JBEZ	AB		HEX SCREW 4-10
3-20-3	XCTS740P14000	AB		TAPPING SCREW
7-32	XCPS730P10XS0	AD		TAPPING SCREW
7-33	XCPS730P14XS0	AB		TAPPING SCREW

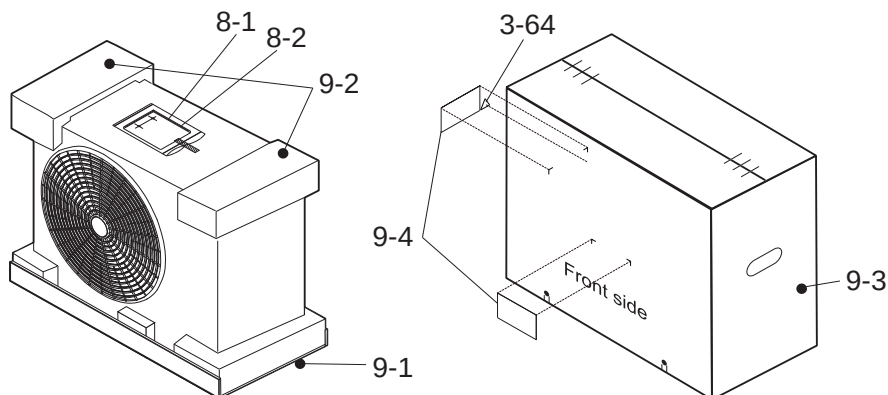


REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
[5] OUTDOOR ACCESSORY PARTS				
8-1	TINS-B854JBRZ	AF	N	PRODUCT FICHE SHEET
8-2	TLAB-J732JBEZ	AM	N	EU ENERGY LABEL
[6] OUTDOOR PACKING PARTS				
9-1	CPADBA336JBKZ	AT		BOTTOM PAD ASS'Y
9-2	CPADBA270JBKZ	AP		TOP PAD K
9-3	SPAKCE858JBEZ	AW		PACKING CASE
9-4	TLABMH242JBRZ	AG	N	MODEL CODE LABEL

MODEL: CLC8001i 25 E CLC8001i 35 E				
REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
[1] OUTDOOR CONTROL UNIT PARTS				
1-1	CMOTLB633JBEZ	BM		FAN MOTOR
1-3	DSGY-H752JBKZ	CB	N	SERVICE CONTROL BOARD UNIT
1-3	DSGY-H753JBKZ	CB	N	SERVICE CONTROL BOARD UNIT
1-4	RFIL-A150JBEZ	AH		FERRITE CORE
1-5	LHLD-B522JBFZ	AK		HOLDER
1-6	PDAI-A354JBWZ	AF		TERMINAL HOLDER
1-7	QTANZA135JBZZ	AQ		TERMINAL BOARD
1-8	QW-IZA193JBZZ	AN		COMPRESSOR CORD
1-15	RH-HXA234JBZZ	BA		THERMISTOR
1-16	QW-VZH491JBZZ	AD		EARTH WIRE
1-17	PSPA-A251JBFZ	AH		PWB SPACER
1-18	RCILZA077JBZZ	BD		REACTOR
[2] OUTDOOR MECHANICAL PARTS				
3-1	DANG-A063JBKZ	AR		FAN MOTOR ANGLE ASS'Y
3-1-1	PSEL-E609JBEZ	AC		SEAL
3-1-2	PSEL-E610JBEZ	AB		SEAL
3-2	LANGKA365JBTA	AW		FAN MOTOR ANGLE
3-3	PSEL-E620JBEZ	AB		SEAL
3-4	CCAB-A733JBKZ	BR		FRONT CABINET ASS'Y
3-4-2	CCOV-A416JBKZ	BA		FAN GUARD ASS'Y
3-4-3	PSEL-E612JBEZ	AB		SEAL
3-4-4	PSEL-E613JBEZ	AB		SEAL
3-4-6	PSEL-E614JBEZ	AB		SEAL
3-4-7	PSEL-E615JBEZ	AB		SEAL
3-4-8	TLABBA325JBRA	AK		BOSCH LABEL
3-4-9	LHLD-B498JBFB	AE		DISC HOLDER
3-4-10	PCOV-C910JBRB	AT		CENTER DISC
3-4-11	CCOV-A418JBKZ	AS		COVER UP ASS'Y
3-4-12	PCOV-C913JBFA	AR		FRONT COVER DOWN
3-6	PSEL-E756JBEZ	AB		SEAL
3-7	PSEL-E618JBEZ	AC		SEAL
3-8	PSEL-E619JBEZ	AB		SEAL
3-9	PSEL-E639JBEZ	AB		SEAL
3-10	PSEL-E640JBEZ	AB		SEAL
3-11	PSEL-E636JBEZ	AB		SEAL
3-12	GCAB-A602JBTD	BA		TOP PLATE
3-14	PCOV-C489JBTA	AN		TERMINAL COVER
3-15	CFTA-A402JBKZ	AQ		SIDE COVER ASS'Y
3-15-2	PSEL-E611JBEZ	AB		SEAL
3-15-3	PSEL-E624JBEZ	AC		SEAL
3-15-4	PSEL-E637JBEZ	AB		SEAL
3-15-5	PSEL-E711JBEZ	AC		SEAL
3-16	CHLD-A234JBKZ	AM		CABLE HOLDER K
3-16-1	PSEL-E710JBEZ	AC		HOLDER SEAL A
3-16-2	PSEL-E712JBEZ	AB		HOLDER SEAL B
3-16-3	LHLD-B397JBTD	AK		CABLE HOLDER
3-19	CPLT-A341JBKZ	BA		SIDE COVER L ASS'Y
3-19-1	PPLT-B145JBTD	AY		SIDE COVER L

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
3-19-2	JHNDPA042JBFD	AE		GRIP
3-20	CPLT-A342JBKZ	BA		SIDE COVER R ASS'Y
3-20-1	LHLD-0079SRFZ	AC		CORD CLAMP
3-20-2	LHLD-A492JBFZ	AD		CORD CLAMP BASE
3-20-3	XCTS740P14000	AB		TAPPING SCREW
3-20-4	PSEL-E662JBEZ	AB		SEAL
3-20-5	PSEL-E616JBEZ	AB		SEAL
3-20-6	PSEL-E617JBEZ	AB		SEAL
3-20-7	PSEL-E997JBEZ	AB		SEAL
3-22	PFPFPF098JBEZ	AD		SEAL
3-23	PSEL-E663JBEZ	AB		SEAL
3-24	PFPFPF282JBEZ	AC		SEAL
3-27	PBOX-A618JBWZ	AM		CONTROL BOX L
3-28	PBOX-A619JBWZ	AK		CONTROL BOX R
3-31	CSKR-A612JBKZ	BB		BULKHEAD ASS'Y
3-31-1	PSEL-E669JBEZ	AB		SEAL
3-31-2	PSEL-E623JBEZ	AB		SEAL
3-36	LHLD-B371JBFZ	AE		THERMISTOR HOLDER
3-38	NFANPA160JBEZ	AV		PROPELLER FAN
3-41	PSPF-B526JBEZ	AM		COMPRESSOR COVER
3-42	PSPF-B527JBEZ	AP		COMPRESSOR COVER
3-43	PSPF-B525JBEZ	AM		COMPRESSOR COVER
3-44	PSPF-B528JBEZ	AZ		COMPRESSOR COVER
3-46	PSPF-B499JBEZ	AD		COVER
3-54	PCOV-C317JBWZ	AL		COVER
3-56	PGUMSA457JBEZ	AC		RUBBER WASHER
3-57	PSEL-E650JBEZ	AB		SEAL
3-58	PSEL-E664JBEZ	AB		SEAL
3-59	TSPC-M781JBRZ	AF		NAME LABEL [CLC8001i 35 E]
3-59	TSPC-M783JBRZ	AF		NAME LABEL [CLC8001i 25 E]
3-60	TLABCE368JBRZ	AC		WIRING DIAGRAM
3-61	PCOV-C917JBFA	AS		RING
3-62	TLAB-J731JBRZ	AD		F-GAS LABEL
3-63	TLAB-J577JBRZ	AC		DANGEROUS LABEL
3-64	TLAB-J444JBRA	AC		FIRE LABEL
[3] OUTDOOR CYCLE PARTS				
5-1	CCHS-B724JBKZ	BH		BASE PAN ASS'Y
5-2	CVLV-B532JBKZ	BV		REVERSE VALVE ASSY
5-2-4	CPIPCC411JBKZ	AY		DISCHARGE TUBE ASSY
5-2-9	DVLV-B755JBKZ	BM		REVERSE VALVE ASS'Y
5-2-9-1	CCIL-A204JBKZ	AY		COIL ASS'Y
5-2-9-3	PPIPCM441JBWZ	AQ		LEAD TUBE
5-2-9-4	PPIPCM626JBWZ	AQ		DISCHARGE TUBE B
5-2-9-5	PPIPCN768JBWZ	AW		SUCTION TUBE B
5-2-9-6	PPIPCM442JBWZ	AP		LEAD TUBE CON-IN
5-2-9-7	PMUF-A087JBEZ	AN		MUFFLER
5-2-10	PGUMSA470JBEZ	AH		DAMPER RUBBER
5-2-11	PGUM-A276JBEZ	AF		DAMPER RUBBER
5-3	DCON-A890JBPZ	CN		CONDENSER ASSY
5-4	FCMPRA479JBKZ	CB		COMPRESSOR ASS'Y
5-4-1	PCOV-C854JBEZ	AP		TERMINAL COVER

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
5-4-2	PGUM-A292JBEZ	AP		TERMINAL GASKET
5-4-3	LX-NZA476JBEZ	AC		SPECIAL NUT
5-5	PGUM-A264JBEZ	AE		DAMPER RUBBER
5-6	PGUMSA428JBEZ	AF		DAMPER RUBBER
5-7	GLEG-A191JBEZ	AB		COMPRESSOR CUSHION
5-8	DVLV-B751JBKZ	BF		EXPAN.VALVE ASS'Y
5-8-1	PVLVRA060JBEZ	AX		VALVE BASE
5-8-2	RMOTSA073JBZZ	AV		VALVE MOTOR
5-8-3	PSRN-A102JBEZ	AF		STRAINER
5-8-5	PGUMSA421JBEZ	AE		DAMPER RUBBER
5-9	LX-NZA313JBEZ	AE		SPECIAL NUT
5-11	MSPR-A208JBEZ	AD		SPRING
5-12	MSPR-A212JBEZ	AE		THERMISTOR SPRING
5-13	MSPR-A195JBEZ	AF		THERMISTOR SPRING
5-14	PSEL-E607JBEZ	AD		THERMISTOR SEAL
5-20	PGUM-A271JBEZ	AE		DAMPER RUBBER
5-29	DVLV-B532JBKZ	AW		3WAY VALVE UNIT
5-30	DVLV-B556JBKZ	AW		2WAY VALVE UNIT
5-31	PDAI-A334JBTD	AN		FLARE COUPLING BASE
5-33	PPIPNC156JBWZ	AE		LEAD TUBE
5-34	LX-BZA488JBEZ	AC		SPECIAL SCREW
5-35	PGUM-A144JBEZ	AD		DAMPER RUBBER
5-43	LANGKA366JBTA	AG		BASE PAN ANGLE
[4] OUTDOOR SCREWS AND NUTS				
7-1	LX-BZA485JBEZ	AD		SPECIAL SCREW
7-2	LX-BZA182JBE0	AB		SPECIAL SCREW
7-5	LBND-0037QBE0	AB		UNITY BAND
7-6	LBND-A047JBE0	AB		WIRE FIXING BAND
7-7	LBND-A077JBE0	AC		WIRE FIXING BAND
7-8	XCPS740P25000	AD		TAPPING SCREW
7-11	LX-NZA412JBEZ	AC		SPECIAL NUT
7-25	LX-CZA013JBE0	AH		SPECIAL SCREW
7-26	LX-BZA284JBEZ	AB		SPECIAL SCREW
7-27	LX-BZA351JBEZ	AD		SPECIAL SCREW
7-28	LBND-A072JBE0	AC		WIRE FIXING BAND
7-29	XTTS740P12000	AC		TAPPING SCREW
7-30	LX-BZA447JBEZ	AC		HEX SCREW 4-10
7-31	LX-BZA571JBEZ	AB		HEX SCREW 4-10
3-20-3	XCTS740P14000	AB		TAPPING SCREW
7-32	XCPS730P10XS0	AD		TAPPING SCREW
7-33	XCPS730P14XS0	AB		TAPPING SCREW

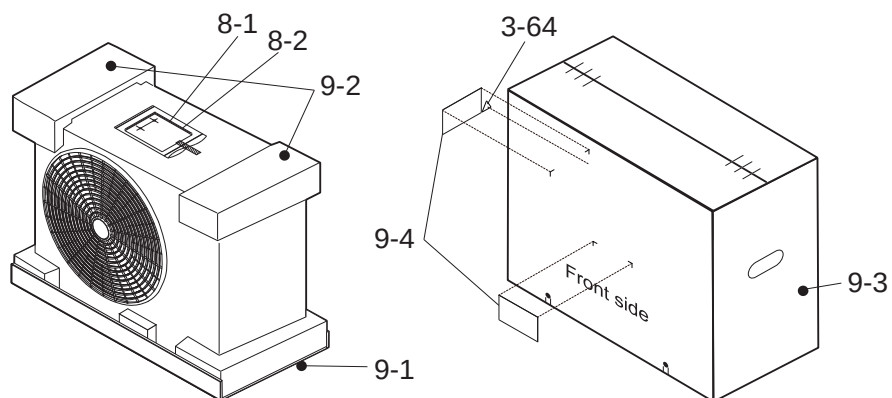

REF. No.	PARTS CODE	PRICE RANK	NEW MARK	DESCRIPTION
[5] OUTDOOR ACCESSORY PARTS				
8-1	TINS-B854JBRZ	AF	N	PRODUCT FICHE SHEET
8-2	TLAB-J748JBEZ	AF	N	EU ENERGY LABEL [CLC8001i 35 E]
8-2	TLAB-J750JBEZ	AF	N	EU ENERGY LABEL [CLC8001i 25 E]
[6] OUTDOOR PACKING PARTS				
9-1	CPADBA336JBKZ	AT		BOTTOM PAD ASS'Y
9-2	CPADBA270JBKZ	AP		TOP PAD K
9-3	SPAKCE858JBEZ	AW		PACKING CASE
9-4	TLABMH330JBRZ	AG	N	MODEL CODE LABEL [CLC8001i 35 E]
9-4	TLABMH332JBRZ	AG	N	MODEL CODE LABEL [CLC8001i 25 E]

Failure diagnosis flowchart

Table of contents

Error code	Contents
1	Short circuit of ODU thermistor
2	Overheat error (Compressor or cycle)
5	Open circuit of ODU thermistor
6	DC current error
7	AC current error
9	Cycle error
11	ODU fan motor error
13	Compressor rotation error
14	PAM error
17	Serial open circuit error
18	Serial short circuit error
19	Indoor unit fan error
24-0	WLAN module communication error
24-1	WLAN router connection error
26-1	Indoor room temperature thermistor error
26-2	Indoor pipe temperature thermistor error

Error Code

1

Short circuit of ODU thermistor

1-0 Heat exchanger thermistor short-circuit(Orange)
 1-1 Outside air temperature thermistor short-circuit(Green)
 1-2 Suction thermistor short-circuit(Black)
 1-3 2-way valve thermistor short-circuit(Yellow)
 1-4 Heat sink thermistor short-circuit

☆ Check the thermistor short-circuit.

◇ Main cause

- The lead wire sheath of the ODU thermistor has been damaged due to edge or long-time friction by vibration, and the wire touches the pipe, etc.

Air conditioner operation stopped
with error 1

Check if the resistance of each ODU thermistor is
correct as shown in graph below.
(First remove the connector from the PWB, and
then measure the resistance.)


No

Yes

Replace ODU PWB

Replace ODU thermistor

R-T characteristics of ODU thermistor

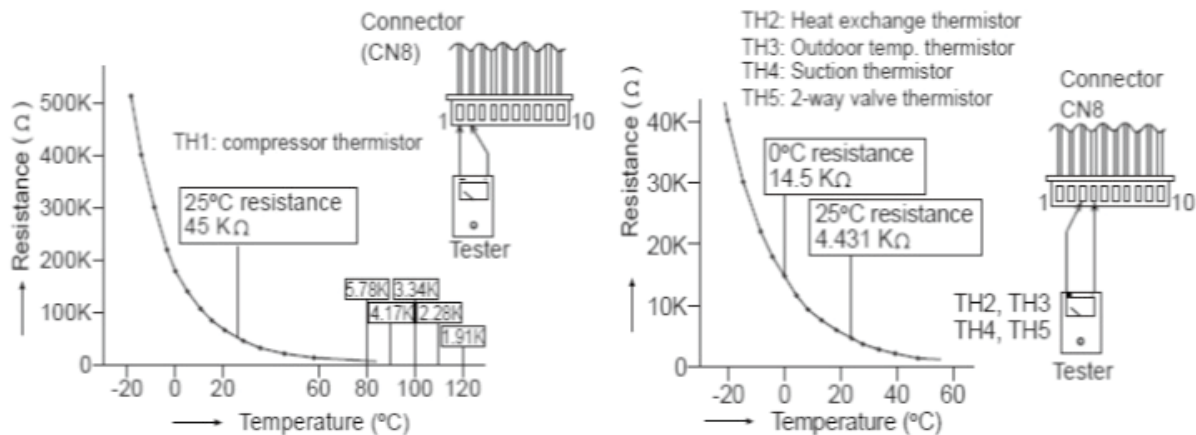


Error Code**2****Overheat error
(Compressor or cycle)**

2-0 Compressor high temperature error
 2-1 Compressor discharge overheat
 2-2 Outdoor unit pipe overheat
 2-3 Indoor unit pipe overheat
 2-5 IPM high temperature error

☆ Check the failure of compressor

◇ Main cause

- Temperature of compressor or cycle parts becomes too high.

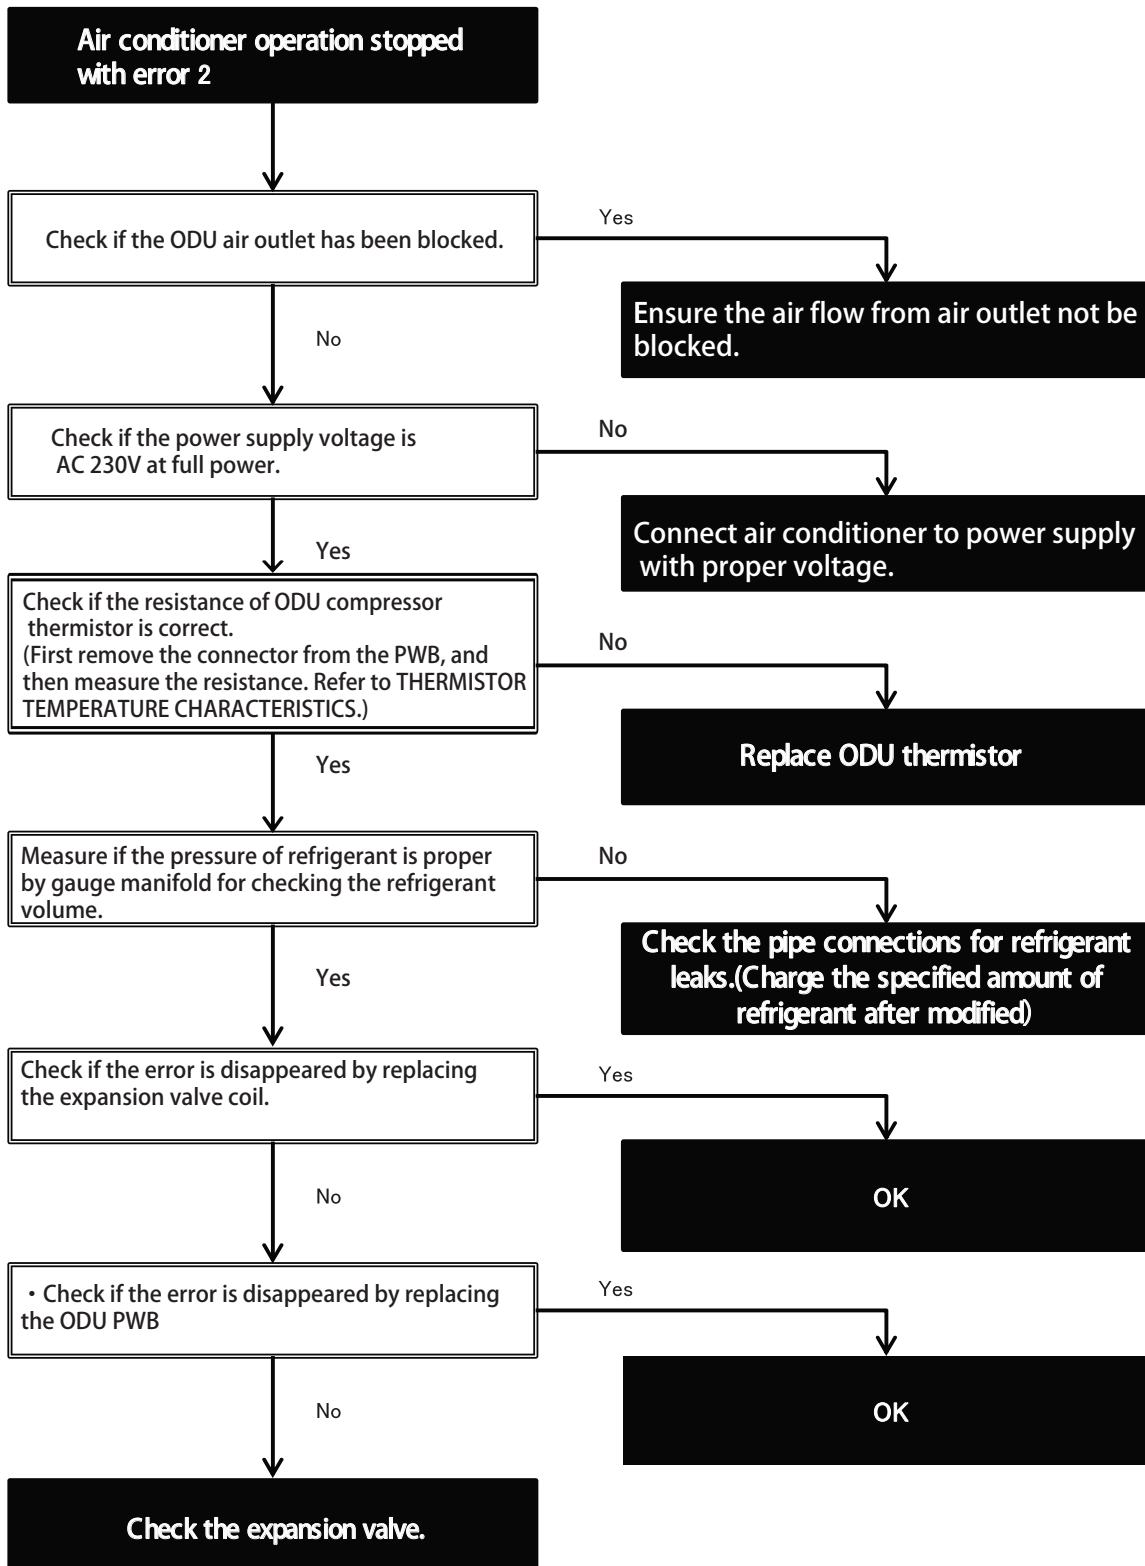

Error Code

5




Open circuit of ODU thermistor

5-0	Heat exchanger thermistor open-circuit(Orange)
5-1	Outside air temperature thermistor open-circuit(Green)
5-2	Suction thermistor open-circuit(Black)
5-3	2-way valve thermistor open-circuit(Yellow)
5-4	Compressor thermistor open-circuit(Red)
5-5	Heat sink thermistor open-circuit

☆ Check the thermistor open-circuit.

◇ Main cause

- The lead wire of ODU thermistor has broken due to the edge or vibration.
- The attachment of connector has broken by inside tension due to unsuitable wiring process.

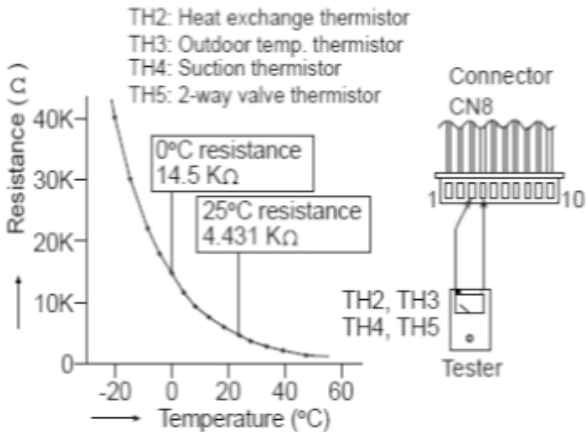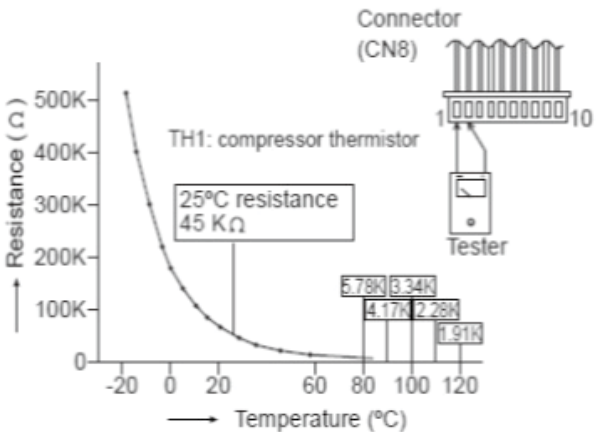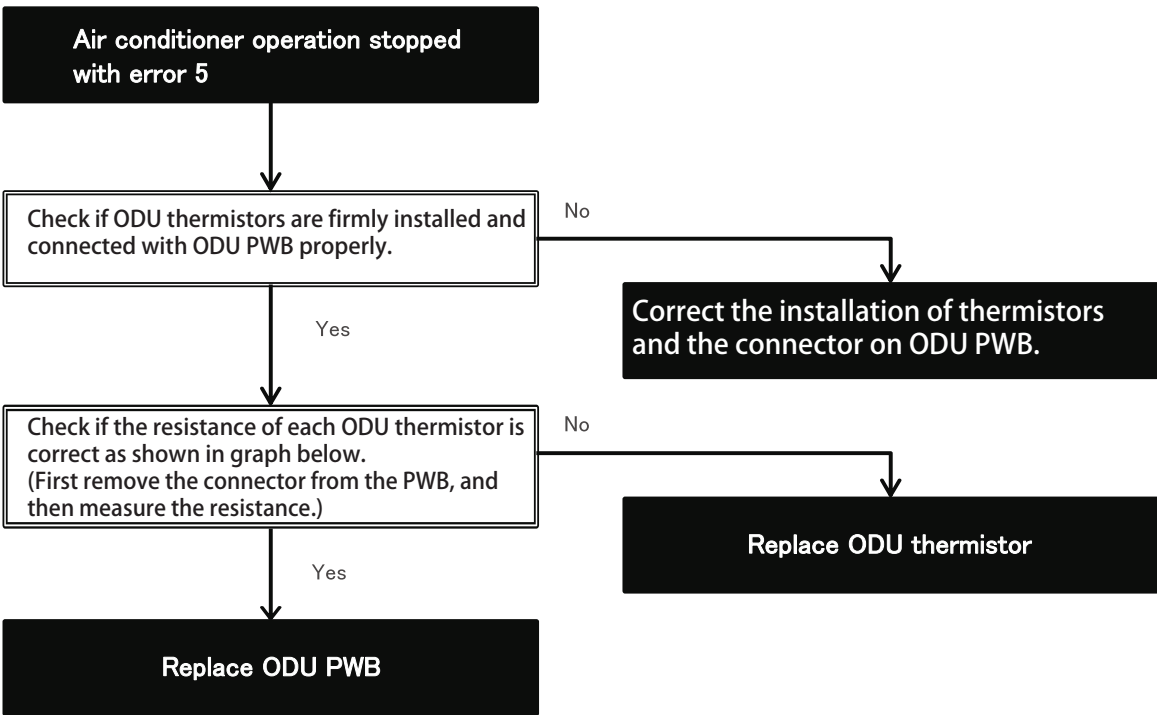


Error Code

6

DC current error (1/4)

6-0 DC current error


☆Check the cause due to compressor or PWB.

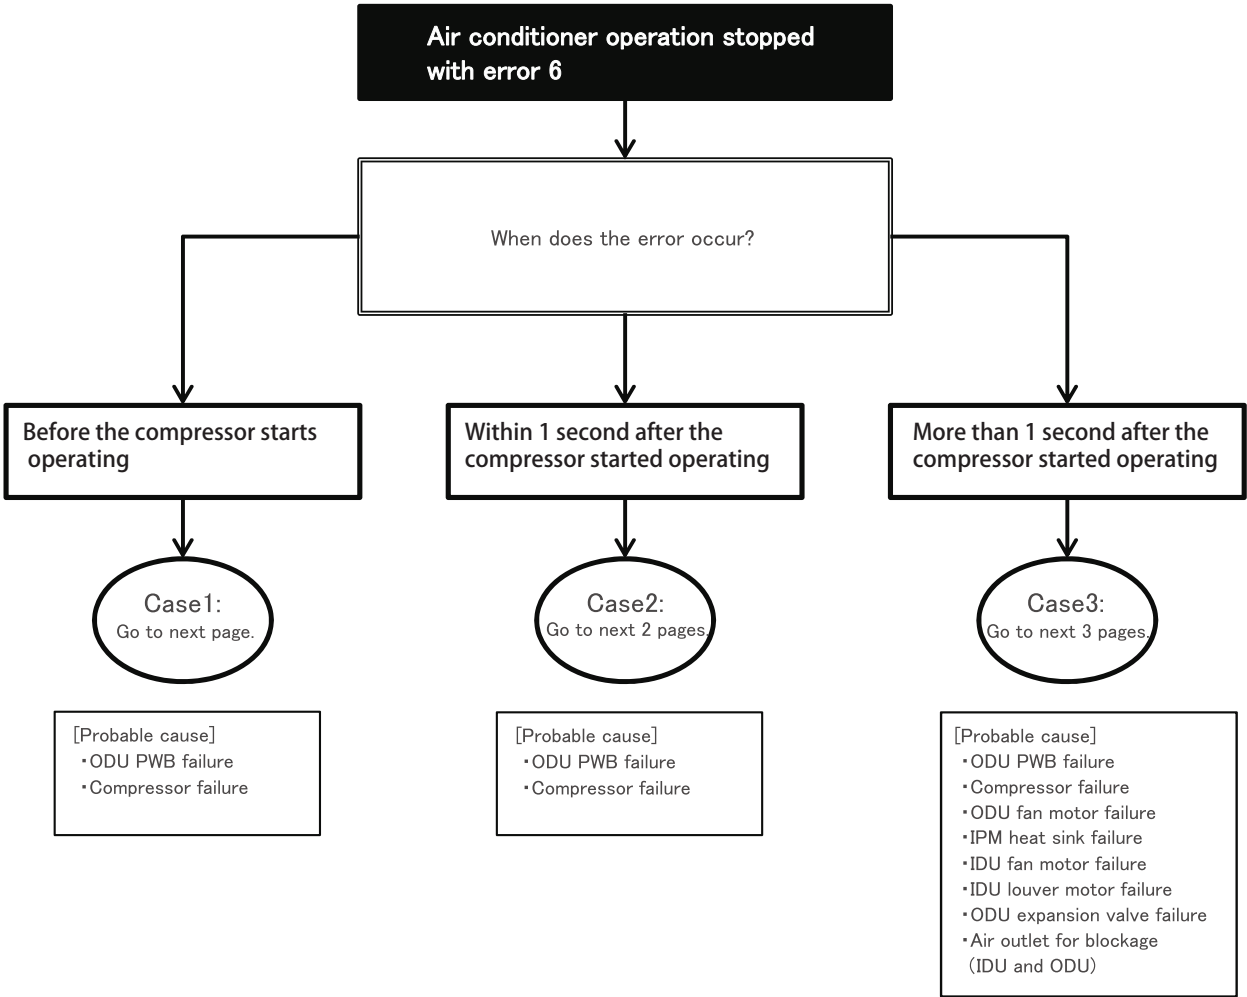

Error Code	DC current error (2/4)	6—0 DC current error
6		

☆ Check the cause due to compressor or PWB.

【Case 1】

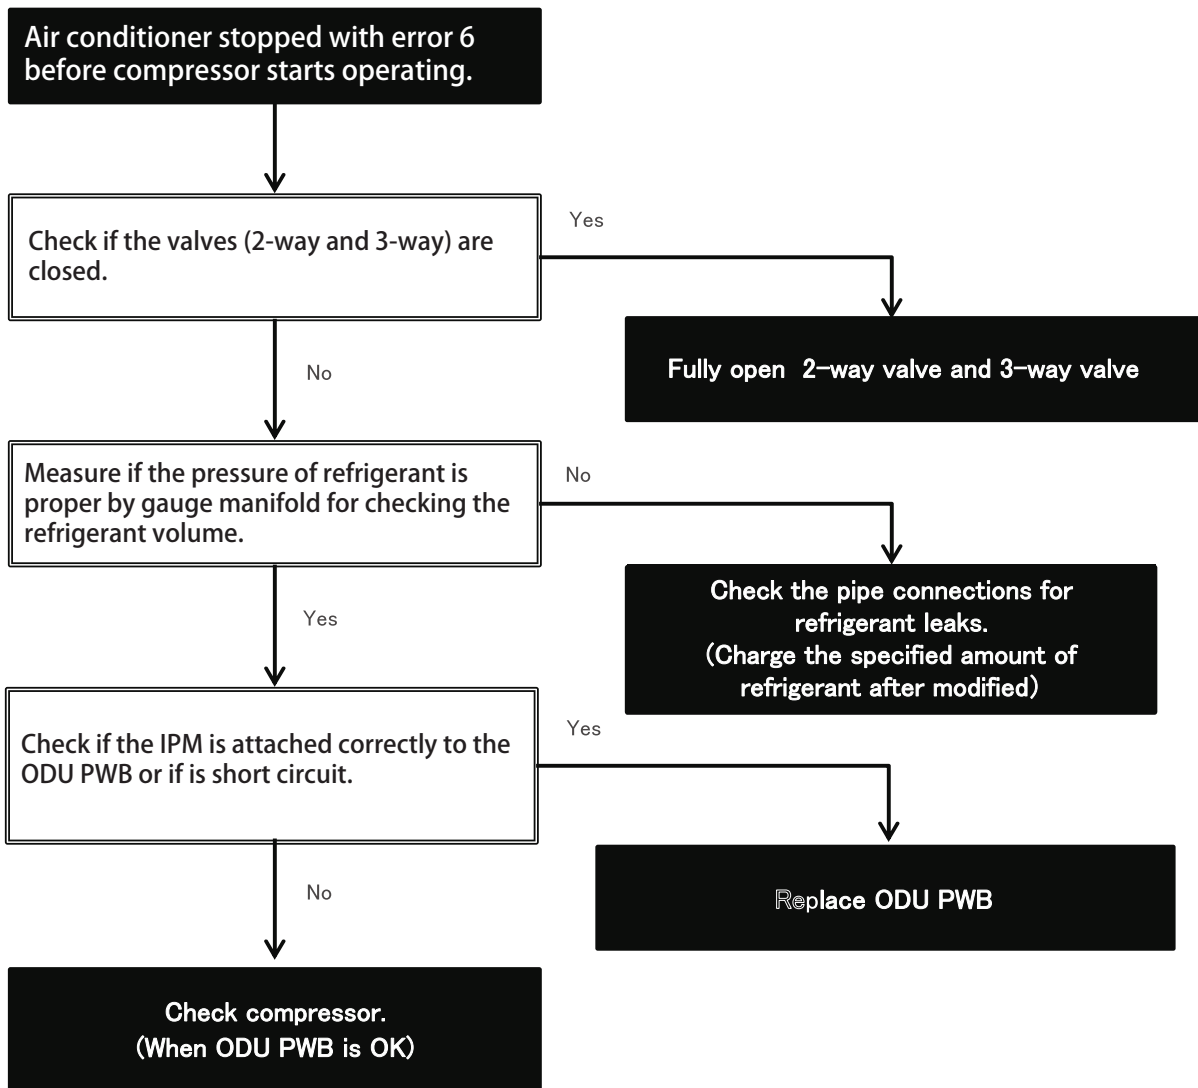

Error Code

6

DC current error (3/4)

6—0 DC current error

☆Check the cause due to compressor or PWB.

【Case2】

Air conditioner stopped with error 6 within 1 second after the compressor started operating.

Check if the power supply voltage is within rated voltage $\pm 10\%$.

No

Connect air conditioner to power supply with proper voltage.

Yes

Check if the valves (2-way and 3-way) are closed.

Yes

Fully open 2-way valve and 3-way valve

No

Measure if the pressure of refrigerant is proper by gauge manifold for checking the refrigerant volume.

No

Check the pipe connections for refrigerant leaks.
(Charge the specified amount of refrigerant after modified)

Yes


Check compressor.
(When ODU PWB is OK)

Error Code	DC current error (4/4)	6—0 DC current error
6		

☆ Check the cause due to compressor or PWB.

【Case3】

Air conditioner stopped with error 6 when more than 1 second after the compressor started operating

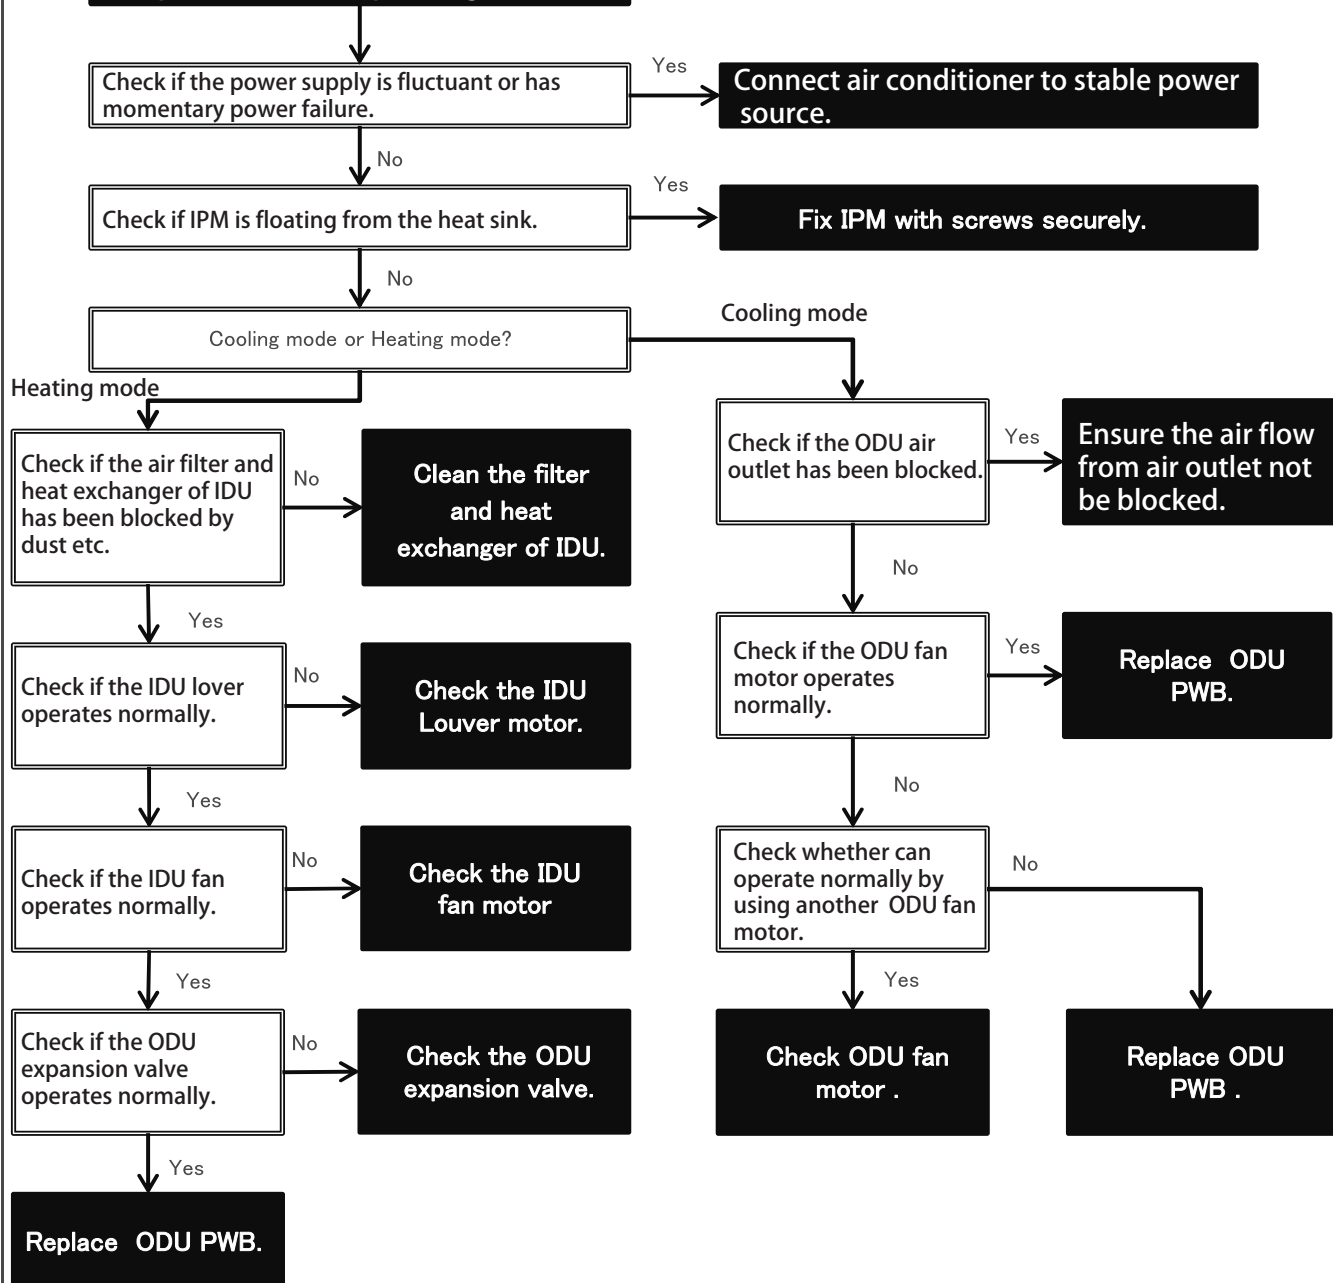


Error Code

7

AC current error


7-0 AC over current error
 7-1 AC current error when compressor OFF
 7-2 AC maximum current error
 7-3 AC current deficiency error

☆ Check the cause due to PWB or another parts.

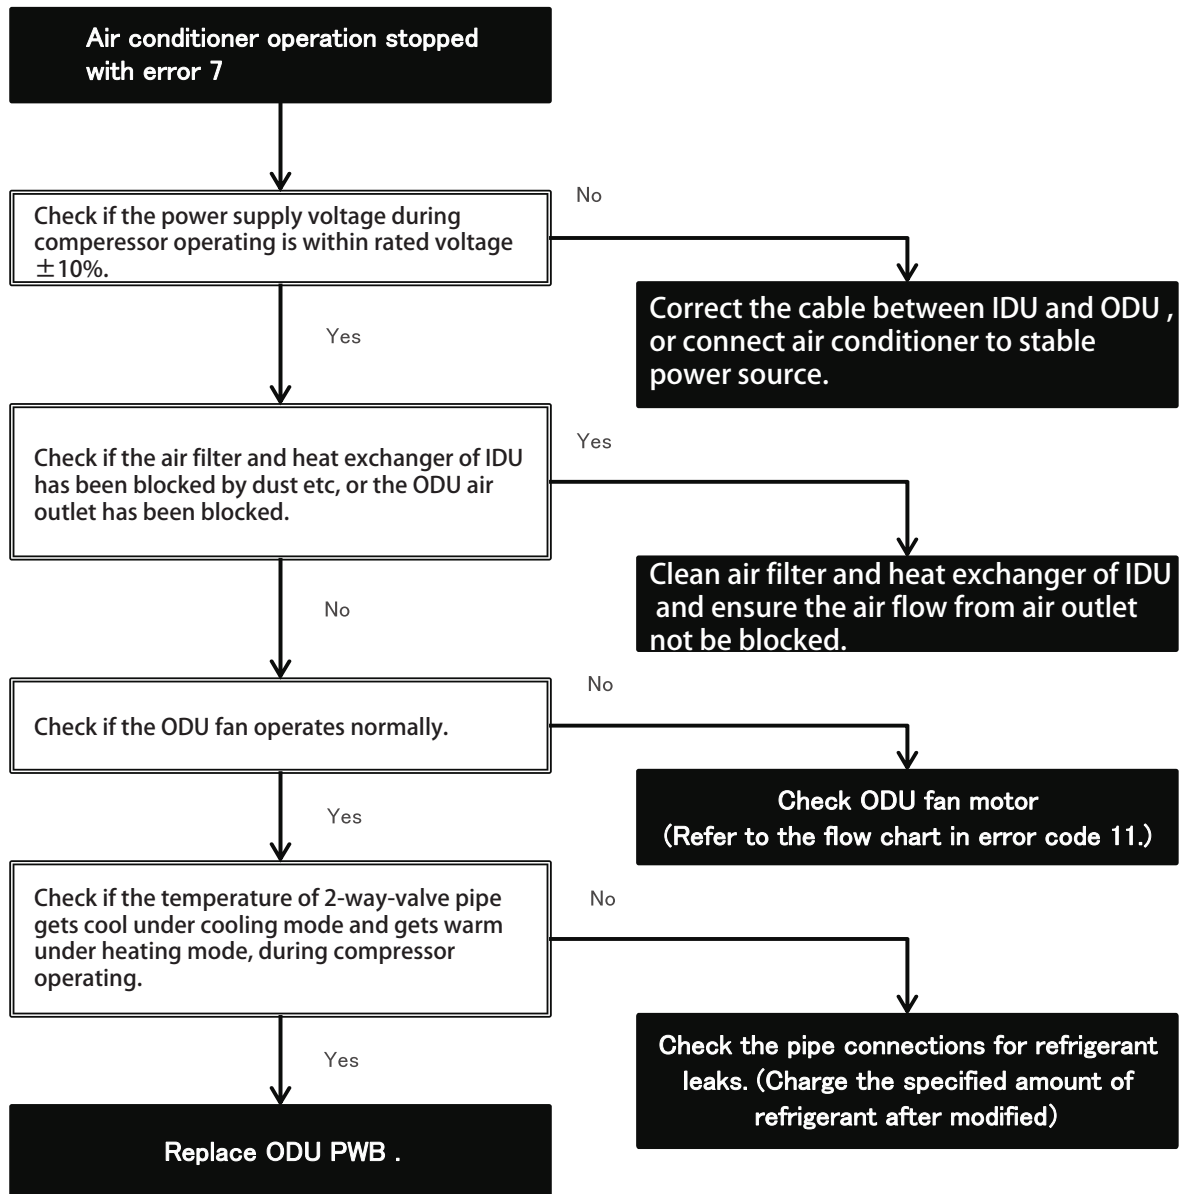

Error Code		
9	Cycle error (1/3)	9-0 4-way valve error 9-4 gas leak error

☆Check the cause due to PWB or another parts.

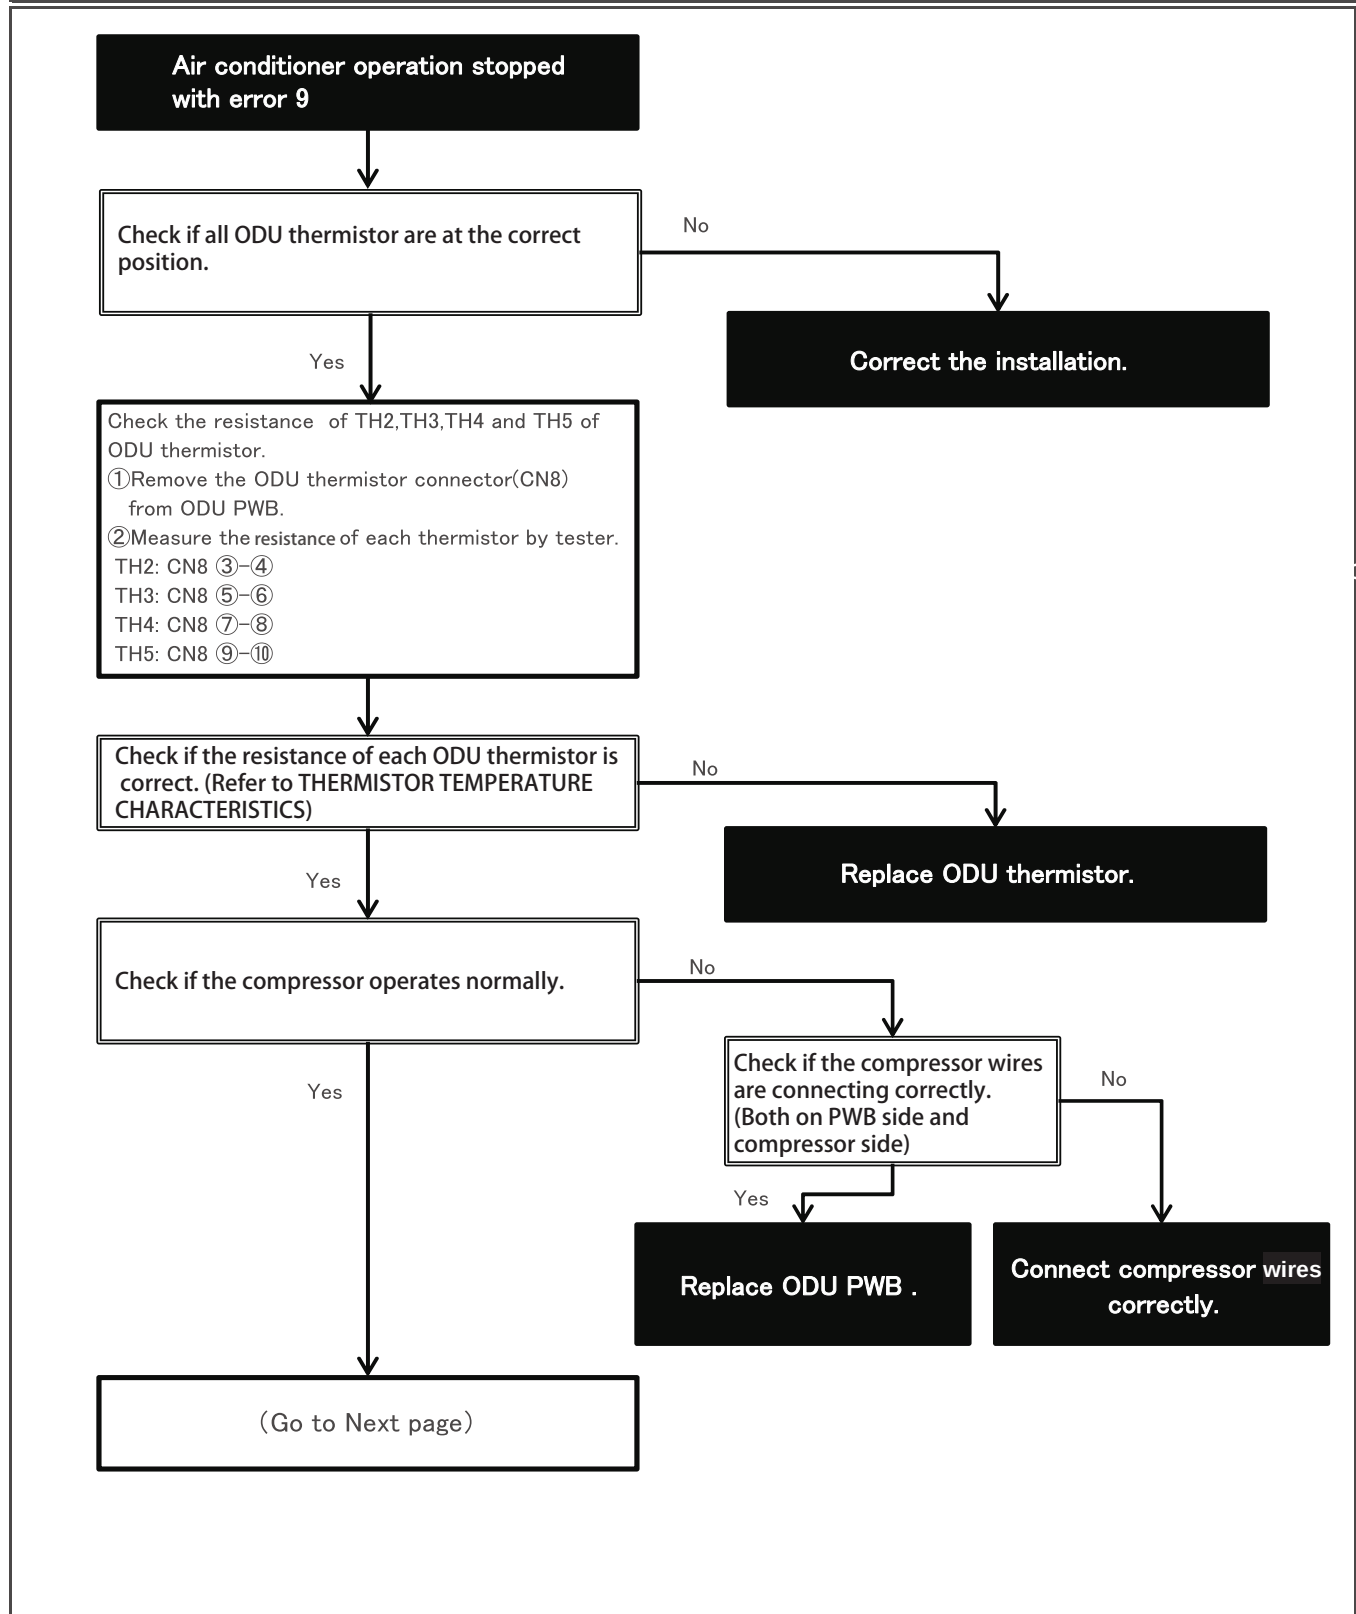


Error Code

9

Cycle error (2/3)

9-0 4-way valve error
9-4 gas leak error

☆Check the cause due to PWB or another parts.

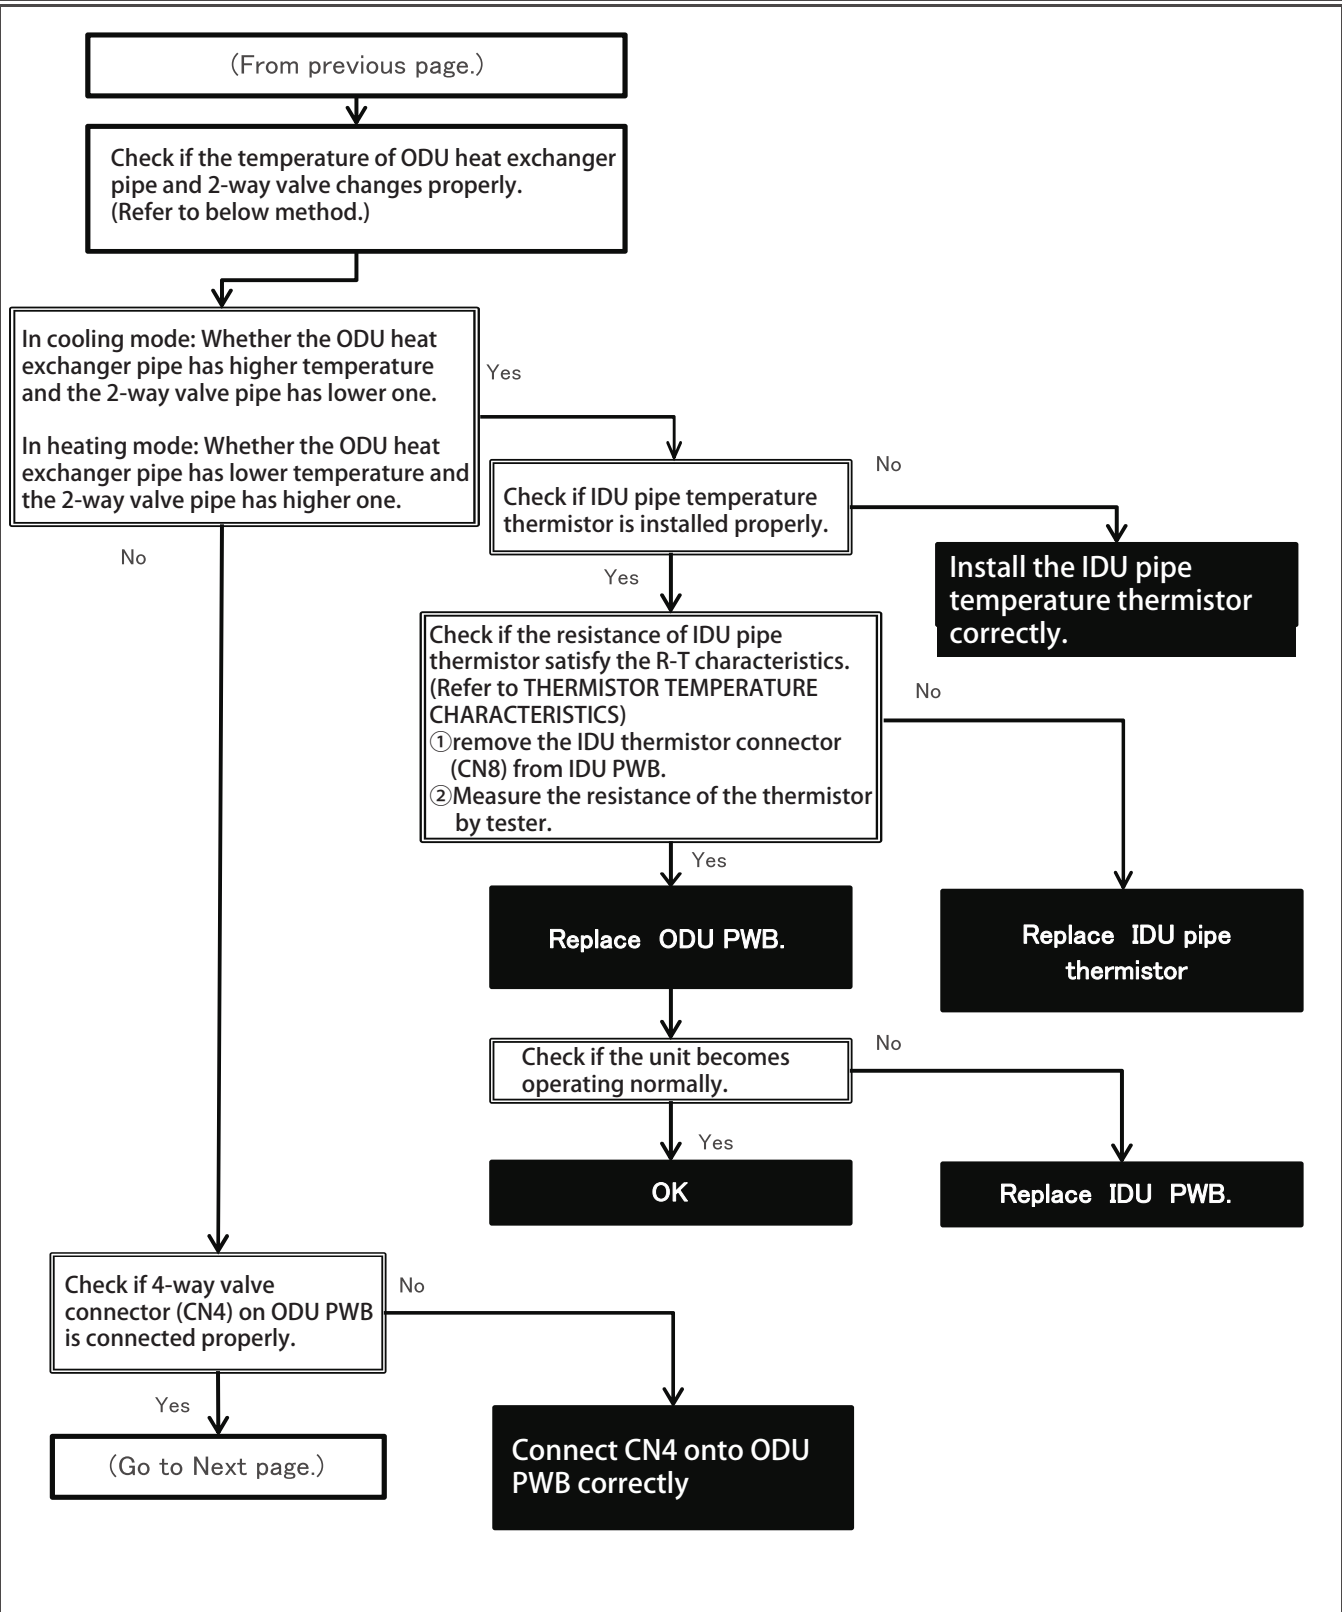


Error Code

9

Cycle error(3/3)


9-0 4-way valve error
9-4 gas leak error

☆ Check the cause due to PWB or another parts.

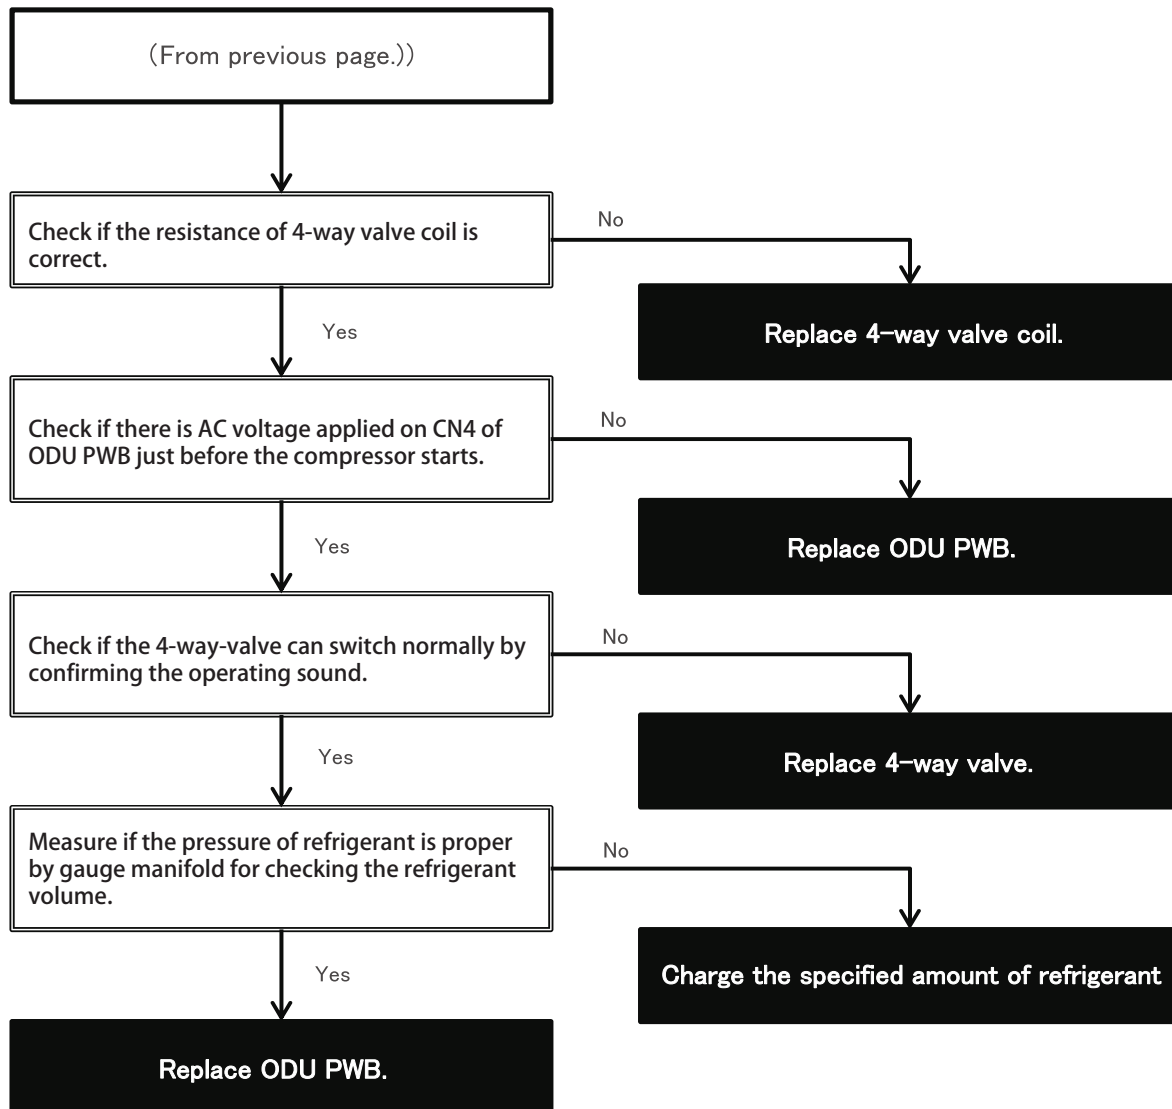

Error Code		11-1 DC fan driver IC error 11-2 DC fan lock error 11-3 Detection error of negative rotation before compressor start 11-4 Detection error of inverter current 11-5 open connector error
11	ODU fan motor error	

☆Check the cause due to PWB or DC fan motor.

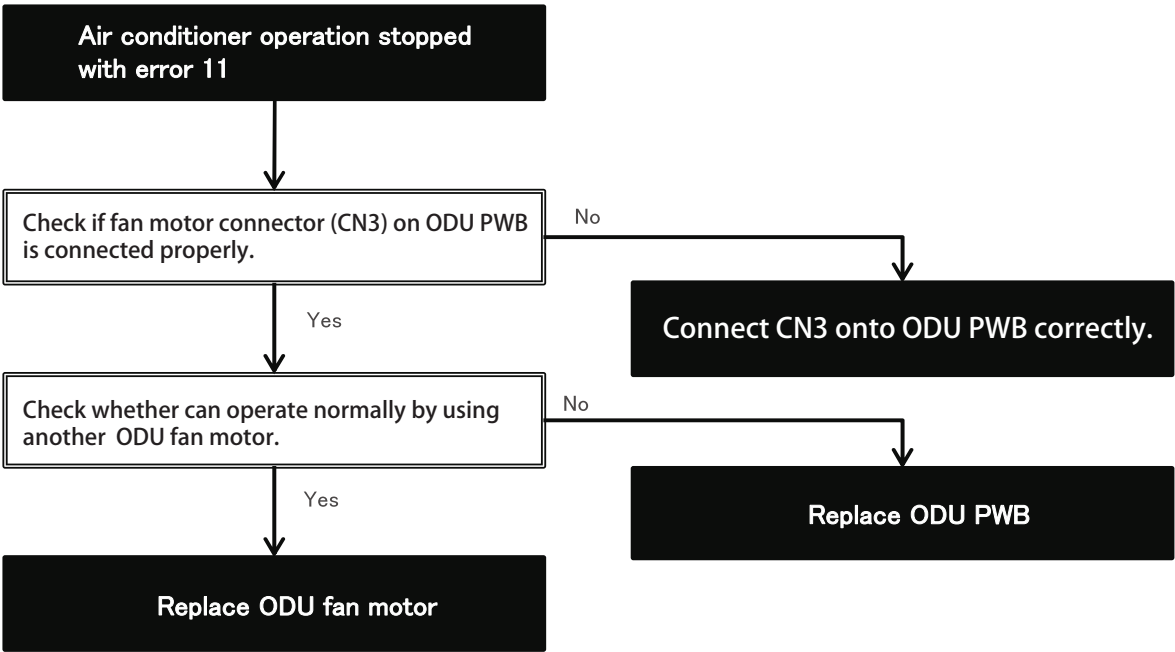


Error Code

13**Compressor rotation error (1/2)**13-0 Compressor startup error
13-2 Compressor rotation error

☆ Check the cause due to compressor.

◇ Main Cause

- Temperature of compressor becomes too high.

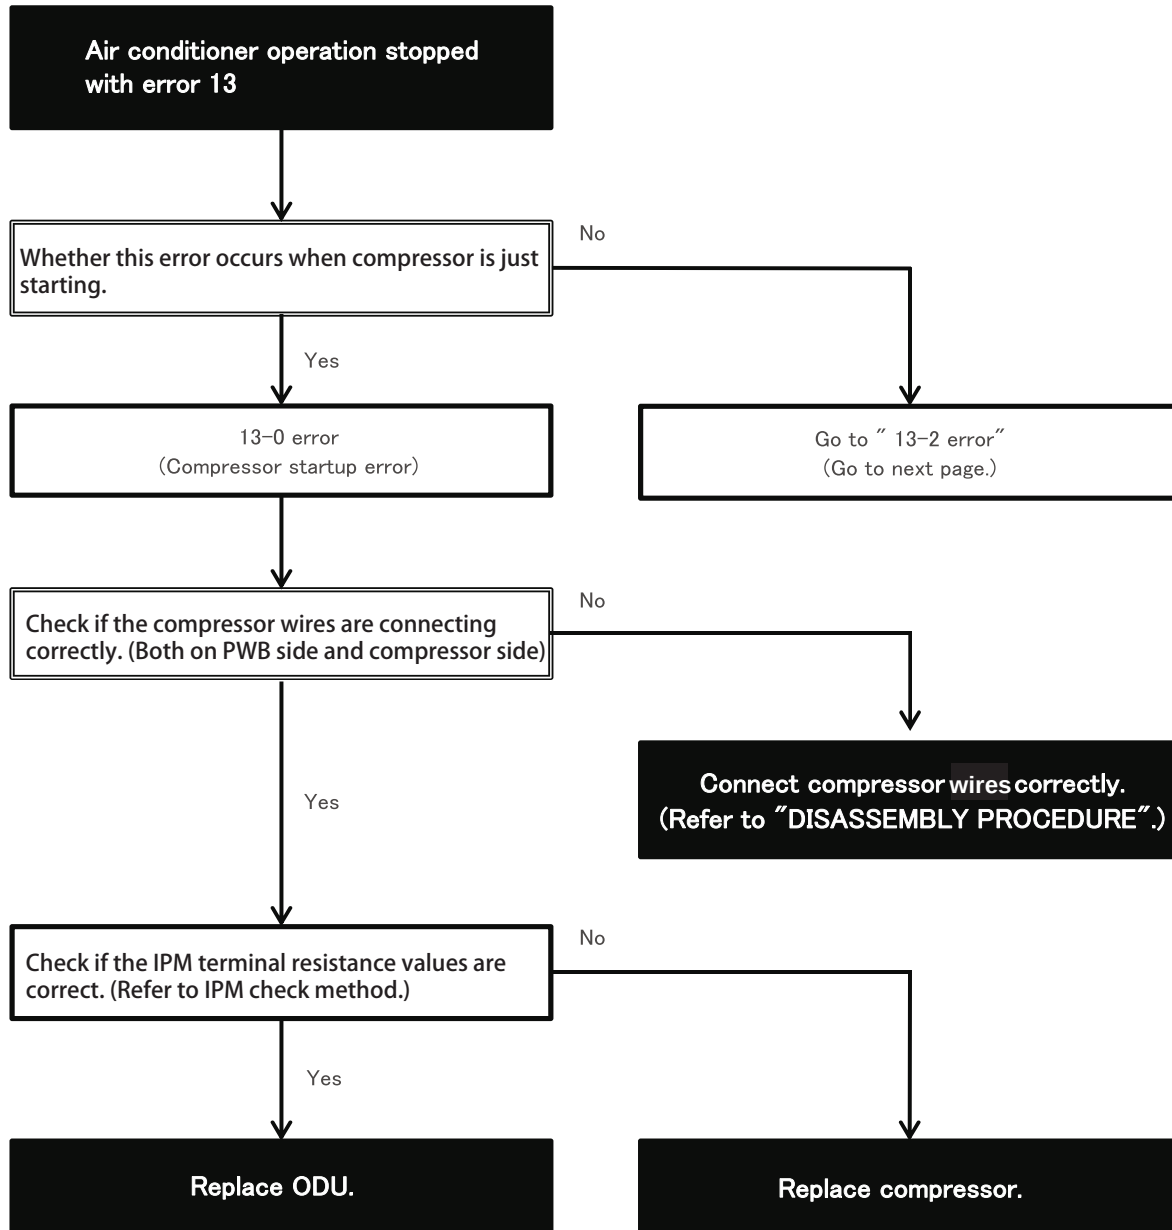

Error Code

13


Compressor rotation error (2/2)

13-0 Compressor startup error
13-2 Compressor rotation error

☆ Check the cause due to compressor.

◇ Main cause

- Temperature of compressor becomes too high.

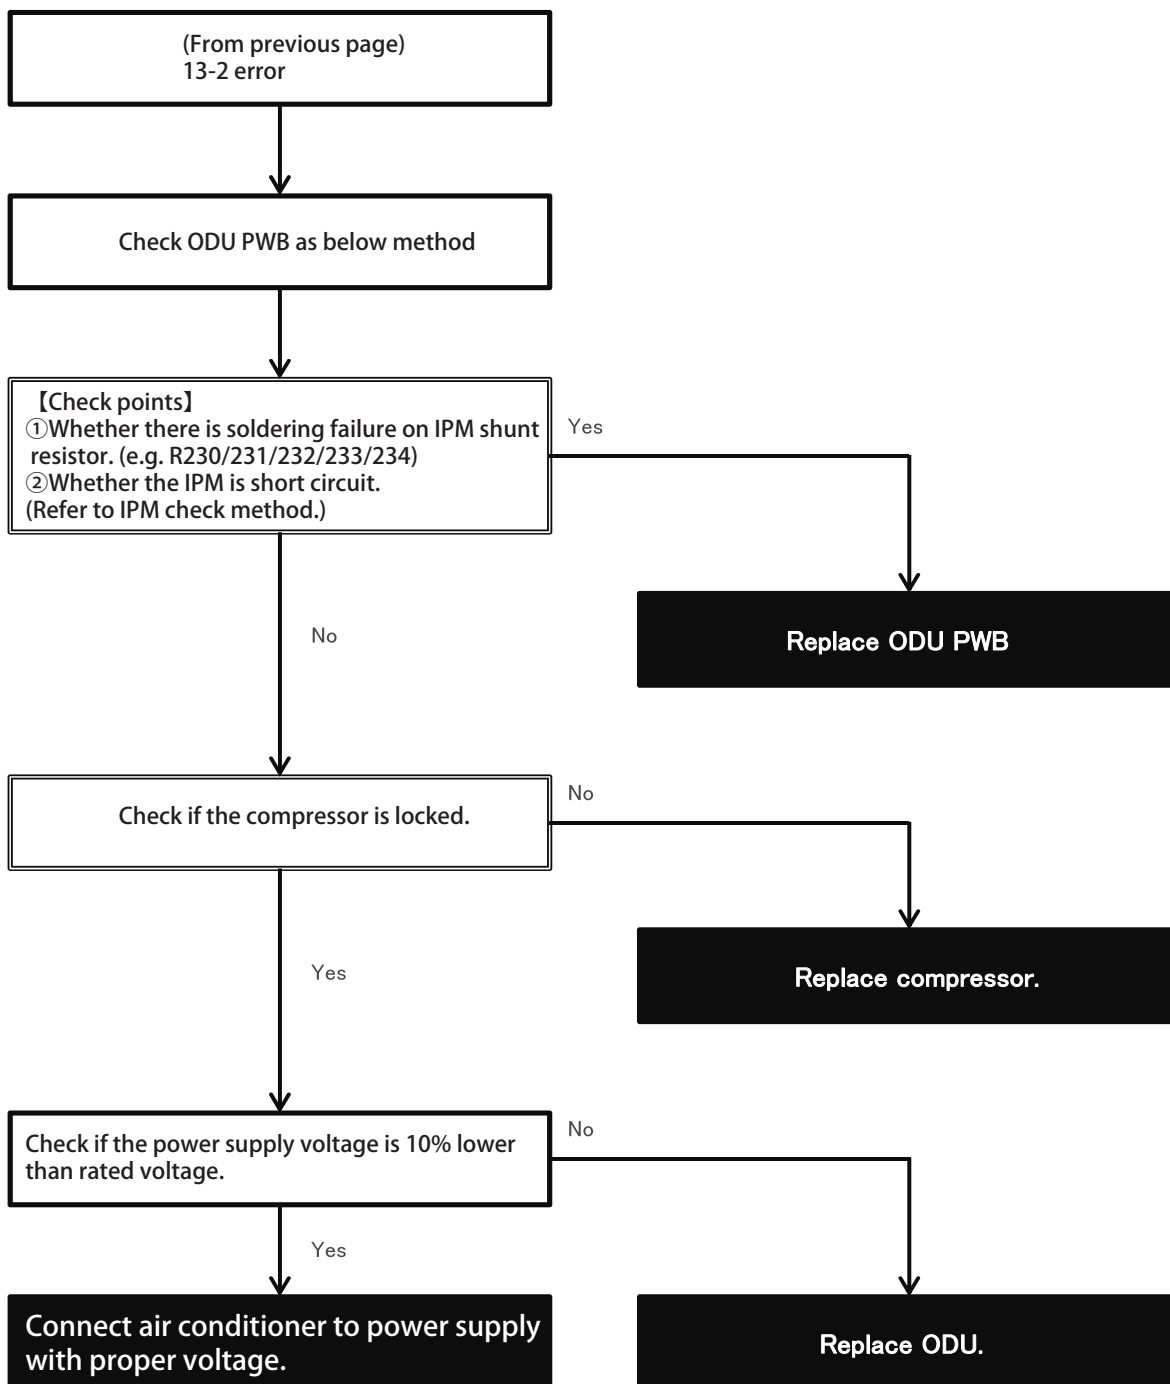


Error Code	PAM error	14-0 PAM over voltage error 14-1 PAM clock error 14-2 Abnormal AC power supply voltage or DC low voltage error
14		

☆ Check AC power supply.

◇ Main cause

- AC power supply voltage is abnormal. (Not within rated voltage $\pm 10\%$)
- Big fluctuation of AC power supply voltage
- Instantaneous voltage drop

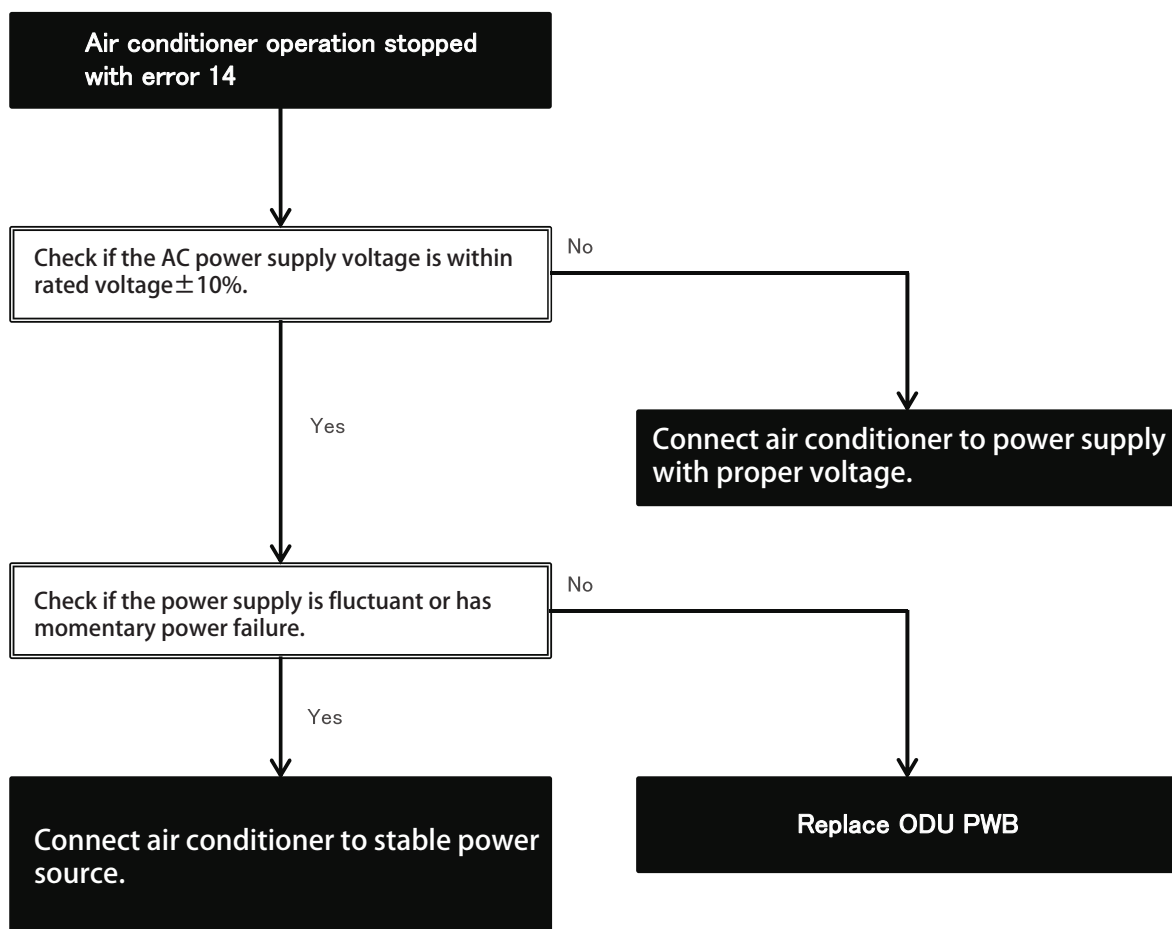

Error Code


17

Serial open error (1/2)

17—0 Serial open error

☆ Determine why serial communication is not possible.


- Defective PWB of IDU (Serial circuit failure, power supply circuit operation failure, etc.)
- Defective PWB of ODU (Serial circuit failure, power supply circuit operation failure, etc.)
- Poor connection of the wiring between the units connecting the IDU and the ODU
- Defective terminal board of IDU / ODU.
- Poor connection of electrical components mounted other than the PWB (outdoor unit reactor, etc.)

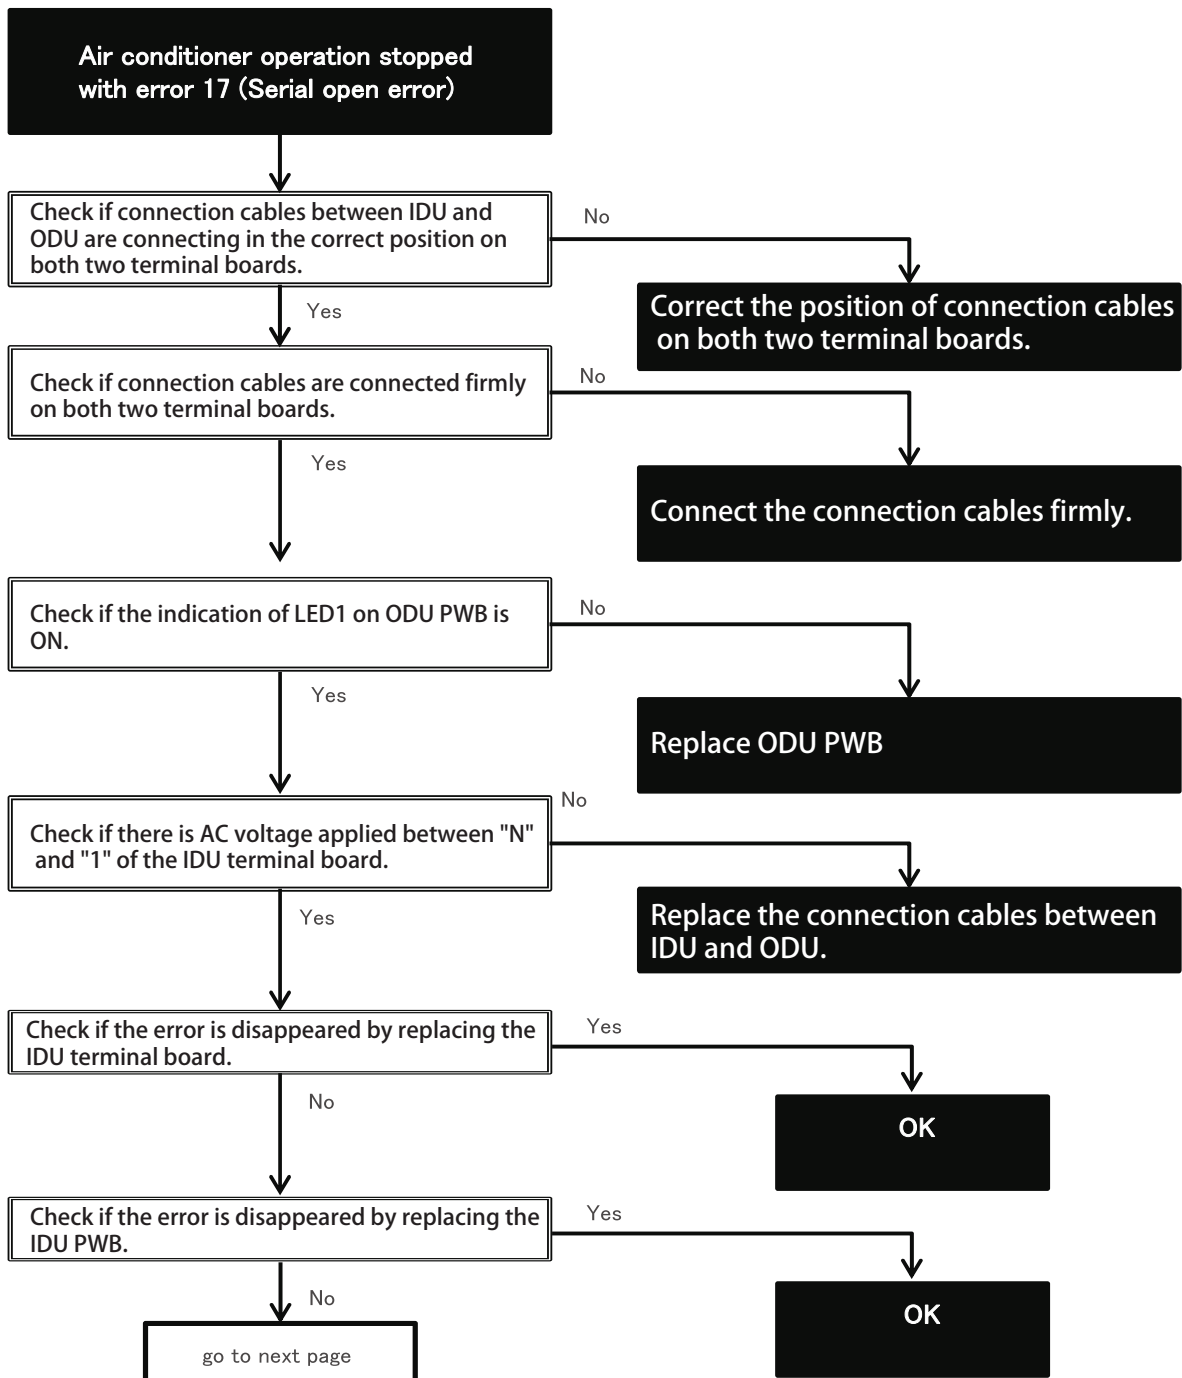

Error Code 17	Serial open error(2/2)	17—0 Serial open error
--------------------------------	-------------------------------	------------------------

☆Determine why serial communication is not possible.

- Defective PWB of IDU (Serial circuit failure, power supply circuit operation failure, etc.)
- Defective PWB of ODU (Serial circuit failure, power supply circuit operation failure, etc.)
- Poor connection of the wiring between the units connecting the IDU and the ODU
- Defective terminal board of IDU / ODU.
- Poor connection of electrical components mounted other than the PWB (outdoor unit reactor, etc.)

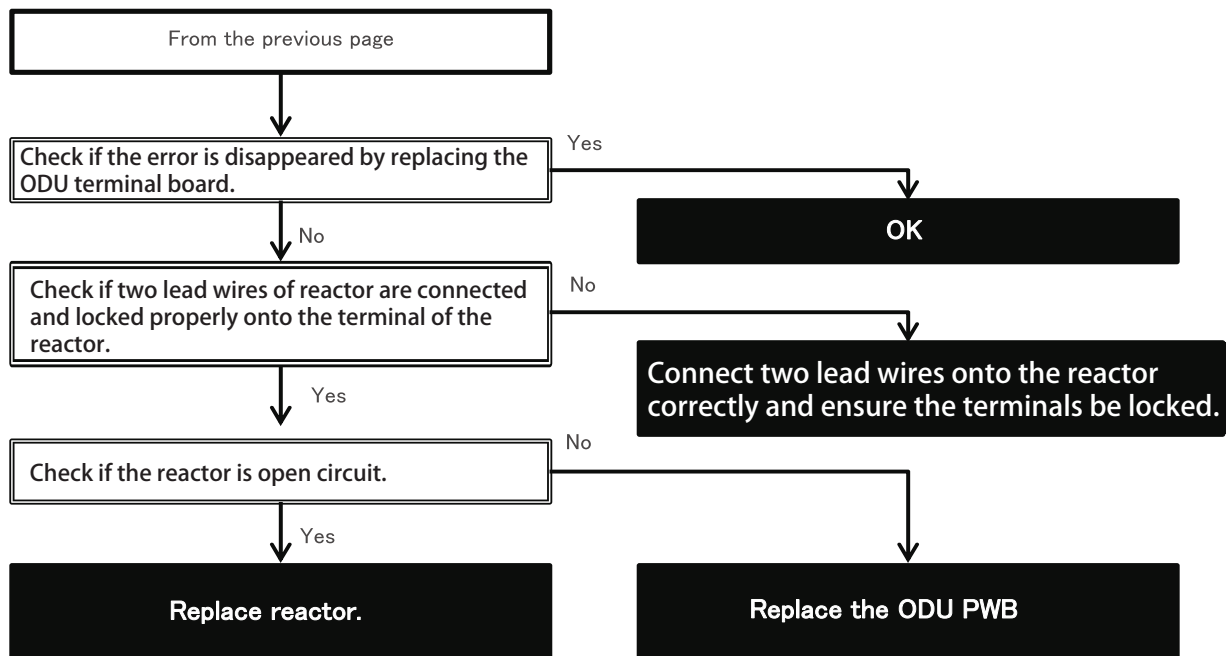


Error Code		
18	Serial short error	18-0 Serial short 18-1 Incorrect wiring

☆ Determine if the units connecting cable is incorrectly inserted
or the control board is defective.


◇ Main causes of serial shorts

- Incorrect insertion of units connecting cable
- Indoor unit serial circuit failure
- Outdoor unit serial circuit failure

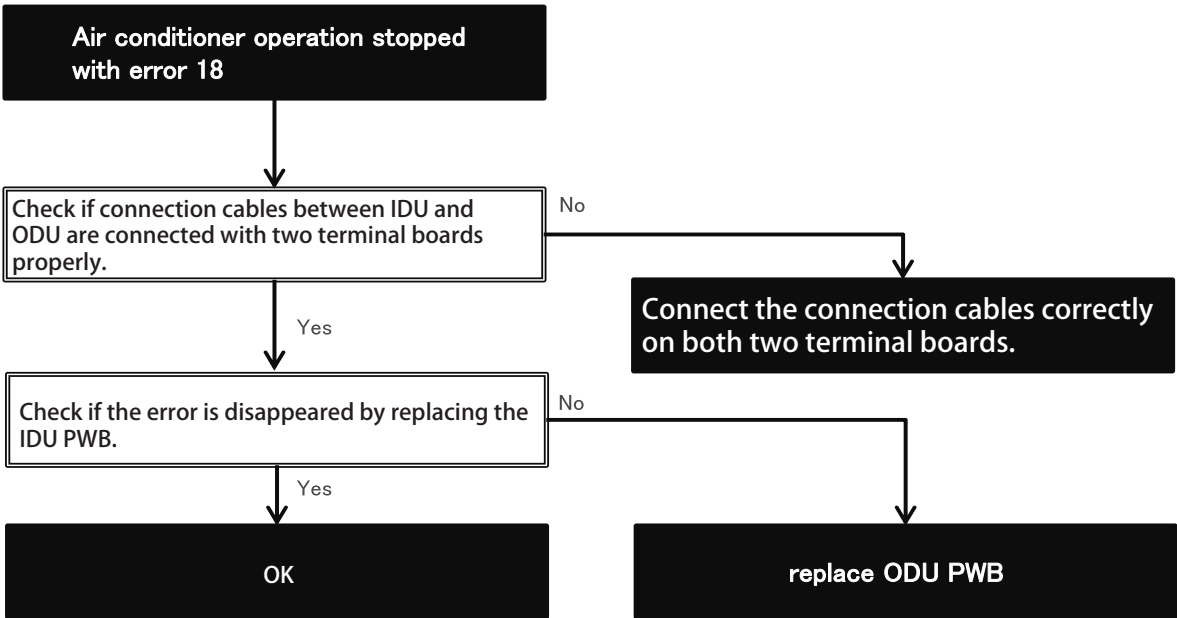


Error Code	Indoor fan error	19—0 Indoor fan error
19		

☆Determine whether the cause is the indoor fan motor or the IDU PWB.

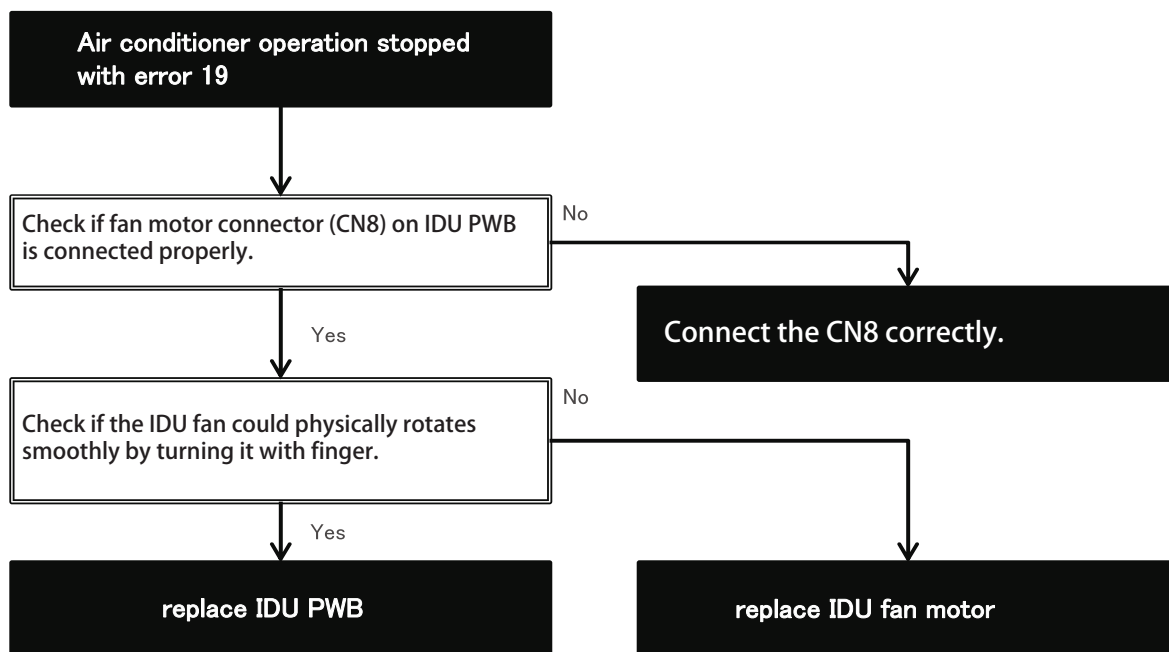

Error Code	WLAN module	
24-0	communication error	


☆Determine whether the cause is a connector or a board
(WLAN module, main board).

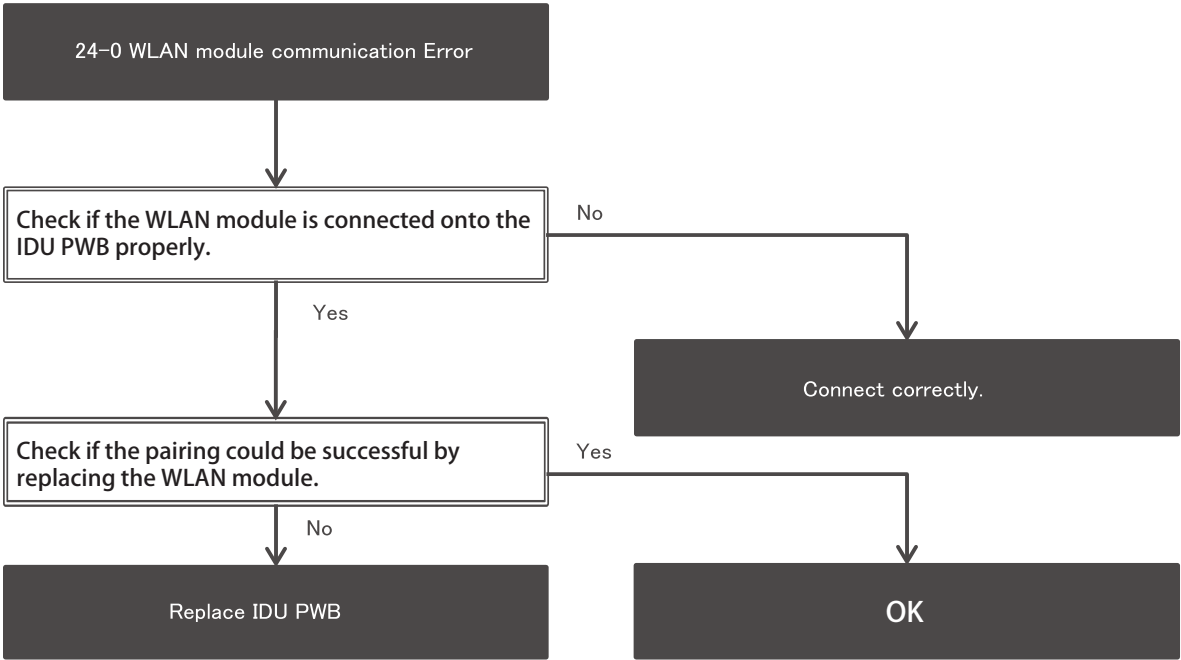

Error Code


24-1**WLAN router connection error**

☆Determine whether the cause is a WLAN module or a WLAN router.

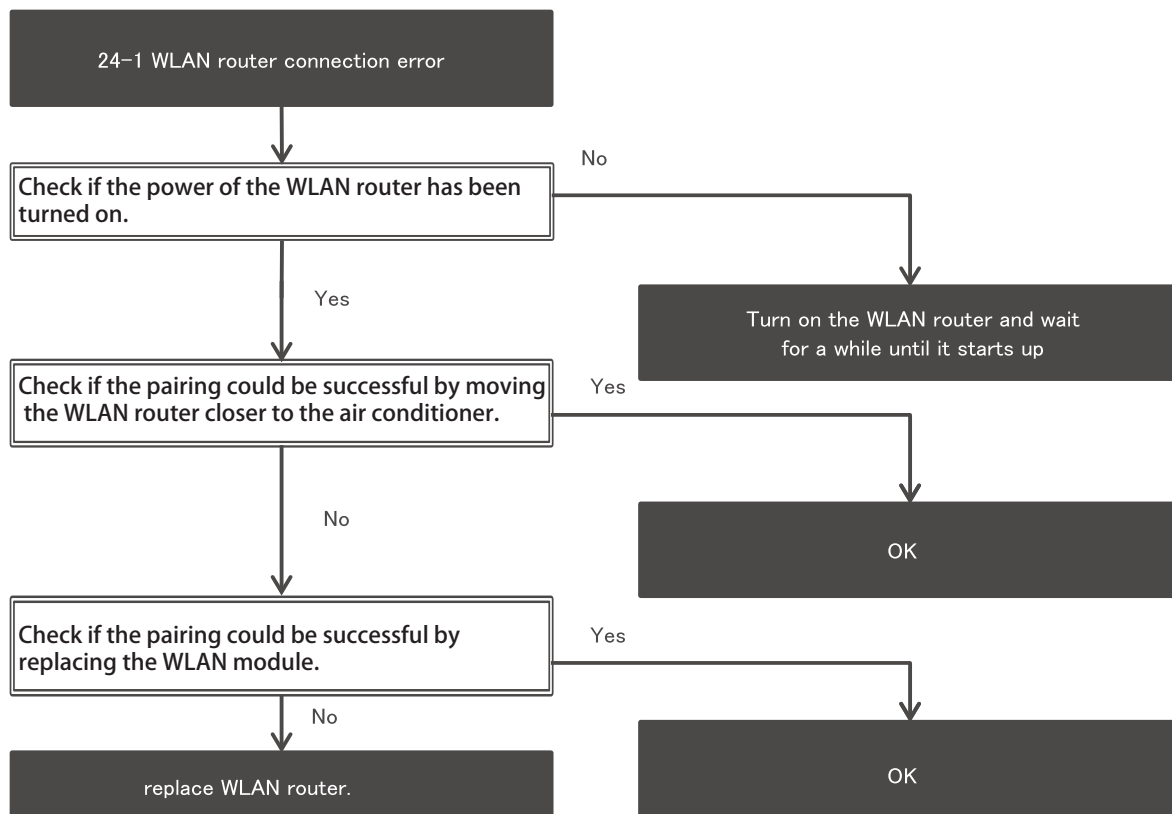


Error Code	Indoor unit room temperature thermistor open short error	26-1 Room temperature thermistor error 26-2 Pipe thermistor error
26-1		

☆Determine whether the cause is room temperature thermistor or IDU PWB.

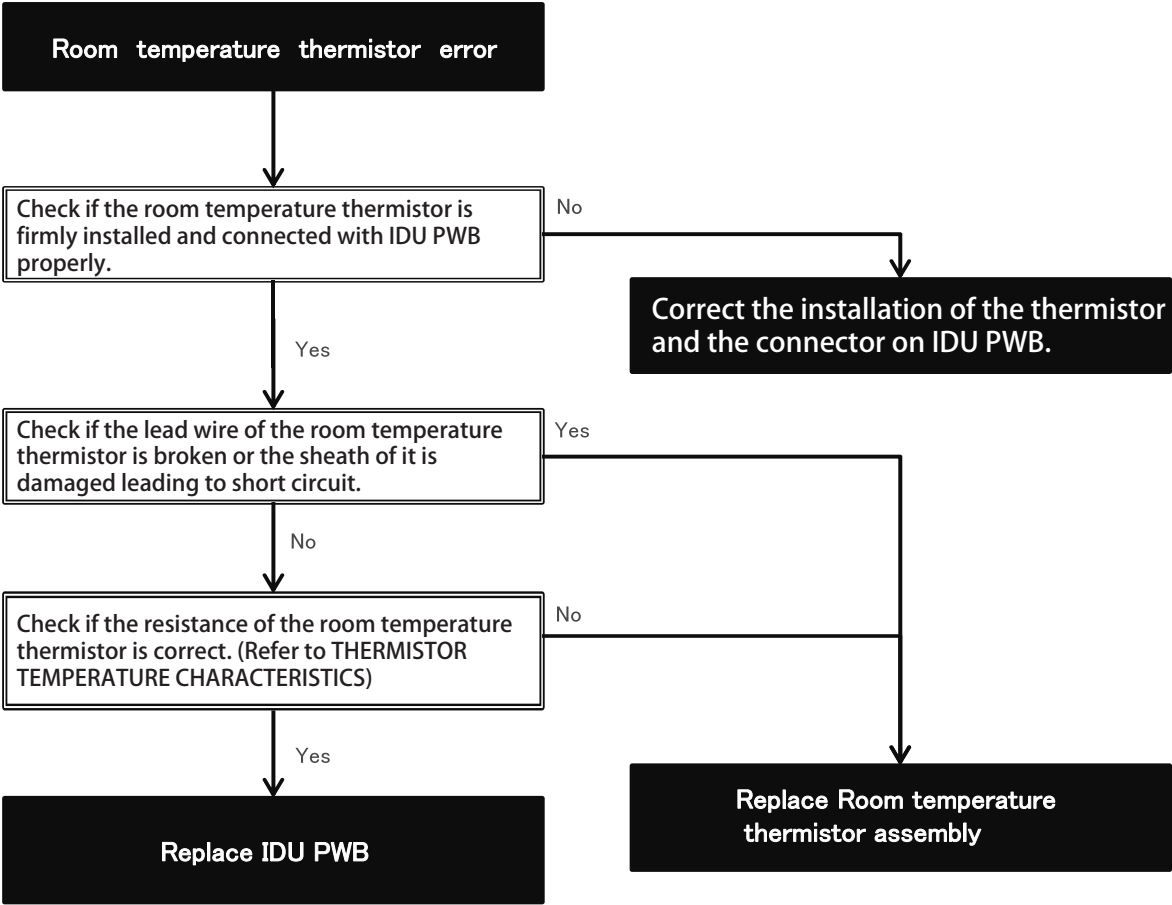

Room temperature thermistor

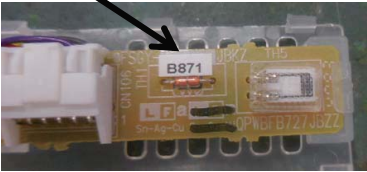


Error Code

26-2

Indoor unit pipe thermistor open short error

26-1 Room temperature thermistor error
26-2 Pipe thermistor error

☆ Determine whether the cause is pipe thermistor or IDU PWB.

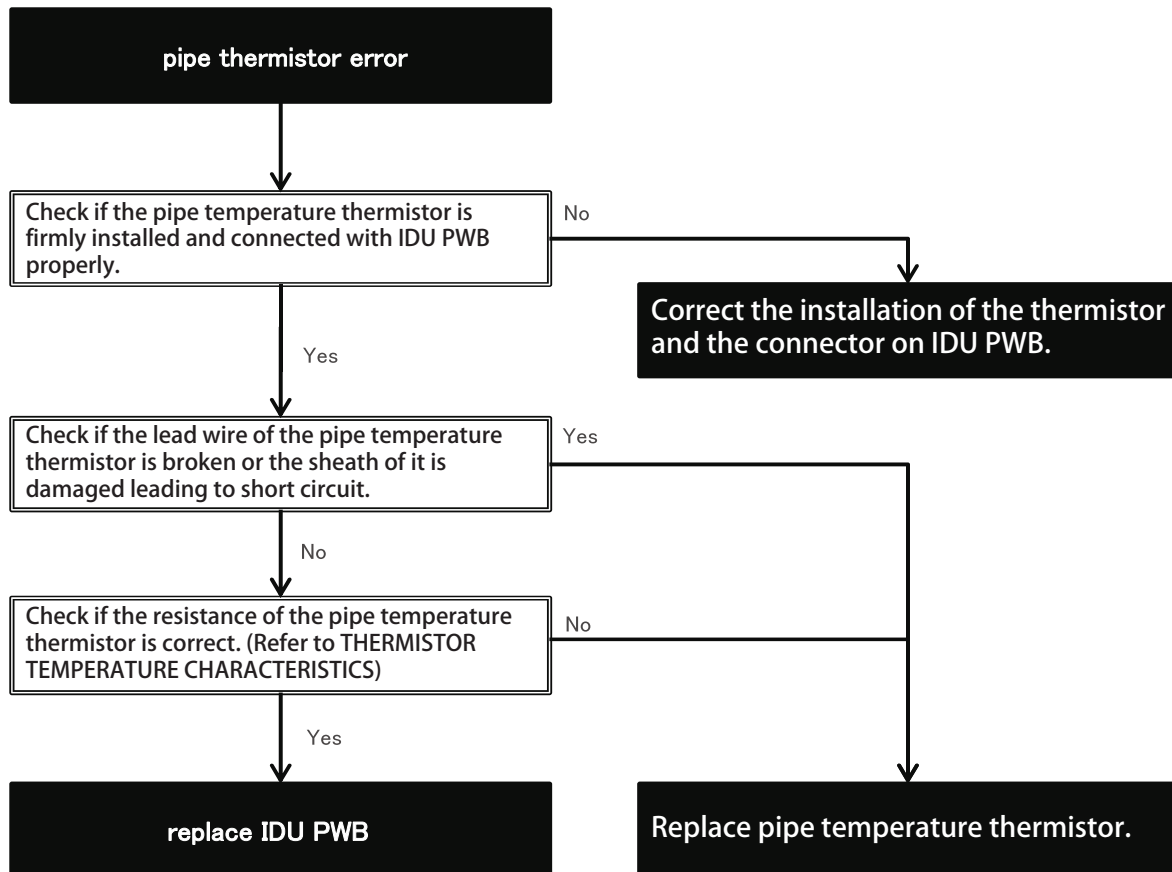

Pipe temperature thermistor